


# u-blox F9 HPG 1.50

**u-blox F9 high precision GNSS receiver**

**Interface description**

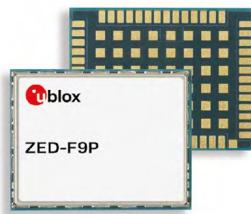

## **Abstract**

This document describes the interface (version 27.50) of the ZED-F9P, a multi-band GNSS module with integrated RTK offering centimeter level accuracy.

## Document information

<b>Title</b>	<b>u-blox F9 HPG 1.50</b>	
<b>Subtitle</b>	u-blox F9 high precision GNSS receiver	
<b>Document type</b>	Interface description	
<b>Document number</b>	UBXDOC-963802114-12815	
<b>Revision and date</b>	R01	01-Jul-2024
<b>Disclosure restriction</b>	C1-Public	

u-blox or third parties may hold intellectual property rights in the products, names, logos and designs included in this document. Copying, reproduction, or modification of this document or any part thereof is only permitted with the express written permission of u-blox. Disclosure to third parties is permitted for clearly public documents only.

The information contained herein is provided "as is" and u-blox assumes no liability for its use. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time without notice. For the most recent documents, visit [www.u-blox.com](http://www.u-blox.com).

Copyright © 2024, u-blox AG.

# Contents

<b>1 General information.....</b>	<b>15</b>
1.1 Document overview.....	15
1.2 Firmware and protocol versions.....	15
1.3 Receiver configuration.....	17
1.4 Message naming.....	17
1.5 GNSS, satellite, and signal identifiers.....	18
1.5.1 Overview.....	18
1.5.2 GNSS identifiers.....	18
1.5.3 Satellite identifiers.....	19
1.5.4 Signal identifiers.....	19
1.6 Message types.....	20
<b>2 NMEA protocol.....</b>	<b>22</b>
2.1 NMEA frame structure.....	22
2.2 NMEA protocol configuration.....	22
2.3 NMEA-proprietary messages.....	23
2.4 NMEA multi-GNSS operation.....	24
2.5 NMEA data fields.....	24
2.5.1 NMEA Talker ID.....	24
2.5.2 NMEA extra fields.....	25
2.5.3 NMEA latitude and longitude format.....	25
2.5.4 NMEA GNSS, satellite, and signal numbering.....	25
2.5.5 NMEA position fix flags.....	25
2.5.6 NMEA output of invalid or unknown data.....	26
2.6 NMEA messages overview.....	27
2.7 Standard messages.....	28
2.7.1 DTM.....	28
2.7.1.1 Datum reference.....	28
2.7.2 GAQ.....	28
2.7.2.1 Poll a standard message (Talker ID GA).....	28
2.7.3 GBQ.....	29
2.7.3.1 Poll a standard message (Talker ID GB).....	29
2.7.4 GBS.....	29
2.7.4.1 GNSS satellite fault detection.....	29
2.7.5 GGA.....	30
2.7.5.1 Global positioning system fix data.....	30
2.7.6 GLL.....	31
2.7.6.1 Latitude and longitude, with time of position fix and status.....	31
2.7.7 GLQ.....	31
2.7.7.1 Poll a standard message (Talker ID GL).....	32
2.7.8 GNQ.....	32
2.7.8.1 Poll a standard message (Talker ID GN).....	32
2.7.9 GNS.....	32
2.7.9.1 GNSS fix data.....	32
2.7.10 GPQ.....	33
2.7.10.1 Poll a standard message (Talker ID GP).....	33

2.7.11 GQQ.....	34
2.7.11.1 Poll a standard message (Talker ID GQ).....	34
2.7.12 GRS.....	34
2.7.12.1 GNSS range residuals.....	34
2.7.13 GSA.....	35
2.7.13.1 GNSS DOP and active satellites.....	35
2.7.14 GST.....	35
2.7.14.1 GNSS pseudorange error statistics.....	36
2.7.15 GSV.....	36
2.7.15.1 GNSS satellites in view.....	36
2.7.16 RLM.....	37
2.7.16.1 Return link message (RLM).....	37
2.7.17 RMC.....	38
2.7.17.1 Recommended minimum data.....	38
2.7.18 TXT.....	38
2.7.18.1 Text transmission.....	39
2.7.19 VLW.....	39
2.7.19.1 Dual ground/water distance.....	39
2.7.20 VTG.....	40
2.7.20.1 Course over ground and ground speed.....	40
2.7.21 ZDA.....	40
2.7.21.1 Time and date.....	41
2.8 Secondary output messages.....	41
2.8.1 GGA.....	41
2.8.1.1 Global positioning system fix data.....	41
2.8.2 GLL.....	42
2.8.2.1 Latitude and longitude, with time of position fix and status.....	42
2.8.3 GNS.....	43
2.8.3.1 GNSS fix data.....	43
2.8.4 GSA.....	44
2.8.4.1 GNSS DOP and active satellites.....	44
2.8.5 RMC.....	45
2.8.5.1 Recommended minimum data.....	45
2.8.6 VTG.....	46
2.8.6.1 Course over ground and ground speed.....	46
2.8.7 ZDA.....	47
2.8.7.1 Time and date.....	47
2.9 PUBX messages.....	48
2.9.1 CONFIG (PUBX,41).....	48
2.9.1.1 Set protocols and baud rate.....	48
2.9.2 POSITION (PUBX,00).....	48
2.9.2.1 Poll a PUBX,00 message.....	48
2.9.2.2 Lat/Long position data.....	49
2.9.3 RATE (PUBX,40).....	50
2.9.3.1 Set NMEA message output rate.....	50
2.9.4 SVSTATUS (PUBX,03).....	50
2.9.4.1 Poll a PUBX,03 message.....	51
2.9.4.2 Satellite status.....	51
2.9.5 TIME (PUBX,04).....	52
2.9.5.1 Poll a PUBX,04 message.....	52

2.9.5.2 Time of day and clock information.....	52
<b>3 UBX protocol.....</b>	<b>54</b>
3.1 UBX protocol key features.....	54
3.2 UBX frame structure.....	54
3.3 UBX payload definition rules.....	55
3.3.1 UBX structure packing.....	55
3.3.2 UBX reserved elements.....	55
3.3.3 UBX undefined values.....	55
3.3.4 UBX conditional values.....	55
3.3.5 UBX data types.....	55
3.3.6 UBX fields scale and unit.....	56
3.3.7 UBX repeated fields.....	56
3.3.8 UBX payload decoding.....	57
3.4 UBX checksum.....	57
3.5 UBX message flow.....	57
3.5.1 UBX acknowledgement.....	57
3.5.2 UBX polling mechanism.....	57
3.6 GNSS, satellite, and signal numbering.....	58
3.7 UBX message example.....	58
3.8 UBX messages overview.....	59
3.9 UBX-ACK (0x05).....	63
3.9.1 UBX-ACK-ACK (0x05 0x01).....	63
3.9.1.1 Message acknowledged.....	63
3.9.2 UBX-ACK-NAK (0x05 0x00).....	64
3.9.2.1 Message not acknowledged.....	64
3.10 UBX-CFG (0x06).....	64
3.10.1 UBX-CFG-ANT (0x06 0x13).....	64
3.10.1.1 Antenna control settings.....	64
3.10.2 UBX-CFG-CFG (0x06 0x09).....	65
3.10.2.1 Clear, save and load configurations.....	65
3.10.3 UBX-CFG-DAT (0x06 0x06).....	66
3.10.3.1 Set user-defined datum.....	66
3.10.3.2 Get currently defined datum.....	67
3.10.4 UBX-CFG-DGNSS (0x06 0x70).....	67
3.10.4.1 DGNSS configuration.....	67
3.10.5 UBX-CFG-GEOFENCE (0x06 0x69).....	68
3.10.5.1 Geofencing configuration.....	68
3.10.6 UBX-CFG-GNSS (0x06 0x3e).....	69
3.10.6.1 GNSS system configuration.....	69
3.10.7 UBX-CFG-INF (0x06 0x02).....	70
3.10.7.1 Poll configuration for one protocol.....	70
3.10.7.2 Information message configuration.....	71
3.10.8 UBX-CFG-LOGFILTER (0x06 0x47).....	71
3.10.8.1 Data logger configuration.....	72
3.10.9 UBX-CFG-MSG (0x06 0x01).....	72
3.10.9.1 Poll a message configuration.....	72
3.10.9.2 Set message rate(s).....	73
3.10.9.3 Set message rate.....	73
3.10.10 UBX-CFG-NAV5 (0x06 0x24).....	73
3.10.10.1 Navigation engine settings.....	74

3.10.11 UBX-CFG-NAVX5 (0x06 0x23).....	75
3.10.11.1 Navigation engine expert settings.....	76
3.10.12 UBX-CFG-NMEA (0x06 0x17).....	77
3.10.12.1 Extended NMEA protocol configuration V1.....	77
3.10.13 UBX-CFG-ODO (0x06 0x1e).....	79
3.10.13.1 Odometer, low-speed COG engine settings.....	79
3.10.14 UBX-CFG-PRT (0x06 0x00).....	80
3.10.14.1 Polls the configuration for one I/O port.....	80
3.10.14.2 Port configuration for UART ports.....	80
3.10.14.3 Port configuration for USB port.....	82
3.10.14.4 Port configuration for SPI port.....	83
3.10.14.5 Port configuration for I2C (DDC) port.....	85
3.10.15 UBX-CFG-PWR (0x06 0x57).....	86
3.10.15.1 Put receiver in a defined power state.....	86
3.10.16 UBX-CFG-RATE (0x06 0x08).....	86
3.10.16.1 Navigation/measurement rate settings.....	86
3.10.17 UBX-CFG-RINV (0x06 0x34).....	87
3.10.17.1 Contents of remote inventory.....	87
3.10.18 UBX-CFG-RST (0x06 0x04).....	88
3.10.18.1 Reset receiver / Clear backup data structures.....	88
3.10.19 UBX-CFG-SBAS (0x06 0x16).....	89
3.10.19.1 SBAS configuration.....	89
3.10.20 UBX-CFG-TMODE3 (0x06 0x71).....	91
3.10.20.1 Time mode settings 3.....	91
3.10.21 UBX-CFG-TP5 (0x06 0x31).....	92
3.10.21.1 Time pulse parameters.....	92
3.10.22 UBX-CFG-USB (0x06 0x1b).....	94
3.10.22.1 USB configuration.....	94
3.10.23 UBX-CFG-VALDEL (0x06 0x8c).....	95
3.10.23.1 Delete configuration item values.....	95
3.10.23.2 Delete configuration item values (with transaction).....	96
3.10.24 UBX-CFG-VALGET (0x06 0x8b).....	97
3.10.24.1 Get configuration items.....	97
3.10.24.2 Configuration items.....	98
3.10.25 UBX-CFG-VALSET (0x06 0x8a).....	98
3.10.25.1 Set configuration item values.....	98
3.10.25.2 Set configuration item values (with transaction).....	99
3.11 UBX-INF (0x04).....	100
3.11.1 UBX-INF-DEBUG (0x04 0x04).....	100
3.11.1.1 ASCII output with debug contents.....	101
3.11.2 UBX-INF-ERROR (0x04 0x00).....	101
3.11.2.1 ASCII output with error contents.....	101
3.11.3 UBX-INF-NOTICE (0x04 0x02).....	101
3.11.3.1 ASCII output with informational contents.....	101
3.11.4 UBX-INF-TEST (0x04 0x03).....	101
3.11.4.1 ASCII output with test contents.....	102
3.11.5 UBX-INF-WARNING (0x04 0x01).....	102
3.11.5.1 ASCII output with warning contents.....	102
3.12 UBX-LOG (0x21).....	102
3.12.1 UBX-LOG-CREATE (0x21 0x07).....	102

3.12.1.1 Create log file.....	102
3.12.2 UBX-LOG-ERASE (0x21 0x03).....	103
3.12.2.1 Erase logged data.....	103
3.12.3 UBX-LOG-FINDTIME (0x21 0x0e).....	103
3.12.3.1 Find index of a log entry based on a given time.....	103
3.12.3.2 Response to FINDTIME request.....	104
3.12.4 UBX-LOG-INFO (0x21 0x08).....	104
3.12.4.1 Poll for log information.....	104
3.12.4.2 Log information.....	104
3.12.5 UBX-LOG-RETRIEVE (0x21 0x09).....	105
3.12.5.1 Request log data.....	106
3.12.6 UBX-LOG-RETRIEVEPOS (0x21 0x0b).....	106
3.12.6.1 Position fix log entry.....	106
3.12.7 UBX-LOG-RETRIEVEPOSEXTRA (0x21 0x0f).....	107
3.12.7.1 Odometer log entry.....	107
3.12.8 UBX-LOG-RETRIEVESTRING (0x21 0x0d).....	107
3.12.8.1 Byte string log entry.....	108
3.12.9 UBX-LOG-STRING (0x21 0x04).....	108
3.12.9.1 Store arbitrary string in on-board flash.....	108
3.13 UBX-MGA (0x13).....	109
3.13.1 UBX-MGA-ACK (0x13 0x60).....	109
3.13.1.1 Multiple GNSS acknowledge message.....	109
3.13.2 UBX-MGA-BDS (0x13 0x03).....	109
3.13.2.1 BeiDou ephemeris assistance for satellites svld 1..37.....	109
3.13.2.2 BeiDou almanac assistance.....	111
3.13.2.3 BeiDou health assistance.....	111
3.13.2.4 BeiDou UTC assistance.....	112
3.13.2.5 BeiDou ionosphere assistance.....	112
3.13.3 UBX-MGA-DBD (0x13 0x80).....	113
3.13.3.1 Poll the navigation database.....	113
3.13.3.2 Navigation database dump entry.....	113
3.13.4 UBX-MGA-GAL (0x13 0x02).....	113
3.13.4.1 Galileo ephemeris assistance.....	114
3.13.4.2 Galileo almanac assistance.....	115
3.13.4.3 Galileo GPS time offset assistance.....	116
3.13.4.4 Galileo UTC assistance.....	116
3.13.5 UBX-MGA-GLO (0x13 0x06).....	117
3.13.5.1 GLONASS ephemeris assistance.....	117
3.13.5.2 GLONASS almanac assistance.....	118
3.13.5.3 GLONASS auxiliary time offset assistance.....	118
3.13.6 UBX-MGA-GPS (0x13 0x00).....	119
3.13.6.1 GPS ephemeris assistance.....	119
3.13.6.2 GPS almanac assistance.....	120
3.13.6.3 GPS health assistance.....	121
3.13.6.4 GPS UTC assistance.....	121
3.13.6.5 GPS ionosphere assistance.....	122
3.13.7 UBX-MGA-INI (0x13 0x40).....	122
3.13.7.1 Initial position assistance.....	122
3.13.7.2 Initial position assistance.....	123
3.13.7.3 Initial time assistance.....	123

3.13.7.4 Initial time assistance.....	124
3.13.7.5 Initial clock drift assistance.....	125
3.13.7.6 Initial frequency assistance.....	126
3.13.8 UBX-MGA-QZSS (0x13 0x05).....	126
3.13.8.1 QZSS ephemeris assistance.....	126
3.13.8.2 QZSS almanac assistance.....	127
3.13.8.3 QZSS health assistance.....	128
3.14 UBX-MON (0x0a).....	129
3.14.1 UBX-MON-COMMS (0x0a 0x36).....	129
3.14.1.1 Communication port information.....	129
3.14.2 UBX-MON-GNSS (0x0a 0x28).....	130
3.14.2.1 Information message major GNSS selection.....	130
3.14.3 UBX-MON-HW (0x0a 0x09).....	131
3.14.3.1 Hardware status.....	131
3.14.4 UBX-MON-HW2 (0x0a 0x0b).....	132
3.14.4.1 Extended hardware status.....	132
3.14.5 UBX-MON-HW3 (0x0a 0x37).....	132
3.14.5.1 I/O pin status.....	133
3.14.6 UBX-MON-IO (0x0a 0x02).....	133
3.14.6.1 I/O system status.....	134
3.14.7 UBX-MON-MSGPP (0x0a 0x06).....	134
3.14.7.1 Message parse and process status.....	134
3.14.8 UBX-MON-PATCH (0x0a 0x27).....	135
3.14.8.1 Installed patches.....	135
3.14.9 UBX-MON-RF (0x0a 0x38).....	135
3.14.9.1 RF information.....	135
3.14.10 UBX-MON-RXBUF (0x0a 0x07).....	136
3.14.10.1 Receiver buffer status.....	136
3.14.11 UBX-MON-RXR (0x0a 0x21).....	137
3.14.11.1 Receiver status information.....	137
3.14.12 UBX-MON-SPAN (0x0a 0x31).....	137
3.14.12.1 Signal characteristics.....	137
3.14.13 UBX-MON-SYS (0x0a 0x39).....	138
3.14.13.1 Current system performance information.....	138
3.14.14 UBX-MON-TXBUF (0x0a 0x08).....	139
3.14.14.1 Transmitter buffer status.....	139
3.14.15 UBX-MON-VER (0x0a 0x04).....	139
3.14.15.1 Poll receiver and software version.....	139
3.14.15.2 Receiver and software version.....	139
3.15 UBX-NAV (0x01).....	140
3.15.1 UBX-NAV-CLOCK (0x01 0x22).....	140
3.15.1.1 Clock solution.....	140
3.15.2 UBX-NAV-COV (0x01 0x36).....	140
3.15.2.1 Covariance matrices.....	141
3.15.3 UBX-NAV-DOP (0x01 0x04).....	141
3.15.3.1 Dilution of precision.....	141
3.15.4 UBX-NAV-EOE (0x01 0x61).....	142
3.15.4.1 End of epoch.....	142
3.15.5 UBX-NAV-GEOFENCE (0x01 0x39).....	142
3.15.5.1 Geofencing status.....	142

3.15.6 UBX-NAV-HPOSECEF (0x01 0x13).....	143
3.15.6.1 High precision position solution in ECEF.....	143
3.15.7 UBX-NAV-HPOSLH (0x01 0x14).....	143
3.15.7.1 High precision geodetic position solution.....	144
3.15.8 UBX-NAV-ODO (0x01 0x09).....	144
3.15.8.1 Odometer solution.....	144
3.15.9 UBX-NAV-ORB (0x01 0x34).....	145
3.15.9.1 GNSS orbit database info.....	145
3.15.10 UBX-NAV-PL (0x01 0x62).....	146
3.15.10.1 Protection level information.....	147
3.15.11 UBX-NAV-POSECEF (0x01 0x01).....	148
3.15.11.1 Position solution in ECEF.....	148
3.15.12 UBX-NAV-POSLLH (0x01 0x02).....	149
3.15.12.1 Geodetic position solution.....	149
3.15.13 UBX-NAV-PVT (0x01 0x07).....	149
3.15.13.1 Navigation position velocity time solution.....	149
3.15.14 UBX-NAV-RELPOSNED (0x01 0x3c).....	152
3.15.14.1 Relative positioning information in NED frame.....	152
3.15.15 UBX-NAV-RESETODO (0x01 0x10).....	154
3.15.15.1 Reset odometer.....	154
3.15.16 UBX-NAV-SAT (0x01 0x35).....	154
3.15.16.1 Satellite information.....	154
3.15.17 UBX-NAV-SBAS (0x01 0x32).....	156
3.15.17.1 SBAS status data.....	156
3.15.18 UBX-NAV-SIG (0x01 0x43).....	157
3.15.18.1 Signal information.....	157
3.15.19 UBX-NAV-SLAS (0x01 0x42).....	159
3.15.19.1 QZSS L1S SLAS status data.....	159
3.15.20 UBX-NAV-STATUS (0x01 0x03).....	160
3.15.20.1 Receiver navigation status.....	160
3.15.21 UBX-NAV-SVIN (0x01 0x3b).....	161
3.15.21.1 Survey-in data.....	161
3.15.22 UBX-NAV-TIMEBDS (0x01 0x24).....	162
3.15.22.1 BeiDou time solution.....	162
3.15.23 UBX-NAV-TIMEGAL (0x01 0x25).....	163
3.15.23.1 Galileo time solution.....	163
3.15.24 UBX-NAV-TIMEGLO (0x01 0x23).....	163
3.15.24.1 GLONASS time solution.....	163
3.15.25 UBX-NAV-TIMEGPS (0x01 0x20).....	164
3.15.25.1 GPS time solution.....	164
3.15.26 UBX-NAV-TIMELS (0x01 0x26).....	165
3.15.26.1 Leap second event information.....	165
3.15.27 UBX-NAV-TIMEQZSS (0x01 0x27).....	166
3.15.27.1 QZSS time solution.....	166
3.15.28 UBX-NAV-TIMEUTC (0x01 0x21).....	167
3.15.28.1 UTC time solution.....	167
3.15.29 UBX-NAV-VELECEF (0x01 0x11).....	168
3.15.29.1 Velocity solution in ECEF.....	168
3.15.30 UBX-NAV-VELNED (0x01 0x12).....	168
3.15.30.1 Velocity solution in NED frame.....	168

3.16 UBX-NAV2 (0x29).....	169
3.16.1 UBX-NAV2-CLOCK (0x29 0x22).....	169
3.16.1.1 Clock solution.....	169
3.16.2 UBX-NAV2-COV (0x29 0x36).....	169
3.16.2.1 Covariance matrices.....	169
3.16.3 UBX-NAV2-DOP (0x29 0x04).....	170
3.16.3.1 Dilution of precision.....	170
3.16.4 UBX-NAV2-EOE (0x29 0x61).....	171
3.16.4.1 End of epoch.....	171
3.16.5 UBX-NAV2-ODO (0x29 0x09).....	171
3.16.5.1 Odometer solution.....	171
3.16.6 UBX-NAV2-POSECEF (0x29 0x01).....	171
3.16.6.1 Position solution in ECEF.....	172
3.16.7 UBX-NAV2-POSLLH (0x29 0x02).....	172
3.16.7.1 Geodetic position solution.....	172
3.16.8 UBX-NAV2-PVT (0x29 0x07).....	172
3.16.8.1 Navigation position velocity time solution.....	173
3.16.9 UBX-NAV2-SAT (0x29 0x35).....	175
3.16.9.1 Satellite information.....	175
3.16.10 UBX-NAV2-SBAS (0x29 0x32).....	177
3.16.10.1 SBAS status data.....	177
3.16.11 UBX-NAV2-SIG (0x29 0x43).....	178
3.16.11.1 Signal information.....	178
3.16.12 UBX-NAV2-SLAS (0x29 0x42).....	180
3.16.12.1 QZSS L1S SLAS status data.....	180
3.16.13 UBX-NAV2-STATUS (0x29 0x03).....	181
3.16.13.1 Receiver navigation status.....	181
3.16.14 UBX-NAV2-SVIN (0x29 0x3b).....	182
3.16.14.1 Survey-in data.....	182
3.16.15 UBX-NAV2-TIMEBDS (0x29 0x24).....	183
3.16.15.1 BeiDou time solution.....	183
3.16.16 UBX-NAV2-TIMEGAL (0x29 0x25).....	184
3.16.16.1 Galileo time solution.....	184
3.16.17 UBX-NAV2-TIMEGLO (0x29 0x23).....	184
3.16.17.1 GLONASS time solution.....	185
3.16.18 UBX-NAV2-TIMEGPS (0x29 0x20).....	185
3.16.18.1 GPS time solution.....	185
3.16.19 UBX-NAV2-TIMELS (0x29 0x26).....	186
3.16.19.1 Leap second event information.....	186
3.16.20 UBX-NAV2-TIMEQZSS (0x29 0x27).....	187
3.16.20.1 QZSS time solution.....	187
3.16.21 UBX-NAV2-TIMEUTC (0x29 0x21).....	188
3.16.21.1 UTC time solution.....	188
3.16.22 UBX-NAV2-VELECEF (0x29 0x11).....	189
3.16.22.1 Velocity solution in ECEF.....	189
3.16.23 UBX-NAV2-VELNED (0x29 0x12).....	189
3.16.23.1 Velocity solution in NED frame.....	189
3.17 UBX-RXM (0x02).....	190
3.17.1 UBX-RXM-COR (0x02 0x34).....	190
3.17.1.1 Differential correction input status.....	190

3.17.2 UBX-RXM-MEASX (0x02 0x14).....	191
3.17.2.1 Satellite measurements for RRLP.....	192
3.17.3 UBX-RXM-PMP (0x02 0x72).....	193
3.17.3.1 PMP (LBAND) message.....	193
3.17.4 UBX-RXM-PMREQ (0x02 0x41).....	193
3.17.4.1 Power management request.....	194
3.17.4.2 Power management request.....	194
3.17.5 UBX-RXM-QZSSL6 (0x02 0x73).....	195
3.17.5.1 QZSS L6 message.....	195
3.17.6 UBX-RXM-RAWX (0x02 0x15).....	195
3.17.6.1 Multi-GNSS raw measurements.....	195
3.17.7 UBX-RXM-RLM (0x02 0x59).....	197
3.17.7.1 Galileo SAR short-RLM report.....	197
3.17.7.2 Galileo SAR long-RLM report.....	197
3.17.8 UBX-RXM-RTCM (0x02 0x32).....	198
3.17.8.1 RTCM input status.....	198
3.17.9 UBX-RXM-SFRBX (0x02 0x13).....	199
3.17.9.1 Broadcast navigation data subframe.....	199
3.17.10 UBX-RXM-SPARTN (0x02 0x33).....	199
3.17.10.1 SPARTN input status.....	199
3.17.11 UBX-RXM-SPARTNKEY (0x02 0x36).....	200
3.17.11.1 Poll installed keys.....	200
3.17.11.2 Transfer dynamic SPARTN keys.....	200
3.18 UBX-SEC (0x27).....	201
3.18.1 UBX-SEC-OSNMA (0x27 0x0a).....	201
3.18.1.1 Galileo Open Service Navigation Message Authentication (OSNMA) security information.....	201
3.18.2 UBX-SEC-SIG (0x27 0x09).....	205
3.18.2.1 Signal security information.....	205
3.18.3 UBX-SEC-SIGLOG (0x27 0x10).....	206
3.18.3.1 Signal security log.....	206
3.18.4 UBX-SEC-UNIQID (0x27 0x03).....	207
3.18.4.1 Unique chip ID.....	207
3.19 UBX-TIM (0x0d).....	208
3.19.1 UBX-TIM-TM2 (0x0d 0x03).....	208
3.19.1.1 Time mark data.....	208
3.19.2 UBX-TIM-TP (0x0d 0x01).....	209
3.19.2.1 Time pulse time data.....	209
3.19.3 UBX-TIM-VRFY (0x0d 0x06).....	210
3.19.3.1 Sourced time verification.....	210
3.20 UBX-UPD (0x09).....	210
3.20.1 UBX-UPD-SOS (0x09 0x14).....	210
3.20.1.1 Poll backup restore status.....	211
3.20.1.2 Create backup in flash.....	211
3.20.1.3 Clear backup in flash.....	211
3.20.1.4 Backup creation acknowledge.....	211
3.20.1.5 System restored from backup.....	212
<b>4 RTCM protocol.....</b>	<b>213</b>
4.1 RTCM introduction.....	213
4.2 RTCM 3.x configuration.....	213

4.3 RTCM messages overview.....	213
4.4 RTCM 3.3 messages.....	214
4.4.1 Message type 1001.....	214
4.4.1.1 L1-only GPS RTK observables.....	214
4.4.2 Message type 1002.....	215
4.4.2.1 Extended L1-only GPS RTK observables.....	215
4.4.3 Message type 1003.....	215
4.4.3.1 L1/L2 GPS RTK observables.....	215
4.4.4 Message type 1004.....	216
4.4.4.1 Extended L1/L2 GPS RTK observables.....	216
4.4.5 Message type 1005.....	216
4.4.5.1 Stationary RTK reference station ARP.....	217
4.4.6 Message type 1006.....	217
4.4.6.1 Stationary RTK reference station ARP with antenna height.....	217
4.4.7 Message type 1007.....	218
4.4.7.1 Antenna descriptor.....	218
4.4.8 Message type 1009.....	218
4.4.8.1 L1-only GLONASS RTK observables.....	218
4.4.9 Message type 1010.....	219
4.4.9.1 Extended L1-Only GLONASS RTK observables.....	219
4.4.10 Message type 1011.....	219
4.4.10.1 L1&L2 GLONASS RTK observables.....	219
4.4.11 Message type 1012.....	220
4.4.11.1 Extended L1&L2 GLONASS RTK observables.....	220
4.4.12 Message type 1033.....	220
4.4.12.1 Receiver and antenna descriptors.....	221
4.4.13 Message type 1074.....	221
4.4.13.1 GPS MSM4.....	221
4.4.14 Message type 1075.....	222
4.4.14.1 GPS MSM5.....	222
4.4.15 Message type 1077.....	222
4.4.15.1 GPS MSM7.....	222
4.4.16 Message type 1084.....	223
4.4.16.1 GLONASS MSM4.....	223
4.4.17 Message type 1085.....	223
4.4.17.1 GLONASS MSM5.....	224
4.4.18 Message type 1087.....	224
4.4.18.1 GLONASS MSM7.....	224
4.4.19 Message type 1094.....	225
4.4.19.1 Galileo MSM4.....	225
4.4.20 Message type 1095.....	225
4.4.20.1 Galileo MSM5.....	225
4.4.21 Message type 1097.....	226
4.4.21.1 Galileo MSM7.....	226
4.4.22 Message type 1124.....	226
4.4.22.1 BeiDou MSM4.....	227
4.4.23 Message type 1125.....	227
4.4.23.1 BeiDou MSM5.....	227
4.4.24 Message type 1127.....	228
4.4.24.1 BeiDou MSM7.....	228

4.4.25 Message type 1230.....	228
4.4.25.1 GLONASS L1 and L2 code-phase biases.....	228
4.4.26 Message type 4072, sub-type 0.....	229
4.4.26.1 Reference station PVT (u-blox proprietary).....	229
4.4.27 Message type 4072, sub-type 1.....	229
4.4.27.1 Additional reference station information (u-blox proprietary).....	230
<b>5 SPARTN protocol.....</b>	<b>231</b>
5.1 SPARTN introduction.....	231
5.2 SPARTN configuration.....	231
5.3 SPARTN messages overview.....	231
5.4 SPARTN messages.....	231
5.4.1 Message type 0, sub-type 0.....	231
5.4.1.1 GPS orbit, clock, bias (OCB).....	232
5.4.2 Message type 0, sub-type 1.....	232
5.4.2.1 GLONASS orbit, clock, bias (OCB).....	232
5.4.3 Message type 0, sub-type 2.....	233
5.4.3.1 Galileo orbit, clock, bias (OCB).....	233
5.4.4 Message type 0, sub-type 3.....	234
5.4.4.1 BeiDou orbit, clock, bias (OCB).....	234
5.4.5 Message type 1, sub-type 0.....	235
5.4.5.1 GPS high-precision atmosphere correction (HPAC).....	235
5.4.6 Message type 1, sub-type 1.....	236
5.4.6.1 GLONASS high-precision atmosphere correction (HPAC).....	236
5.4.7 Message type 1, sub-type 2.....	236
5.4.7.1 Galileo high-precision atmosphere correction (HPAC).....	237
5.4.8 Message type 1, sub-type 3.....	237
5.4.8.1 BeiDou high-precision atmosphere correction (HPAC).....	237
5.4.9 Message type 2, sub-type 0.....	238
5.4.9.1 Geographic area definition (GAD).....	238
<b>6 Configuration interface.....</b>	<b>240</b>
6.1 Configuration database.....	240
6.2 Configuration items.....	240
6.3 Configuration layers.....	241
6.4 Configuration interface access.....	242
6.4.1 UBX protocol interface.....	242
6.5 Configuration data.....	242
6.6 Configuration transactions.....	243
6.7 Configuration reset behavior.....	244
6.8 Configuration overview.....	244
6.9 Configuration reference.....	245
6.9.1 CFG-BDS: BeiDou system configuration.....	245
6.9.2 CFG-GAL: Galileo system configuration.....	245
6.9.3 CFG-GEOFENCE: Geofencing configuration.....	246
6.9.4 CFG-HW: Hardware configuration.....	247
6.9.5 CFG-I2C: Configuration of the I2C interface.....	248
6.9.6 CFG-I2CINPROT: Input protocol configuration of the I2C interface.....	248
6.9.7 CFG-I2COUTPROT: Output protocol configuration of the I2C interface.....	249
6.9.8 CFG-INFMSG: Information message configuration.....	249
6.9.9 CFG-LOGFILTER: Data logger configuration.....	250

6.9.10 CFG-MOT: Motion detector configuration.....	251
6.9.11 CFG-MSGOUT: Message output configuration.....	251
6.9.12 CFG-NAV2: Secondary output configuration.....	273
6.9.13 CFG-NAVHPG: High precision navigation configuration.....	274
6.9.14 CFG-NAVSPG: Standard precision navigation configuration.....	274
6.9.15 CFG-NMEA: NMEA protocol configuration.....	276
6.9.16 CFG-ODO: Odometer and low-speed course over ground filter configuration.....	278
6.9.17 CFG-QZSS: QZSS system configuration.....	279
6.9.18 CFG-RATE: Navigation and measurement rate configuration.....	279
6.9.19 CFG-RINV: Remote inventory.....	280
6.9.20 CFG-RTCM: RTCM protocol configuration.....	280
6.9.21 CFG-SBAS: SBAS configuration.....	281
6.9.22 CFG-SEC: Security configuration.....	283
6.9.23 CFG-SIGNAL: Satellite systems (GNSS) signal configuration.....	283
6.9.24 CFG-SPARTN: SPARTN configuration.....	284
6.9.25 CFG-SPI: Configuration of the SPI interface.....	284
6.9.26 CFG-SPIINPROT: Input protocol configuration of the SPI interface.....	284
6.9.27 CFG-SPIOUTPROT: Output protocol configuration of the SPI interface.....	285
6.9.28 CFG-TMODE: Time mode configuration.....	285
6.9.29 CFG-TP: Time pulse configuration.....	286
6.9.30 CFG-TXREADY: TX ready configuration.....	288
6.9.31 CFG-UART1: Configuration of the UART1 interface.....	289
6.9.32 CFG-UART1INPROT: Input protocol configuration of the UART1 interface.....	289
6.9.33 CFG-UART1OUTPROT: Output protocol configuration of the UART1 interface.....	290
6.9.34 CFG-UART2: Configuration of the UART2 interface.....	290
6.9.35 CFG-UART2INPROT: Input protocol configuration of the UART2 interface.....	291
6.9.36 CFG-UART2OUTPROT: Output protocol configuration of the UART2 interface.....	291
6.9.37 CFG-USB: Configuration of the USB interface.....	291
6.9.38 CFG-USBINPROT: Input protocol configuration of the USB interface.....	292
6.9.39 CFG-USBOTPROT: Output protocol configuration of the USB interface.....	292
6.10 Legacy UBX message fields reference.....	292
<b>Configuration defaults.....</b>	<b>298</b>
<b>Related documents.....</b>	<b>322</b>
<b>Revision history.....</b>	<b>323</b>

# 1 General information

## 1.1 Document overview

This document describes the interface of the u-blox F9 high precision GNSS receiver. The interface consists of the following parts:

- [NMEA protocol](#)
- [UBX protocol](#)
- [RTCM protocol](#)
- [SPARTN protocol](#)
- [Configuration interface](#)

-  Some of the features described here may not be available in the receiver, and some may require specific configurations to be enabled. See the applicable data sheet for availability of the features and the integration manual for instructions for enabling them.
-  Previous versions of u-blox receiver documentation combined general receiver description and interface specification. In the current documentation the receiver description is included in the integration manual.

See also [Related documents](#).


## 1.2 Firmware and protocol versions

u-blox receivers execute firmware from internal ROM or load an external image and execute it from internal code-RAM.

- If the product does not have internal code-RAM, the firmware runs from the ROM.
- If the product has internal code-RAM but an external image is not available, the firmware runs from the ROM. Some products have only limited ROM and enter boot mode with no GNSS function if an external image is not available.
- If the external firmware image is stored in a flash memory, it is loaded into the code-RAM before execution.
- In some products, the firmware image can be stored in the host system and loaded into the code-RAM from there.

The location and the version of the currently running firmware can be found in the boot screen and in the [UBX-MON-VER](#) message. If the firmware has been loaded from the flash memory or from the host processor, it is indicated by text "EXT". Running from the internal ROM is indicated by text "ROM". When the receiver is started, the boot screen is output automatically in [UBX-INF-NOTICE](#) or [NMEA-Standard-TXT](#) messages if configured using [CFG-INFMSG](#). The UBX-MON-VER message can be polled using the [UBX polling mechanism](#).

The following u-center screenshots show an example of boot information:

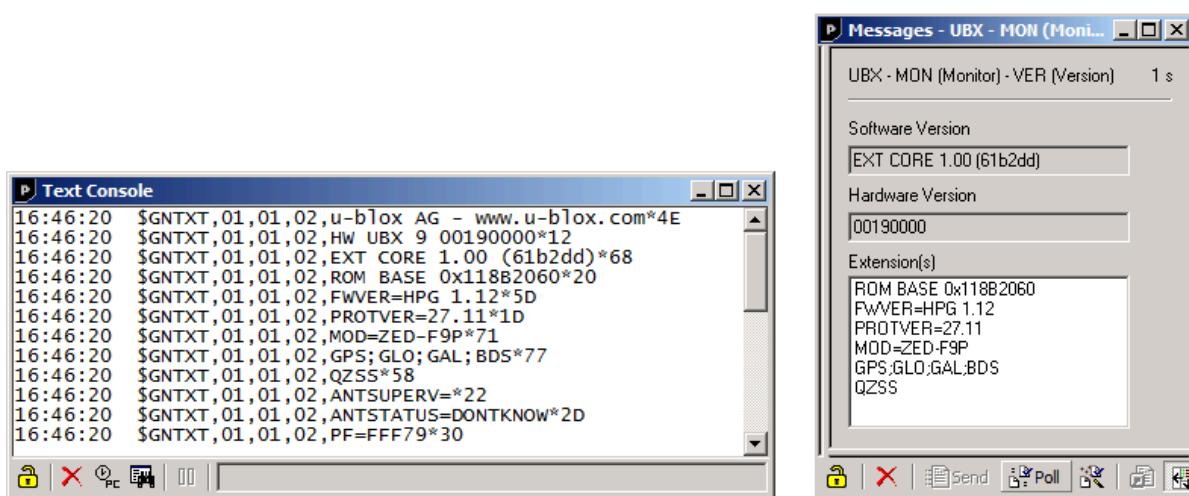

The following information is available (✓) from the boot screen (B) and the UBX-MON-VER message (M):

B M Example	Information
✓ u-blox AG - www.u-blox.com	Start of the boot screen.
✓ HW UBX 10 00000000	Hardware version of the u-blox receiver. ✓ 00000000
✓ ✓ ROM SPG 5.10 (000000)	Firmware version and revision identifier.
✓ ✓ ROM BASE 0x118B2060	Revision of the underlying boot loader firmware in ROM.
✓ ✓ FWVER=SPG 5.10	Product firmware version, where: <ul style="list-style-type: none"> <li>• SPG = Standard precision GNSS product</li> <li>• HPG = High precision GNSS product</li> <li>• ADR = Automotive dead reckoning product</li> <li>• TIM = Time sync product</li> <li>• LAP = Lane accurate positioning product</li> <li>• HPS = High precision sensor fusion product</li> <li>• DBS = Dual band standard precision</li> <li>• MDR = Multi-mode dead reckoning product</li> <li>• PMP = L-Band Inmarsat point-to-multipoint receiver</li> <li>• QZS = QZSS L6 centimeter level augmentation service (CLAS) message receiver</li> <li>• DBD = Dual band dead reckoning product</li> <li>• LDR = ROM bootloader, no GNSS functionality</li> </ul>
✓ ✓ PROTVER=34.00	Supported protocol version.
✓ ✓ MOD=EVK-M101	Module name.
✓ ✓ GPS;GLO;GAL;BDS	List of supported major GNSS (see <a href="#">GNSS identifiers</a> ).
✓ ✓ SBAS;QZSS	List of supported augmentation systems (see <a href="#">GNSS identifiers</a> ).
✓ ✓ NAVIC	Extended list of supported GNSS (see <a href="#">GNSS identifiers</a> ).
✓ ANTSUPERV=AC SD PDOs SR	Configuration of the antenna supervisor, where: <ul style="list-style-type: none"> <li>• AC = Active antenna control enabled</li> <li>• SD = Short circuit detection enabled</li> <li>• OD = Open circuit detection enabled</li> <li>• PDOs = Short circuit power down logic enabled</li> <li>• SR = Automatic recovery from short state enabled</li> </ul>

B M Example	Information
✓ PF=FFF79	Product configuration.
✓ BD=E01C	GNSS band configuration.

- ☞ The "FWVER" product firmware version indicates which firmware is currently running. This is referred to as "firmware version" in this and other documents.
- ☞ The version and revision numbers should only be used to identify a known firmware version. They are not necessarily numeric nor are they guaranteed to increase with later firmware versions.
- ☞ All u-blox receivers output the start text, hardware version, and firmware version and revision. Some of the other entries in the boot screen example may be omitted.

The product firmware version and revision relate to the protocol version:

Firmware version	Version and revision identifier	Protocol version
HPG 1.50	EXT CORE 1.00 (5949d2)	27.50

## 1.3 Receiver configuration

u-blox positioning receivers are fully configurable with UBX protocol messages. The configuration used by the receiver during normal operation is called the "current configuration". The current configuration can be changed during normal operation by sending [UBX-CFG-VALSET](#) messages over any I/O port (except UART2). The receiver changes its current configuration immediately after receiving a configuration message. The receiver always uses the current configuration only.

The current configuration is loaded from permanent configuration hard-coded in the receiver firmware (the defaults) and from non-volatile memory (user configuration) on startup of the receiver. Changes made to the current configuration at run-time will be lost when there is a power cycle, a hardware reset or a (complete) controlled software reset (see [Configuration reset behavior](#)).

See [Configuration interface](#) for a detailed description of the receiver configuration system, the explanation of the configuration concept and its principles and interfaces.

- ☞ The configuration interface has changed from earlier u-blox positioning receivers. There is some backwards compatibility provided in UBX-CFG configuration messages. Users are strongly advised to only use the [Configuration interface](#). See also [Legacy UBX message fields reference](#).
- ☞ See the integration manual for a basic receiver configuration most commonly used.

## 1.4 Message naming

Message names are written in full with the parts of the name separated by hyphens (""). The full message name consists of the protocol name (e.g. *UBX*), the class name (e.g. *NAV*) and the message name (e.g. *PVT*). For example, the receiver software version information message is referred to as *UBX-MON-VER*. Similarly, the *NMEA-Standard-GGA* is the NMEA standard message (sentence) with the global positioning fix data.

References to fields of the message add the field name separated by a dot ("."), e.g. *UBX-MON-VER.swVersion*.

Some messages use a fourth level of naming, called the message version. One example is the *UBX-MGA-GPS* message for GPS assistance data, which exists in versions for ephemerides (*UBX-MGA-GPS-EPH*) and almanacs (*UBX-MGA-GPS-ALM*).

Names of configuration items are of the form *CFG-GROUP-ITEM*. For example, *CFG-NAVSPG-DYNMODEL* refers to the navigation dynamic platform model the receiver uses. Constants add

a fourth level to the item name, such as *CFG-NAVSPG-DYNMODEL-AUTOMOT* for the automotive platform model. In the context of describing an item's value, only the last part of the constant name can be used (e.g. "set *CFG-NAVSPG-DYNMODEL* to *PORT* for portable applications").

## 1.5 GNSS, satellite, and signal identifiers

### 1.5.1 Overview

Many [UBX protocol](#) messages contain information about specific satellites. Any single satellite can be identified by a `gnssId` field indicating the GNSS the satellite is part of and an `svId` (SV for space vehicle) field indicating the number of the satellite in that system. Usually, the `svId` is the native number associated with the satellite in the specific GNSS. For example, the Galileo SV4 is identified as `gnssId` 2, `svId` 4, while the GPS SV4 is `gnssId` 0, `svId` 4.

Some legacy UBX protocol messages combine both the satellite number and the GNSS identification into a one-byte (type U1) field. See the single `svId` mapping in [Satellite identifiers](#) to identify the corresponding GNSS and satellite.

GLONASS satellites can be tracked before they have been identified. In UBX messages, the unknown satellites are reported with `svId` 255. In NMEA messages, the unknown satellites are null (empty) fields. Product-related documentation and u-center use R? to label unidentified GLONASS satellites.

Signal identifiers are used when different signals from the same GNSS satellite need to be distinguished (e.g. in the [UBX-NAV-SIG](#) message). A separate `sigId` field identifies the signal. These signal identifiers are only valid when combined with a GNSS identifier (`gnssId` field).

The [NMEA protocol](#) (version 4.10 and later) identifies GNSS satellites with a one-digit system ID and a two-digit satellite number. u-blox receivers support this method in their NMEA output when "strict" SV numbering is selected. In most cases this is the default setting, but it can be checked or changed using the [Configuration interface](#) (see also [NMEA GNSS, satellite, and signal numbering](#)).

In order to support some GNSS (e.g. BeiDou, Galileo, QZSS), which are not supported by some or all NMEA protocol versions, an "extended" SV numbering scheme can be enabled. This uses the NMEA-defined numbers where possible but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3-digit numbers, which may not be supported by some NMEA parsing software. For example, QZSS satellites use numbers in the range 193 to 202.

The NMEA standard defines signal identifiers to distinguish different signals sent by a single GNSS satellite (e.g. L2 CL and CM). u-blox positioning receivers use those identifiers for signal identification, as far as the corresponding standard is supported in a particular product.

-  Note that the following sections are a generic overview for different u-blox positioning receivers. A particular product may not support all of the described GNSS identifiers, satellite numbers, signal identifiers or combinations thereof.

### 1.5.2 GNSS identifiers

[Table 1](#) lists each GNSS along with the GNSS identifier ([UBX protocol](#)), the NMEA system identifiers ([NMEA protocol](#)), and abbreviations used in this document:

GNSS	Abbreviations	UBX <code>gnssId</code>	NMEA system ID		
			2.3 - 4.0	4.10	4.11
GPS	GPS	G	0	1	1

<sup>1</sup> While not defined by NMEA 4.10, in this mode, u-blox receivers use system ID 4 for BeiDou and, if extended satellite numbering is enabled, system ID 1 for QZSS.

GNSS	Abbreviations	UBX gnssId	NMEA system ID		
			2.3 - 4.0	4.10	4.11
SBAS	SBAS	S	1	1	1
Galileo	GAL	E	2	n/a	3
BeiDou	BDS	B	3	n/a	(4) <sup>1</sup>
QZSS	QZSS	Q	5	n/a	(1) <sup>1</sup>
GLONASS	GLO	R	6	2	2
NavIC	NavIC	N	7	n/a	6

**Table 1: GNSS identifiers**

See also [NMEA Talker ID](#).

### 1.5.3 Satellite identifiers

The satellite numbering scheme for the [UBX protocol](#) is provided in [Table 2](#). The satellite numbering scheme for the [NMEA protocol](#) is provided in [Table 3](#).

GNSS	SV Range	gnssId:svId	single svId
GPS	G1-G32	0:1-32	1-32
SBAS	S120-S158	1:120-158	120-158
Galileo	E1-E36	2:1-36	211-246
BeiDou	B1-B5	3:1-5	159-163
	B6-B37	3:6-37	33-64
	B38-B63	3:38-63	n/a
QZSS	Q1-Q10	5:1-10	193-202
GLONASS	R1-R32	6:1-32	65-96
	R?	6:255	255
NavIC	N1-N7	7:1-7	247-253
	N8-N14	7:8-14	n/a

**Table 2: UBX protocol satellite numbering scheme**

GNSS	SV Range	NMEA 2.3 - 4.0		NMEA 4.10		NMEA 4.11	
		strict	extended	strict	extended	strict	extended
GPS	G1-G32	1-32	1-32	1-32	1-32	1-32	1-32
SBAS	S120-S158	33-64	33-64, 152-158	33-64	33-64, 152-158	33-64	33-64, 152-158
Galileo	E1-E36	n/a	301-336	1-36	1-36	1-36	1-36
BeiDou	B1-B5	n/a	401-405	1-5	1-5	1-5	1-5
	B6-B37	n/a	406-437	6-37	6-37	6-37	6-37
	B38-B63	n/a	438-463	38-63	38-63	38-63	38-63
QZSS	Q1-Q10	n/a	193-202	n/a	193-202	1-10	1-10
GLONASS	R1-R32	65-96	65-96	65-96	65-96	65-96	65-96
	R?	null	null	null	null	null	null
NavIC	N1-N7	n/a	n/a	n/a	n/a	1-7	1-7
	N8-N14	n/a	n/a	n/a	n/a	8-14	8-14

**Table 3: NMEA protocol satellite numbering scheme**

### 1.5.4 Signal identifiers

A summary of all the signal identification schemes used in the [NMEA protocol](#) and the [UBX protocol](#) is provided in the following table. (Only a subset of the signals is supported by each product.) In

the NMEA protocol, system and signal identifiers are in hexadecimal format. An unknown signal identifier is presented as 0 in the NMEA protocol.

Signal	UBX Protocol		NMEA Protocol 4.10		NMEA Protocol 4.11	
	gnssid	sigId	System ID	Signal ID	System ID	Signal ID
GPS L1C/A <sup>2</sup>	0	0	1	1	1	1
GPS L2 CL	0	3	1	6	1	6
GPS L2 CM	0	4	1	5	1	5
GPS L5 I	0	6	1	7	1	7
GPS L5 Q	0	7	1	8	1	8
SBAS L1C/A <sup>2</sup>	1	0	1	1	1	1
Galileo E1 C <sup>2</sup>	2	0	3	7	3	7
Galileo E1 B <sup>2</sup>	2	1	3	7	3	7
Galileo E5 al	2	3	3	1	3	1
Galileo E5 aQ	2	4	3	1	3	1
Galileo E5 bl	2	5	3	2	3	2
Galileo E5 bQ	2	6	3	2	3	2
BeiDou B1I D1 <sup>2</sup>	3	0	(4) <sup>3</sup>	(1) <sup>4</sup>	4	1
BeiDou B1I D2 <sup>2</sup>	3	1	(4) <sup>3</sup>	(1) <sup>4</sup>	4	1
BeiDou B2I D1	3	2	(4) <sup>3</sup>	(3) <sup>4</sup>	4	B
BeiDou B2I D2	3	3	(4) <sup>3</sup>	(3) <sup>4</sup>	4	B
BeiDou B1 Cp (pilot)	3	5	(4) <sup>3</sup>	N/A	4	3
BeiDou B1 Cd (data)	3	6	(4) <sup>3</sup>	N/A	4	3
BeiDou B2 ap (pilot)	3	7	(4) <sup>3</sup>	N/A	4	5
BeiDou B2 ad (data)	3	8	(4) <sup>3</sup>	N/A	4	5
QZSS L1C/A <sup>2</sup>	5	0	(1) <sup>3</sup>	(1) <sup>4</sup>	5	1
QZSS L1S	5	1	(1) <sup>3</sup>	(4) <sup>4</sup>	5	4
QZSS L2 CM	5	4	(1) <sup>3</sup>	(5) <sup>4</sup>	5	5
QZSS L2 CL	5	5	(1) <sup>3</sup>	(6) <sup>4</sup>	5	6
QZSS L5 I	5	8	(1) <sup>3</sup>	N/A	5	7
QZSS L5 Q	5	9	(1) <sup>3</sup>	N/A	5	8
GLONASS L1 OF <sup>2</sup>	6	0	2	1	2	1
GLONASS L2 OF	6	2	2	3	2	3
NavIC L5 A <sup>2</sup>	7	0	N/A	N/A	6	1

Table 4: Signal identifiers

## 1.6 Message types

The following message types are defined:

<sup>2</sup> UBX messages that do not have an explicit `sigId` field contain information about the subset of signals marked.

<sup>3</sup> While not defined by NMEA 4.10, in this mode, u-blox receivers use system ID 4 for BeiDou and, if extended satellite numbering is enabled, system ID 1 for QZSS.

<sup>4</sup> BeiDou and QZSS signal ID are not defined in the NMEA protocol version 4.10. Values shown in the table are only valid for u-blox products and, for QZSS signal ID, if extended satellite numbering is enabled.

Message type	Description
Input	Messages that are input to the receiver and never output. E.g. <a href="#">UBX-MGA-GPS-EPH</a> .
Output	Messages that are output by the receiver in no particular interval and never input. E.g. <a href="#">UBX-ACK-ACK</a> .
Input/output	Messages that can be output by or input to the receiver. E.g. <a href="#">UBX-MGA-DBD-DATA0</a> .
Periodic	Messages that are output in regular intervals but cannot be polled. E.g. <a href="#">UBX-NAV-EOE</a> .
Periodic/polled	Messages that are output in regular intervals and can be polled. E.g. <a href="#">UBX-NAV-PVT</a> .
Command	Messages that are a command to the receiver. Similar to type <i>Input</i> these are input-only. E.g. <a href="#">UBX-CFG-RST</a> .
Get	Output-only configuration or command messages. E.g. <a href="#">UBX-CFG-DAT</a> .
Set	Input-only configuration or command messages. E.g. <a href="#">UBX-CFG-VALDEL</a> .
Get/set	Input/output configuration or command messages. E.g. <a href="#">UBX-CFG-NAVX5</a> .
Polled	Non-periodic messages that can only be polled. E.g. <a href="#">UBX-MON-VER</a> .
Poll request	Poll request. E.g. <a href="#">UBX-MGA-DBD-POLL</a> .


## 2 NMEA protocol

The following sections give an overview of the NMEA messages used by u-blox positioning receivers.

By default, the NMEA messages sent by u-blox positioning receivers are based on the NMEA 0183 version 4.11 standard. For further information on the NMEA standard, refer to the *NMEA 0183 Standard for Interfacing Marine Electronic Devices*, Version 4.11, November 2018, which is available on <http://www.nmea.org/>.

### 2.1 NMEA frame structure

The following figure shows the structure of a NMEA protocol message (called "sentences" in the standard).

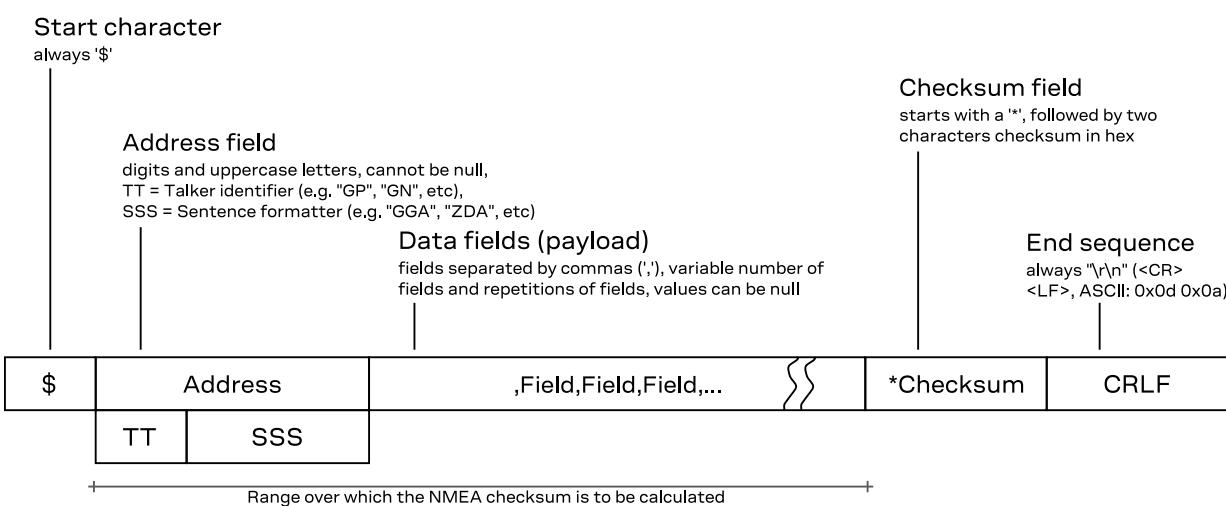

Example

\$	GP	ZDA	,141644.00,22,03,2002,00,00	*67	\r\n
----	----	-----	-----------------------------	-----	------

### 2.2 NMEA protocol configuration

The [NMEA protocol](#) on u-blox receivers can be configured for customer applications by using the [Configuration interface](#) (CFG-NMEA-\* items).

Several NMEA standard versions are supported. Version 4.11 (not in all products), 4.10, 4.00, 2.3, or 2.1 can be configured. See [Configuration defaults](#) for the default version. See [CFG-NMEA-PROTVER](#) to configure the version. See [NMEA multi-GNSS operation](#) and [NMEA data fields](#) for details on how this affects the output.

The following filtering flags can be used to configure the output of some NMEA message fields:

Filter	Configuration Item	Description
Position filtering	<a href="#">CFG-NMEA-OUT_INVFIX</a>	Enable to permit positions from failed or invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Valid position filtering	<a href="#">CFG-NMEA-OUT_MSKFIX</a>	Enable to permit positions from invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Time filtering	<a href="#">CFG-NMEA-OUT_INVTIME</a>	Enable to permit the receiver's best knowledge of time to be output, even though it might be wrong.

Filter	Configuration Item	Description
Date filtering	<a href="#">CFG-NMEA-OUT_INVDATE</a>	Enable to permit the receiver's best knowledge of date to be output, even though it might be wrong.
GPS-only filtering	<a href="#">CFG-NMEA-OUT_ONLYGPS</a>	Enable to restrict output to only report GPS satellites.
Track filtering	<a href="#">CFG-NMEA-OUT_FROZENCOG</a>	Enable to permit course over ground (COG) to be reported even when it would otherwise be frozen.

The following filtering flags can be used to configure the output of some NMEA message flags:

Mode	Configuration Item	Description
Compatibility mode	<a href="#">CFG-NMEA-COMPAT</a>	Some older NMEA applications expect the NMEA output to be formatted in a specific way, for example, they will only work if the latitude and longitude have exactly four digits behind the decimal point. u-blox receivers offer a compatibility mode to support these legacy applications.
Consideration mode	<a href="#">CFG-NMEA-CONSIDER</a>	u-blox receivers use a sophisticated signal quality detection scheme, in order to produce the best possible position output. This algorithm considers all SV measurements, and may eventually decide to only use a subset thereof, if it improves the overall position accuracy. If consideration mode is enabled, all satellites, which were considered for navigation, are communicated as being used for the position determination. If consideration mode is disabled, only those satellites which after the consideration step remained in the position output are marked as being used.
Limit length mode	<a href="#">CFG-NMEA-LIMIT82</a>	Enabling this mode will limit the NMEA sentence length to a maximum of 82 characters.
High precision mode	<a href="#">CFG-NMEA-HIGHPREC</a>	Enabling this mode increases precision of the position output. Latitude and longitude then have seven digits after the decimal point, and altitude has three digits after the decimal point. Note: The high precision mode cannot be set in conjunction with either compatibility mode or Limit82 mode.

The following extended configuration options are available:

Option	Configuration Item(s)	Description
GNSS to filter	<a href="#">CFG-NMEA-FILT_GPS</a> etc.	Filters satellites based on the GNSS they belong to.
Satellite numbering	<a href="#">CFG-NMEA-SVNUMBERING</a>	This field configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. See also <a href="#">Satellite identifiers</a> .
Main Talker ID	<a href="#">CFG-NMEA-MAINTALKERID</a>	By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see configuration items <a href="#">CFG-SIGNAL-*</a> ). This field enables the main Talker ID to be overridden. See also <a href="#">NMEA Talker ID</a> .
GSV Talker ID	<a href="#">CFG-NMEA-GSVTALKERID</a>	By default the Talker ID for GSV messages is GNSS-specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden.
BDS Talker ID	<a href="#">CFG-NMEA-BDSTALKERID</a>	By default the Talker ID for BeiDou is "GB". This field enables the BeiDou Talker ID to be overridden.

## 2.3 NMEA-proprietary messages

The NMEA standard allows for proprietary, manufacturer-specific messages to be added. These shall be marked with a manufacturer mnemonic. The mnemonic assigned to u-blox is UBX and is used for all non-standard messages. These proprietary NMEA messages therefore have the address field set to PUBX. The first data field in a PUBX message identifies the message number with two digits.

## 2.4 NMEA multi-GNSS operation

Many applications that process NMEA messages assume that only a single GNSS is active. However, when multiple GNSS are configured, the NMEA specification requires the output to change in the following ways:

**Main Talker ID** The main [NMEA Talker ID](#) is "GN" (e.g. instead of "GP" for a GPS-only receiver).

**GSV Talker and Signal IDs** The [GSV](#) message reports the signal strength of the visible satellites. In multi-GNSS operation, other messages use the main Talker ID "GN" but the Talker ID in the GSV message is specific to the GNSS it is reporting information for.

The GSV messages are grouped by the Talker and Signal IDs. Separate sets of GSV messages are sent for each GNSS and signal. The Signal ID of a satellite may be unknown. Such satellites are presented in their own set with Signal ID 0. Grouping the GSV messages by the Signal ID is supported in firmware versions 27.12 and later.

**Multiple GSA and GRS messages** Multiple [GSA](#) and [GRS](#) messages are output for each fix, one for each GNSS. This may confuse applications that assume they are output only once per position fix (as is the case for a single GNSS receiver).

**GGA Talker IDs** The NMEA specification indicates that the GGA message is GPS-specific. However, u-blox receivers support the output of a GGA message for each of the Talker IDs.

**BeiDou and Galileo** Only NMEA version 4.10 and later have support for these systems.

**QZSS** Only NMEA version 4.11 and later have support for this system.

**Extended satellite numbering** In order to support some GNSS (e.g. BeiDou, Galileo, QZSS) that are not supported by some or all NMEA protocol versions, an "extended" SV numbering scheme can be enabled. This uses the NMEA-defined numbers where possible, but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3-digit numbers, which may not be supported by some NMEA parsing software. For example, QZSS satellites use numbers in the range 193 to 202. See [NMEA protocol configuration](#) and [Satellite identifiers](#).

## 2.5 NMEA data fields

Various data fields in NMEA messages depend on [NMEA protocol configuration](#) or require a definition for their interpretation.

### 2.5.1 NMEA Talker ID

One of the ways the NMEA standard differs depending on the GNSS is by using a two-letter message identifier, the "Talker ID". The specific Talker ID used by a u-blox receiver will depend on the product and its configuration. The table below shows the Talker ID that will be used for various GNSS configurations by default.

GNSS	Talker ID	Comments
GPS, SBAS	GP	NMEA 2.3+
GLONASS	GL	NMEA 2.3+
Galileo	GA	NMEA 4.10+
BeiDou	GB	NMEA 4.10+ (official NMEA only since 4.11)
NavIC	GI	NMEA 4.11+
QZSS	GQ	NMEA 4.11+ (GP for NMEA 2.3 - 4.10)

GNSS	Talker ID	Comments
Any combination of GNSS	GN	

## 2.5.2 NMEA extra fields

The following extra fields are available in NMEA 4.10 and later.

Message	Extra fields
NMEA-Standard-GBS	systemId and signalId
NMEA-Standard-GNS	navStatus
NMEA-Standard-GRS	systemId and signalId
NMEA-Standard-GSA	systemId
NMEA-Standard-GSV	signalId
NMEA-Standard-RMC	navStatus

## 2.5.3 NMEA latitude and longitude format

According to the NMEA standard, latitude and longitude are output in the format *degrees, minutes and (decimal) fractions of minutes*. To convert to *degrees and fractions of degrees*, or *degrees, minutes, seconds and fractions of seconds*, the minutes and fractional minutes parts need to be converted. For example:

Format	Latitude	Longitude
Receiver output	\$GPRMC, 014230.00, A, 4722.80340, N, 00831.68218, E, 0.000,, 120477,,, A, V*14	
(d)ddmm.mmffff	4722.80340 North	00831.68218 East
Degrees and minutes	47 degrees, 22.80340 minutes	8 degrees, 31.68218 minutes
Degrees	47.38005667 degrees	8.52803633 degrees
Degrees, minutes and seconds	47 degrees, 22 minutes, 48.2040 seconds	8 degrees, 31 minutes, 40.9308 seconds

## 2.5.4 NMEA GNSS, satellite, and signal numbering

See [GNSS, satellite, and signal identifiers](#) for details on how GNSS, satellites and signals are numbered in the NMEA protocol.

NMEA defines satellite numbering systems for some, but not all GNSS. The exact behavior depends on the configured NMEA protocol version and ("extended" or "strict") mode. See [NMEA protocol configuration](#) for details.

## 2.5.5 NMEA position fix flags

This section shows how u-blox positioning receivers implement the NMEA protocol and the conditions determining how flags are set.

The following flags are used in NMEA 4.10 and later.

NMEA Message	GLL, RMC	GGA	GLL, VTG	RMC, GNS
Field	status <sup>5</sup>	quality <sup>6</sup>	posMode <sup>7</sup>	posMode <sup>7</sup>
No position fix (at power-up, after losing satellite lock)	V	0	N	N

<sup>5</sup> Possible status values: V = data invalid, A = data valid

<sup>6</sup> Possible values for quality: 0 = No fix, 1 = autonomous GNSS fix, 2 = differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = estimated/dead reckoning fix

<sup>7</sup> Possible values for posMode: N = No fix, E = estimated/dead reckoning fix, A = autonomous GNSS fix, D = differential GNSS fix, F = RTK float, R = RTK fixed. In NMEA GNS, u-blox uses a non-standard implementation where same single status is reported for all enabled and not filtered out constellations.

NMEA Message	GLL, RMC	GGA	GLL, VTG	RMC, GNS
Field	status <sup>5</sup>	quality <sup>6</sup>	posMode <sup>7</sup>	posMode <sup>7</sup>
GNSS fix, but user limits exceeded	V	0	N	N
Dead reckoning fix, but user limits exceeded	V	6	E	E
Dead reckoning fix	A	6	E	E
RTK float	A	5	D	F
RTK fixed	A	4	D	R
2D GNSS fix	A	1/2	A/D	A/D
3D GNSS fix	A	1/2	A/D	A/D
Combined GNSS/dead reckoning fix	A	1/2	A/D	A/D

In high precision GNSS (HPG) products it is recommended to select NMEA version 4.10 or above. Earlier versions do not support the float RTK (F) and real time kinematic (R) mode indicator flags in all messages.

The following flags are used in NMEA 2.3 - 4.0.

NMEA Message	GLL, RMC	GGA	GSA	GLL, VTG, RMC, GNS
Field	status <sup>8</sup>	quality <sup>9</sup>	navMode <sup>10</sup>	posMode <sup>11</sup>
No position fix (at power-up, after losing satellite lock)	V	0	1	N
GNSS fix, but user limits exceeded	V	0	1	N
Dead reckoning fix, but user limits exceeded	V	6	2	E
Dead reckoning fix	A	6	2	E
2D GNSS fix	A	1/2	2	A/D
3D GNSS fix	A	1/2	3	A/D
Combined GNSS/dead reckoning fix	A	1/2	3	A/D

The flags in NMEA 2.1 and earlier are the same as NMEA 2.3 but with the following differences:

- The *posMode* field is not output for GLL, RMC and VTG messages (each message has one field less).
- The GGA *quality* field is set to 1 (instead of 6) for both types of dead reckoning fix.

## 2.5.6 NMEA output of invalid or unknown data

By default the receiver will not output invalid data. In such cases, it will output empty fields. See [NMEA protocol configuration](#) for options to adjust this behavior.

A valid position fix is reported as follows:

```
$GPGLL,4717.11634,N,00833.91297,E,124923.00,A,A*6E
```

An invalid position fix (but valid time) is reported as follows:

```
$GPGLL,,,124924.00,V,N*42
```

<sup>8</sup> Possible values for *status*: V = data invalid, A = data valid

<sup>9</sup> Possible values for *quality*: 0 = no fix, 1 = autonomous GNSS fix, 2 = differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = estimated/dead reckoning fix

<sup>10</sup> Possible values for *navMode*: 1 = No fix, 2 = 2D fix, 3 = 3D fix

<sup>11</sup> Possible values for *posMode*: N = No fix, E = estimated/dead reckoning fix, A = autonomous GNSS fix, D = differential GNSS fix. In NMEA GNS, u-blox uses a non-standard implementation where same single status is reported for all enabled and not filtered out constellations.

If the time is unknown (e.g. during a cold start):

\$GPGLL,,,,,,V,N\*64

- Unlike the NMEA standard behavior to invalid data, dead reckoning products always report a position. It is marked as invalid (V) when the user limits are exceeded or valid (A) if the user limits are met.

## 2.6 NMEA messages overview

Message	Class/ID	Description (Type)
<b>NMEA-Standard – Standard NMEA messages</b>		
NMEA-Standard-DTM	0xf0 0x0a	• Datum reference (Output)
NMEA-Standard-GAQ	0xf0 0x45	• Poll a standard message (Talker ID GA) (Poll request)
NMEA-Standard-GBQ	0xf0 0x44	• Poll a standard message (Talker ID GB) (Poll request)
NMEA-Standard-GBS	0xf0 0x09	• GNSS satellite fault detection (Output)
NMEA-Standard-GGA	0xf0 0x00	• Global positioning system fix data (Output)
NMEA-Standard-GLL	0xf0 0x01	• Latitude and longitude, with time of position fix and status (Output)
NMEA-Standard-GLQ	0xf0 0x43	• Poll a standard message (Talker ID GL) (Poll request)
NMEA-Standard-GNQ	0xf0 0x42	• Poll a standard message (Talker ID GN) (Poll request)
NMEA-Standard-GNS	0xf0 0x0d	• GNSS fix data (Output)
NMEA-Standard-GPQ	0xf0 0x40	• Poll a standard message (Talker ID GP) (Poll request)
NMEA-Standard-GQQ	0xf0 0x47	• Poll a standard message (Talker ID GQ) (Poll request)
NMEA-Standard-GRS	0xf0 0x06	• GNSS range residuals (Output)
NMEA-Standard-GSA	0xf0 0x02	• GNSS DOP and active satellites (Output)
NMEA-Standard-GST	0xf0 0x07	• GNSS pseudorange error statistics (Output)
NMEA-Standard-GSV	0xf0 0x03	• GNSS satellites in view (Output)
NMEA-Standard-RLM	0xf0 0x0b	• Return link message (RLM) (Output)
NMEA-Standard-RMC	0xf0 0x04	• Recommended minimum data (Output)
NMEA-Standard-TXT	0xf0 0x41	• Text transmission (Output)
NMEA-Standard-VLW	0xf0 0x0f	• Dual ground/water distance (Output)
NMEA-Standard-VTG	0xf0 0x05	• Course over ground and ground speed (Output)
NMEA-Standard-ZDA	0xf0 0x08	• Time and date (Output)
<b>NMEA-NAV2 – Secondary output NMEA messages</b>		
NMEA-NAV2-GGA	0xf7 0x00	• Global positioning system fix data (Output)
NMEA-NAV2-GLL	0xf7 0x01	• Latitude and longitude, with time of position fix and status. (Output)
NMEA-NAV2-GNS	0xf7 0x0d	• GNSS fix data (Output)
NMEA-NAV2-GSA	0xf7 0x02	• GNSS DOP and active satellites (Output)
NMEA-NAV2-RMC	0xf7 0x04	• Recommended minimum data (Output)
NMEA-NAV2-VTG	0xf7 0x05	• Course over ground and ground speed (Output)
NMEA-NAV2-ZDA	0xf7 0x08	• Time and date (Output)
<b>NMEA-PUBX – u-blox proprietary NMEA messages</b>		
NMEA-PUBX-CONFIG	0xf1 0x41	• Set protocols and baud rate (Set)
NMEA-PUBX-POSITION	0xf1 0x00	• Poll a PUBX,00 message (Poll request) • Lat/Long position data (Output)
NMEA-PUBX-RATE	0xf1 0x40	• Set NMEA message output rate (Set)
NMEA-PUBX-SVSTATUS	0xf1 0x03	• Poll a PUBX,03 message (Poll request) • Satellite status (Output)

<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
NMEA-PUBX-TIME	0xf1 0x04	<ul style="list-style-type: none"> <li>• Poll a PUBX,04 message (Poll request)</li> <li>• Time of day and clock information (Output)</li> </ul>

## 2.7 Standard messages

Standard NMEA messages as defined by the NMEA 0183 standard. See [NMEA protocol](#) for details.

### 2.7.1 DTM

#### 2.7.1.1 Datum reference

<b>Message</b>	NMEA-Standard-DTM							
	Datum reference							
Type	Output							
Comment	This message gives the difference between the current datum and the reference datum. The current datum is set to WGS84 by default. The reference datum cannot be changed and is always set to WGS84.							
Information	Class/ID: 0xf0 0x0a		Number of fields: 11					
Structure	\$xxDTM,datum,subDatum,lat,NS,lon,EW,alt,refDatum*cs\r\n							
Examples	\$GPDTM,W84,,0.0,N,0.0,E,0.0,W84*6F\r\n \$GPDTM,999,,0.08,N,0.07,E,-47.7,W84*1C\r\n							
Payload:								
Field	Name	Format	Unit	Example	Description			
0	xxDTM	string	-	\$GPDTM	DTM Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )			
1	datum	string	-	W84	Local datum code: W84 = WGS84, P90 = PZ90, 999 = user-defined			
2	subDatum	string	-	-	A null field (or a string describing the currently selected datum for protocol versions less than 14.00)			
3	lat	numeric	min	0.08	Offset in Latitude			
4	NS	character	-	S	North/South indicator			
5	lon	numeric	min	0.07	Offset in Longitude			
6	EW	character	-	E	East/West indicator			
7	alt	numeric	m	-2.8	Offset in altitude			
8	refDatum	string	-	W84	Reference datum code: W84 (WGS 84, fixed field)			
9	cs	hexadecimal	-	*67	Checksum			
10	CRLF	character	-	-	Carriage return and line feed			

### 2.7.2 GAQ

#### 2.7.2.1 Poll a standard message (Talker ID GA)

<b>Message</b>	NMEA-Standard-GAQ	
	Poll a standard message (Talker ID GA)	
Type	Poll request	
Comment	Polls a standard NMEA message if the current Talker ID is GA.	
Information	Class/ID: 0xf0 0x45	Number of fields: 4
Structure	\$xxGAQ,msgId*cs\r\n	

**Example** \$EIGAQ,RMC\*2B\r\n

**Payload:**

Field	Name	Format	Unit	Example	Description
0	xxGAQ	string	-	\$EIGAQ	GAQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*2B	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.3 GBQ

### 2.7.3.1 Poll a standard message (Talker ID GB)

Message	NMEA-Standard-GBQ				
Type	Poll a standard message (Talker ID GB)				
<b>Comment</b>	Polls a standard NMEA message if the current Talker ID is GB				
<b>Information</b>	Class/ID: 0xf0 0x44 Number of fields: 4				
<b>Structure</b>	\$xxGBQ,msgId*cs\r\n				
<b>Example</b>	\$EIGBQ,RMC*28\r\n				
<b>Payload:</b>					
Field	Name	Format	Unit	Example	Description
0	xxGBQ	string	-	\$EIGBQ	GBQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*28	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.4 GBS

### 2.7.4.1 GNSS satellite fault detection

Message	NMEA-Standard-GBS				
Type	GNSS satellite fault detection				
<b>Comment</b>	This message outputs the results of the Receiver Autonomous Integrity Monitoring Algorithm (RAIM). <ul style="list-style-type: none"><li>• The fields <b>errLat</b>, <b>errLon</b> and <b>errAlt</b> output the standard deviation of the position calculation, using all satellites that pass the RAIM test successfully.</li><li>• The fields <b>errLat</b>, <b>errLon</b> and <b>errAlt</b> are only output if the RAIM process passed successfully (i.e. no or successful edits happened). These fields are never output if 4 or fewer satellites are used for the navigation calculation (because, in such cases, integrity cannot be determined by the receiver autonomously).</li><li>• The fields <b>prob</b>, <b>bias</b> and <b>stdev</b> are only output if at least one satellite failed in the RAIM test.</li></ul> If more than one satellites fail the RAIM test, only the information for the worst satellite is output in this message.				
<b>Information</b>	Class/ID: 0xf0 0x09 Number of fields: 13				
<b>Structure</b>	\$xxGBS,time,errLat,errLon,errAlt,svid,prob,bias,stdev,systemId,signalId*cs\r\n				
<b>Examples</b>	\$GPGBS,235503.00,1.6,1.4,3.2,,*,*40\r\n\$GPGBS,235458.00,1.4,1.3,3.1,03,,,-21.4,3.8,1,0*5B\r\n				
<b>Payload:</b>					

Field	Name	Format	Unit	Example	Description
0	xxGBS	string	-	\$GPGBS	GBS Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	235503.00	UTC time to which this RAIM sentence belongs. See section UTC representation in the integration manual for details.
2	errLat	numeric	m	1.6	Expected error in latitude
3	errLon	numeric	m	1.4	Expected error in longitude
4	errAlt	numeric	m	3.2	Expected error in altitude
5	svid	numeric	-	03	Satellite ID of most likely failed satellite
6	prob	numeric	-	-	Probability of missed detection: null (not supported, fixed field)
7	bias	numeric	m	-21.4	Estimated bias of most likely failed satellite (a priori residual)
8	stddev	numeric	m	3.8	Standard deviation of estimated bias
9	systemId	hexadecimal	-	1	NMEA-defined GNSS system ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
10	signalId	hexadecimal	-	-	NMEA-defined GNSS signal ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
11	cs	hexadecimal	-	*5B	Checksum
12	CRLF	character	-	-	Carriage return and line feed

## 2.7.5 GGA

### 2.7.5.1 Global positioning system fix data

<b>Message</b>	NMEA-Standard-GGA				
Global positioning system fix data					
<b>Type</b>	Output				
<b>Comment</b>	Time and position, together with GPS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).  ☞ The output of this message is dependent on the currently selected datum (default: WGS84). The NMEA specification indicates that the GGA message is GPS-specific. However, when the receiver is configured for multi-GNSS, the GGA message contents will be generated from the multi-GNSS solution. For multi-GNSS use, it is recommended that the <a href="#">NMEA-GNS</a> message is used instead.				
<b>Information</b>	Class/ID: 0xf0 0x00      Number of fields: 17				
<b>Structure</b>	\$xxGGA,time,lat,NS,lon,EW,quality,numSV,HDOP,alt,altUnit,sep,sepUnit,diffAge,diffSta+tion*cs\r\n				
<b>Example</b>	\$GPGGA,092725.00,4717.11399,N,00833.91590,E,1,08,1.01,499.6,M,48.0,M,,*5B\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxGGA	string	-	\$GPGGA	GGA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	092725.00	UTC time. See section UTC representation in the integration manual for details.
2	lat	ddmm.mmmmmm	-	4717.11399	Latitude (degrees and minutes), see <a href="#">format description</a>
3	NS	character	-	N	North/South indicator
4	lon	dddmm.mmmmmm	-	00833.91590	Longitude (degrees and minutes), see <a href="#">format description</a>

5	EW	character	-	E	East/West indicator
6	quality	digit	-	1	Quality indicator for position fix, see <a href="#">position fix flags description</a>
7	numSV	numeric	-	08	Number of satellites used (range: 0-12)
8	HDOP	numeric	-	1.01	Horizontal Dilution of Precision
9	alt	numeric	m	499.6	Altitude above mean sea level
10	altUnit	character	-	M	Altitude units: M (meters, fixed field)
11	sep	numeric	m	48.0	Geoid separation: difference between ellipsoid and mean sea level
12	sepUnit	character	-	M	Geoid separation units: M (meters, fixed field)
13	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
14	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
15	cs	hexadecimal	-	*5B	Checksum
16	CRLF	character	-	-	Carriage return and line feed

## 2.7.6 GLL

### 2.7.6.1 Latitude and longitude, with time of position fix and status

Message	NMEA-Standard-GLL Latitude and longitude, with time of position fix and status				
Type	Output				
Comment	☞ The output of this message is dependent on the currently selected datum (default: WGS84)				
Information	Class/ID: 0xf0 0x01      Number of fields: 10				
Structure	\$xxGLL, lat,NS,lon,EW,time,status,posMode*cs\r\n				
Example	\$GPGLL,4717.11364,N,00833.91565,E,092321.00,A,A*60\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxGLL	string	-	\$GPGLL	GLL Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	lat	ddmm. mmmmm	-	4717.11364	Latitude (degrees and minutes), see <a href="#">format description</a>
2	NS	character	-	N	North/South indicator
3	lon	dddmm. mmmmm	-	00833.91565	Longitude (degrees and minutes), see <a href="#">format description</a>
4	EW	character	-	E	East/West indicator
5	time	hhmmss.ss	-	092321.00	UTC time. See section UTC representation in the integration manual for details.
6	status	character	-	A	Data validity status, see <a href="#">position fix flags description</a>
7	posMode	character	-	A	Positioning mode, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
8	cs	hexadecimal	-	*60	Checksum
9	CRLF	character	-	-	Carriage return and line feed

## 2.7.7 GLQ

### 2.7.7.1 Poll a standard message (Talker ID GL)

<b>Message</b>	<b>NMEA-Standard-GLQ</b>				
<b>Poll a standard message (Talker ID GL)</b>					
<b>Type</b>	Poll request				
<b>Comment</b>	Polls a standard NMEA message if the current Talker ID is GL				
<b>Information</b>	Class/ID: 0xf0 0x43      Number of fields: 4				
<b>Structure</b>	\$xxGLQ, msgId*cs\r\n				
<b>Example</b>	\$EIGLQ, RMC*3A\r\n				
<b>Payload:</b>					
Field	Name	Format	Unit	Example	Description
0	xxGLQ	string	-	\$EIGLQ	GLQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

### 2.7.8 GNQ

#### 2.7.8.1 Poll a standard message (Talker ID GN)

<b>Message</b>	<b>NMEA-Standard-GNQ</b>				
<b>Poll a standard message (Talker ID GN)</b>					
<b>Type</b>	Poll request				
<b>Comment</b>	Polls a standard NMEA message if the current Talker ID is GN				
<b>Information</b>	Class/ID: 0xf0 0x42      Number of fields: 4				
<b>Structure</b>	\$xxGNQ, msgId*cs\r\n				
<b>Example</b>	\$EIGNQ, RMC*3A\r\n				
<b>Payload:</b>					
Field	Name	Format	Unit	Example	Description
0	xxGNQ	string	-	\$EIGNQ	GNQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

### 2.7.9 GNS

#### 2.7.9.1 GNSS fix data

<b>Message</b>	<b>NMEA-Standard-GNS</b>				
<b>GNSS fix data</b>					
<b>Type</b>	Output				
<b>Comment</b>	Time and position, together with GNSS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.). ☞ The output of this message is dependent on the currently selected datum (default: WGS84)				
<b>Information</b>	Class/ID: 0xf0 0x0d      Number of fields: 16				
<b>Structure</b>	\$xxGNS, time, lat, NS, lon, EW, posMode, numSV, HDOP, alt, sep, diffAge, diffStation, navStatus*c\r\n				

**Examples**

```
$GNGNS,103600.01,5114.51176,N,00012.29380,W,ANNN,07,1.18,111.5,45.6,,,V*00\r\n
$GNGNS,122310.2,3722.425671,N,12258.856215,W,DAAA,14,0.9,1005.543,6.5,,,V*0E\r\n
$GPGNS,122310.2,,,,,,07,,,5.2,23,V*02\r\n
```

**Payload:**

Field	Name	Format	Unit	Example	Description
0	xxGNS	string	-	\$GPGNS	GNS Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	091547.00	UTC time. See section UTC representation in the integration manual for details.
2	lat	ddmm. mmmmm	-	5114.50897	Latitude (degrees and minutes), see <a href="#">format description</a>
3	NS	character	-	N	North/South indicator
4	lon	dddmm. mmmmm	-	00012.28663	Longitude (degrees and minutes), see <a href="#">format description</a>
5	EW	character	-	E	East/West indicator
6	posMode	character	-	AAAA	Positioning mode, see <a href="#">position fix flags description</a> . The first four characters indicate the status for GPS, GLONASS, Galileo and BeiDou. Note that the NMEA GNS message only reports a single status. It indicates the status for all enabled constellations that have not been filtered out. To obtain a more detailed status report, refer to the status provided in the UBX messages.
7	numSV	numeric	-	10	Number of satellites used (range: 0-99)
8	HDOP	numeric	-	0.83	Horizontal Dilution of Precision
9	alt	numeric	m	111.1	Altitude above mean sea level
10	sep	numeric	m	45.6	Geoid separation: difference between ellipsoid and mean sea level
11	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
12	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
13	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
14	cs	hexadecimal	-	*71	Checksum
15	CRLF	character	-	-	Carriage return and line feed

## 2.7.10 GPQ

### 2.7.10.1 Poll a standard message (Talker ID GP)

Message	NMEA-Standard-GPQ		
Type	Poll a standard message (Talker ID GP)		
Comment	Polls a standard NMEA message if the current Talker ID is GP		
Information	Class/ID: 0xf0 0x40      Number of fields: 4		
Structure	\$xxGPQ, msgId*cs\r\n		
Example	\$EIGPQ, RMC*3A\r\n		
<b>Payload:</b>			
Field	Name	Format	Unit

0	xxGPQ	string	-	\$EIGPQ	GPQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.11 GQQ

### 2.7.11.1 Poll a standard message (Talker ID GQ)

<b>Message</b>	NMEA-Standard-GQQ				
	Poll a standard message (Talker ID GQ)				
<b>Type</b>	Poll request				
<b>Comment</b>	Polls a standard NMEA message if the current Talker ID is GQ				
<b>Information</b>	Class/ID: 0xf0 0x47      Number of fields: 4				
<b>Structure</b>	\$xxGQQ,msgId*cs\r\n				
<b>Example</b>	\$EIGQQ,RMC*3A\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxGQQ	string	-	\$EIGQQ	GQQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

## 2.7.12 GRS

### 2.7.12.1 GNSS range residuals

<b>Message</b>	NMEA-Standard-GRS				
	GNSS range residuals				
<b>Type</b>	Output				
<b>Comment</b>	If less than 12 SVs are available, the remaining fields are output empty. If more than 12 SVs are used, only the residuals of the first 12 SVs are output, in order to remain consistent with the NMEA standard.				
	<b>In a multi-GNSS system this message will be output multiple times, once for each GNSS.</b>				
	☞ This message relates to associated <a href="#">GGA</a> and <a href="#">GSA</a> messages.				
<b>Information</b>	Class/ID: 0xf0 0x06      Number of fields: 19				
<b>Structure</b>	\$xxGRS,time,mode{,residual},systemId,signalId*cs\r\n				
<b>Examples</b>	\$GNGRS,104148.00,1,2.6,2.2,-1.6,-1.1,-1.7,-1.5,5.8,1.7,,,,,1,1*52\r\n\$GNGRS,104148.00,1,,0.0,2.5,0.0,,2.8,,,,,1,5*52\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxGRS	string	-	\$GPGRS	GRS Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	082632.00	UTC time of associated position fix. See section UTC representation in the integration manual for details.
2	mode	digit	-	1	Computation method used: • 1 = Residuals were recomputed after the <a href="#">GGA</a> position was computed (fixed)

*Start of repeated group (12 times)*

3 + n	residual	numeric	m	0.54	Range residuals for SVs used in navigation. The SV order matches the order from the <a href="#">GSA</a> sentence
-------	----------	---------	---	------	--

*End of repeated group (12 times)*

15	systemId	hexadecimal -	1	NMEA-defined GNSS system ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
16	signalId	hexadecimal -	-	NMEA-defined GNSS signal ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
17	cs	hexadecimal -	*70	Checksum
18	CRLF	character	-	Carriage return and line feed

## 2.7.13 GSA

### 2.7.13.1 GNSS DOP and active satellites

Message	NMEA-Standard-GSA							
	GNSS DOP and active satellites							
Type	Output							
Comment	The GNSS receiver operating mode, satellites used for navigation, and DOP values.							
	<ul style="list-style-type: none"> <li>If less than 12 SVs are used for navigation, the remaining fields are left empty. If more than 12 SVs are used for navigation, only the IDs of the first 12 are output.</li> <li>The SV numbers (fields 'svid') are in the range of 1 to 32 for GPS satellites, and 33 to 64 for SBAS satellites (33 = SBAS PRN 120, 34 = SBAS PRN 121, and so on)</li> </ul>							
<b>In a multi-GNSS system this message will be output multiple times, once for each GNSS.</b>								
Information	Class/ID: 0xf0 0x02		Number of fields: 21					
Structure	\$xxGSA, opMode, navMode{, svnid}, PDOP, HDOP, VDOP, systemId*cs\r\n							
Example	\$GPGSA,A,3,23,29,07,08,09,18,26,28,,,1.94,1.18,1.54,1*0D\r\n							
Payload:								
Field	Name	Format	Unit	Example	Description			
0	xxGSA	string	-	\$GP GSA	GSA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )			
1	opMode	character	-	A	Operation mode: <ul style="list-style-type: none"> <li>M = Manually set to operate in 2D or 3D mode</li> <li>A = Automatically switching between 2D or 3D mode</li> </ul>			
2	navMode	digit	-	3	Navigation mode, see <a href="#">position fix flags description</a>			
<i>Start of repeated group (12 times)</i>								
3 + n	svnid	numeric	-	29	Satellite number			
<i>End of repeated group (12 times)</i>								
15	PDOP	numeric	-	1.94	Position dilution of precision			
16	HDOP	numeric	-	1.18	Horizontal dilution of precision			
17	VDOP	numeric	-	1.54	Vertical dilution of precision			
18	systemId	hexadecimal -	1		NMEA-defined GNSS system ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)			
19	cs	hexadecimal -	*0D		Checksum			
20	CRLF	character	-	-	Carriage return and line feed			

## 2.7.14 GST

### 2.7.14.1 GNSS pseudorange error statistics

Message NMEA-Standard-GST					
GNSS pseudorange error statistics					
Type	Output				
Comment	This message reports statistical information on the quality of the position solution.				
Information	Class/ID: 0xf0 0x07 Number of fields: 11				
Structure	\$xxGST,time,rangeRms,stdMajor,stdMinor,orient,stdLat,stdLong,stdAlt*cs\r\n				
Example	\$GPGST,082356.00,1.8,,,1.7,1.3,2.2*7E\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxGST	string	-	\$GPGST	GST Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	082356.00	UTC time of associated position fix. See section UTC representation in the integration manual for details.
2	rangeRms	numeric	m	1.8	RMS value of the standard deviation of the ranges
3	stdMajor	numeric	m	-	Standard deviation of semi-major axis
4	stdMinor	numeric	m	-	Standard deviation of semi-minor axis
5	orient	numeric	deg	-	Orientation of semi-major axis
6	stdLat	numeric	m	1.7	Standard deviation of latitude error
7	stdLong	numeric	m	1.3	Standard deviation of longitude error
8	stdAlt	numeric	m	2.2	Standard deviation of altitude error
9	cs	hexadecimal	-	*7E	Checksum
10	CRLF	character	-	-	Carriage return and line feed

### 2.7.15 GSV

#### 2.7.15.1 GNSS satellites in view

Message NMEA-Standard-GSV					
GNSS satellites in view					
Type	Output				
Comment	The number of satellites in view, together with each SV ID, elevation azimuth, and signal strength (C/No) value. Only four satellite details are transmitted in one message. In a multi-GNSS system, sets of GSV messages will be output multiple times, one set for each GNSS. The messages are grouped by the signal ID and separate messages are output for each signal ID. (supported for protocol versions 27.12 and later)				
Information	Class/ID: 0xf0 0x03 Number of fields: 7 + [1..4]*4				
Structure	\$xxGSV,numMsg,msgNum,numSV{,svid,elv,az,cno},signalId*cs\r\n				
Examples	\$GPGSV,3,1,09,09,,,17,10,,,40,12,,,49,13,,,35,1*6F\r\n\$GPGSV,3,2,09,15,,,44,17,,,45,19,,,44,24,,,50,1*64\r\n\$GPGSV,3,3,09,25,,,40,1*6E\r\n\$GPGSV,1,1,03,12,,,42,24,,,47,32,,,37,5*66\r\n\$GPGSV,1,1,01,03,05,218,,0*59\r\n\$GAGSV,1,1,00,2*76\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxGSV	string	-	\$GPGSV	GSV Message ID (xx = GSV Talker ID, see <a href="#">NMEA Talker IDs table</a> ). Talker ID GN shall not be used.

1	numMsg	digit	-	3	Number of messages, total number of GSV messages being output (range: 1-9)
2	msgNum	digit	-	1	Number of this message (range: 1-numMsg)
3	numSV	numeric	-	10	Number of known satellites in view regarding both the talker ID and the signalId
<i>Start of repeated group (1...4 times)</i>					
4 + n·4	svid	numeric	-	23	Satellite ID
5 + n·4	elv	numeric	deg	38	Elevation (<= 90)
6 + n·4	az	numeric	deg	230	Azimuth (range: 0-359)
7 + n·4	cno	numeric	dBHz	44	Signal strength (C/N0, range: 0-99), null when not tracking
<i>End of repeated group (1...4 times)</i>					
4 + N·4	signalId	hexadecimal	-	-	NMEA-defined GNSS signal ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
5 + N·4	cs	hexadecimal	-	*7F	Checksum
6 + N·4	CRLF	character	-	-	Carriage return and line feed

## 2.7.16 RLM

### 2.7.16.1 Return link message (RLM)

Message	NMEA-Standard-RLM Return link message (RLM)				
Type	Output				
Comment	<p>The RLM sentence is used to transfer a Return link message from a Cospas-Sarsat recognized Return link service provider (RLSP).</p> <p>The RLM sentence supports communications to an emitting beacon once a distress alert has been detected, located and confirmed. The communications may include acknowledgement of the alert to the emitting beacon as well as optional text messages, and may also include remote beacon configuration and testing.</p>				
Information	Class/ID: 0xf0 0x0b      Number of fields: 7				
Structure	\$xxRLM,beacon,time,code,body*cs\r\n				
Examples	\$GARLM,00000078A9FBAD5,083559.00,3,C45B*57\r\n \$GARLM,F7129D41BC6A78C,034433.02,3,B63CA732AFD419D2*57\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxRLM	string	-	\$GARLM	RLM message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	beacon	hexadecimal	-	00000078A9FBAD5	Beacon ID, identifies beacon intended to receive this message (fixed length 15 hexadecimal character field)
2	time	hhmmss.ss	-	083559.00	Time of reception field to indicate RLM timestamp in UTC. See section UTC representation in the integration manual for details.
3	code	character	-	3	Message code field to identify type of RLM Message Service: <ul style="list-style-type: none"> <li>• 0 = Reserved for future RLM services</li> <li>• 1 = Acknowledgement service RLM</li> <li>• 2 = Command service RLM</li> <li>• 3 = Message service RLM</li> <li>• 4-E = Reserved for future RLM services</li> <li>• F = Test service RLM (currently used only by the Galileo program)</li> </ul>

4	body	hexadecimal -	C45B	Message body encapsulates the data parameters provided by the RLSP into hexadecimal format.
5	cs	hexadecimal -	*57	Checksum
6	CRLF	character -	-	Carriage return and line feed

## 2.7.17 RMC

### 2.7.17.1 Recommended minimum data

Message	NMEA-Standard-RMC				
	Recommended minimum data				
Type	Output				
Comment	The recommended minimum sentence defined by NMEA for GNSS system data. ☞ The output of this message is dependent on the currently selected datum (default: WGS84)				
Information	Class/ID: 0x00 0x04      Number of fields: 16				
Structure	\$xxRMC,time,status,lat,NS,lon,EW,spd,cog,date,mv,mvEW,posMode,navStatus*cs\r\n				
Example	\$GPRMC,083559.00,A,4717.11437,N,00833.91522,E,0.004,77.52,091202,,,A,V*57\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxRMC	string	-	\$GPRMC	RMC Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	time	hhmmss.ss	-	083559.00	UTC time. See section UTC representation in the integration manual for details.
2	status	character	-	A	Data validity status, see <a href="#">position fix flags description</a>
3	lat	ddmm. mmmmm	-	4717.11437	Latitude (degrees and minutes), see <a href="#">format description</a>
4	NS	character	-	N	North/South indicator
5	lon	dddmm. mmmmm	-	00833.91522	Longitude (degrees and minutes), see <a href="#">format description</a>
6	EW	character	-	E	East/West indicator
7	spd	numeric	knots	0.004	Speed over ground
8	cog	numeric	deg	77.52	Course over ground
9	date	ddmmyy	-	091202	Date in day, month, year format. See section UTC representation in the integration manual for details.
10	mv	numeric	deg	-	Magnetic variation value
11	mvEW	character	-	-	Magnetic variation E/W indicator
12	posMode	character	-	A	Mode Indicator, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
13	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
14	cs	hexadecimal -	*57		Checksum
15	CRLF	character -	-		Carriage return and line feed

## 2.7.18 TXT

## 2.7.18.1 Text transmission

<b>Message</b>	NMEA-Standard-TXT				
<b>Text transmission</b>					
<b>Type</b>	Output				
<b>Comment</b>	This message outputs various information on the receiver, such as power-up screen, software version etc. This message can be configured using the <a href="#">CFG-INFMSG</a> configuration group.				
<b>Information</b>	Class/ID: 0x00 0x41      Number of fields: 7				
<b>Structure</b>	\$xxTXT, numMsg, msgNum, msgType, text*cs\r\n				
<b>Examples</b>	\$GPTXT,01,01,02,u-blox ag - www.u-blox.com*50\r\n\$GPTXT,01,01,02,ANTARIS ATR0620 HW 00000040*67\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxTXT	string	-	\$GPTXT	TXT Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	numMsg	numeric	-	01	Total number of messages in this transmission (range: 1-99)
2	msgNum	numeric	-	01	Message number in this transmission (range: 1-numMsg)
3	msgType	numeric	-	02	Text identifier (u-blox receivers specify the type of the message with this number): <ul style="list-style-type: none"> <li>• 00 = Error</li> <li>• 01 = Warning</li> <li>• 02 = Notice</li> <li>• 07 = User</li> </ul>
4	text	string	-	www.u-blo x.com	Any ASCII text
5	cs	hexadecimal	-	*67	Checksum
6	CRLF	character	-	-	Carriage return and line feed

## 2.7.19 VLW

### 2.7.19.1 Dual ground/water distance

<b>Message</b>	NMEA-Standard-VLW				
<b>Dual ground/water distance</b>					
<b>Type</b>	Output				
<b>Comment</b>	The distance traveled, relative to the water and over the ground. This message relates to the odometer feature detailed in the integration manual.				
<b>Information</b>	Class/ID: 0x00 0x0f      Number of fields: 11				
<b>Structure</b>	\$xxVLW, twd, twdUnit, wd, wdUnit, tgd, tgdUnit, gd, gdUnit*cs\r\n				
<b>Example</b>	\$GPVLW,,N,,N,15.8,N,1.2,N*06\r\n				
<b>Payload:</b>					
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>
0	xxVLW	string	-	\$GPVLW	VLW Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	twd	numeric	nmi	-	Total cumulative water distance: null (fixed field)
2	twdUnit	character	-	N	Total cumulative water distance units: N (nautical miles, fixed field)
3	wd	numeric	nmi	-	Water distance since reset: null (fixed field)

4	wdUnit	character	-	N	Water distance since reset units: N (nautical miles, fixed field)
5	tgd	numeric	nmi	15.8	Total cumulative ground distance (only available in NMEA 4.00 and later)
6	tgdUnit	character	-	N	Total cumulative ground distance units: N (nautical miles, fixed field, only available in NMEA 4.00 and later)
7	gd	numeric	nmi	1.2	Ground distance since reset (only available in NMEA 4.00 and later)
8	gdUnit	character	-	N	Ground distance since reset units: N (nautical miles, fixed field, only available in NMEA 4.00 and later)
9	cs	hexadecimal	-	*06	Checksum
10	CRLF	character	-	-	Carriage return and line feed

## 2.7.20 VTG

### 2.7.20.1 Course over ground and ground speed

Message	NMEA-Standard-VTG				
Course over ground and ground speed					
Type	Output				
Comment	Velocity is given as course over ground (COG) and speed over ground (SOG).				
Information	Class/ID: 0xf0 0x05      Number of fields: 12				
Structure	\$xxVTG,cogt,cogtUnit,cogm,cogmUnit,sogn,sognUnit,sogk,sogkUnit, posMode*cs\r\n				
Example	\$GPVTG,77.52,T,,M,0.004,N,0.008,K,A*06\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	xxVTG	string	-	\$GPVTG	VTG Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
1	cogt	numeric	degrees	77.52	Course over ground (true)
2	cogtUnit	character	-	T	Course over ground units: T (degrees true, fixed field)
3	cogm	numeric	degrees	-	Course over ground (magnetic)
4	cogmUnit	character	-	M	Course over ground units: M (degrees magnetic, fixed field)
5	sogn	numeric	knots	0.004	Speed over ground
6	sognUnit	character	-	N	Speed over ground units: N (knots, fixed field)
7	sogk	numeric	km/h	0.008	Speed over ground
8	sogkUnit	character	-	K	Speed over ground units: K (kilometers per hour, fixed field)
9	posMode	character	-	A	Mode indicator, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
10	cs	hexadecimal	-	*06	Checksum
11	CRLF	character	-	-	Carriage return and line feed

## 2.7.21 ZDA

### 2.7.21.1 Time and date

Message	NMEA-Standard-ZDA							
	Time and date							
Type	Output							
Comment	UTC, day, month, year and local time zone.							
Information	Class/ID: 0xf0 0x08		Number of fields: 9					
Structure	\$xxZDA,time,day,month,year,ltzh,ltzn*cs\r\n							
Example	\$GPZDA,082710.00,16,09,2002,00,00*64\r\n							
Payload:								
Field	Name	Format	Unit	Example	Description			
0	xxZDA	string	-	\$GPZDA	ZDA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )			
1	time	hhmmss.ss	-	082710.00	UTC Time. See section UTC representation in the integration manual for details.			
2	day	dd	day	16	UTC day (range: 1-31)			
3	month	mm	month	09	UTC month (range: 1-12)			
4	year	yyyy	year	2002	UTC year			
5	ltzh	xx	-	00	Local time zone hours (fixed field, always 00)			
6	ltzn	zz	-	00	Local time zone minutes (fixed field, always 00)			
7	cs	hexadecimal	-	*64	Checksum			
8	CRLF	character	-	-	Carriage return and line feed			

## 2.8 Secondary output messages

Secondary output NMEA messages. These are NMEA messages prepended with an NMEA TAG block as defined by the NMEA 0183 standard. See [NMEA protocol](#) for details.

### 2.8.1 GGA

#### 2.8.1.1 Global positioning system fix data

Message	NMEA-NAV2-GGA							
	Global positioning system fix data							
Type	Output							
Comment	Time and position, together with GPS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.). To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in accordance to NMEA 0183 Standard. The output of this message is dependent on the currently selected datum (default: WGS84). The NMEA specification indicates that the GGA message is GPS-specific. However, when the receiver is configured for multi-GNSS, the GGA message contents will be generated from the multi-GNSS solution. For multi-GNSS use, it is recommended that the <a href="#">NMEA-GNS</a> message is used instead.							
Information	Class/ID: 0xf7 0x00		Number of fields: 21					
Structure	\s:1*78\\$xxGGA,time,lat,NS,lon,EW,quality,numSV,HDOP,alt,altUnit,sep,sepUnit,diffAge + ,diffStation*cs\r\n							
Example	\s:1*78\$GPGG,092725.00,4717.11399,N,00833.91590,E,1,08,1.01,499.6,M,48.0,M,,*5B\r\n							
Payload:								
Field	Name	Format	Unit	Example	Description			
0	tagStart	string	-	\s:	NMEA TAG block start and parameter			

1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character
4	xxGGA	string	-	\$GPGLL	GGA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	time	hhmmss.ss	-	092725.00	UTC time. See section UTC representation in the integration manual for details.
6	lat	ddmm. mmmmm	-	4717.11399	Latitude (degrees and minutes), see <a href="#">format description</a>
7	NS	character	-	N	North/South indicator
8	lon	dddmm. mmmmm	-	00833.91590	Longitude (degrees and minutes), see <a href="#">format description</a>
9	EW	character	-	E	East/West indicator
10	quality	digit	-	1	Quality indicator for position fix, see <a href="#">position fix flags description</a>
11	numSV	numeric	-	08	Number of satellites used (range: 0-12)
12	HDOP	numeric	-	1.01	Horizontal Dilution of Precision
13	alt	numeric	m	499.6	Altitude above mean sea level
14	altUnit	character	-	M	Altitude units: M (meters, fixed field)
15	sep	numeric	m	48.0	Geoid separation: difference between ellipsoid and mean sea level
16	sepUnit	character	-	M	Geoid separation units: M (meters, fixed field)
17	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
18	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
19	cs	hexadecimal	-	*5B	Checksum
20	CRLF	character	-	-	Carriage return and line feed

## 2.8.2 GLL

### 2.8.2.1 Latitude and longitude, with time of position fix and status.

<b>Message</b>	NMEA-NAV2-GLL		
Latitude and longitude, with time of position fix and status.			
Type	Output		
Comment	Geographic Position - Latitude/Longitude.  To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.  ☞ The output of this message is dependent on the currently selected datum (default: WGS84)		
Information	Class/ID: 0xf7 0x01      Number of fields: 14		
Structure	\s:1*78\\$xxGLL,lat,NS,lon,EW,time,status, posMode*cs\r\n		
Example	\s:1*78\\$GPGLL,4717.11364,N,00833.91565,E,092321.00,A,A*60\r\n		
Payload:			
Field	Name	Format	Unit
0	tagStart	string	-
			\s:
			NMEA TAG block start and parameter

1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character
4	xxGLL	string	-	\$GPGLL	GLL Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	lat	ddmm. mmmmm	-	4717.11364	Latitude (degrees and minutes), see <a href="#">format description</a>
6	NS	character	-	N	North/South indicator
7	lon	dddmm. mmmmm	-	00833.91565	Longitude (degrees and minutes), see <a href="#">format description</a>
8	EW	character	-	E	East/West indicator
9	time	hhmmss.ss	-	092321.00	UTC time. See section UTC representation in the integration manual for details.
10	status	character	-	A	Data validity status, see <a href="#">position fix flags description</a>
11	posMode	character	-	A	Positioning mode, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
12	cs	hexadecimal	-	*60	Checksum
13	CRLF	character	-	-	Carriage return and line feed

## 2.8.3 GNS

### 2.8.3.1 GNSS fix data

Message	NMEA-NAV2-GNS				
Type	GNSS fix data				
Comment	<p>Time and position, together with GNSS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).</p> <p>To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.</p> <p>The output of this message is dependent on the currently selected datum (default: WGS84)</p>				
Information	<p>Class/ID: 0xf7 0x0d      Number of fields: 20</p>				
Structure	\s:1*78\\$xxGNS,time,lat,NS,lon,EW,posMode,numSV,HDOP,alt,sep,diffAge,diffStation,nav Status*cs\r\n				
Examples	<pre>\s:1*78\\$GNGNS,103600.01,5114.51176,N,00012.29380,W,ANNN,07,1.18,111.5,45.6,,,V*00\r\n \s:1*78\\$GNGNS,122310.2,3722.425671,N,12258.856215,W,DAAA,14,0.9,1005.543,6.5,,,V*0E\r\n \s:1*78\\$GPGNS,122310.2,,,,,,07,,,5.2,23,V*02\r\n</pre>				
Payload:					
Field	Name	Format	Unit	Example	Description
0	tagStart	string	-	\s:	NMEA TAG block start and parameter
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character
4	xxGNS	string	-	\$GPGNS	GNSS Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	time	hhmmss.ss	-	091547.00	UTC time. See section UTC representation in the integration manual for details.

6	lat	ddmm. mmmmm	-	5114.50897	Latitude (degrees and minutes), see <a href="#">format description</a>
7	NS	character	-	N	North/South indicator
8	lon	dddmm. mmmmm	-	00012.28663	Longitude (degrees and minutes), see <a href="#">format description</a>
9	EW	character	-	E	East/West indicator
10	posMode	character	-	AAAA	Positioning mode, see <a href="#">position fix flags description</a> . The first four characters indicate the status for GPS, GLONASS, Galileo and BeiDou. Note that the NMEA GNS message only reports a single status. It indicates the status for all enabled constellations that have not been filtered out. To obtain a more detailed status report, refer to the status provided in the UBX messages.
11	numSV	numeric	-	10	Number of satellites used (range: 0-99)
12	HDOP	numeric	-	0.83	Horizontal Dilution of Precision
13	alt	numeric	m	111.1	Altitude above mean sea level
14	sep	numeric	m	45.6	Geoid separation: difference between ellipsoid and mean sea level
15	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
16	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
17	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
18	cs	hexadecimal	-	*71	Checksum
19	CRLF	character	-	-	Carriage return and line feed

## 2.8.4 GSA

### 2.8.4.1 GNSS DOP and active satellites

Message	NMEA-NAV2-GSA GNSS DOP and active satellites				
Type	Output				
Comment	<p>The GNSS receiver operating mode, satellites used for navigation, and DOP values.</p> <ul style="list-style-type: none"> <li>If less than 12 SVs are used for navigation, the remaining fields are left empty. If more than 12 SVs are used for navigation, only the IDs of the first 12 are output.</li> <li>The SV numbers (fields 'svId') are in the range of 1 to 32 for GPS satellites, and 33 to 64 for SBAS satellites (33 = SBAS PRN 120, 34 = SBAS PRN 121, and so on)</li> </ul> <p><b>In a multi-GNSS system this message will be output multiple times, once for each GNSS.</b></p> <p>To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.</p>				
Information	Class/ID: 0xf7 0x02      Number of fields: 25				
Structure	\s:1*78\\$xxGSA,opMode,navMode{},svId},PDOP,HDOP,VDOP,systemId*cs\r\n				
Example	\s:1*78\\$GPGSA,A,3,23,29,07,08,09,18,26,28,,,,,1.94,1.18,1.54,1*0D\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	tagStart	string	-	\s:	NMEA TAG block start and parameter

1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum
3	tagEnd	string	-	\	NMEA TAG block end character
4	xxGSA	string	-	\$GPGSA	GSA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )
5	opMode	character	-	A	Operation mode: <ul style="list-style-type: none"> <li>• M = Manually set to operate in 2D or 3D mode</li> <li>• A = Automatically switching between 2D or 3D mode</li> </ul>
6	navMode	digit	-	3	Navigation mode, see <a href="#">position fix flags description</a>
<i>Start of repeated group (12 times)</i>					
7 + n	svid	numeric	-	29	Satellite number
<i>End of repeated group (12 times)</i>					
19	PDOP	numeric	-	1.94	Position dilution of precision
20	HDOP	numeric	-	1.18	Horizontal dilution of precision
21	VDOP	numeric	-	1.54	Vertical dilution of precision
22	systemId	hexadecimal	-	1	NMEA-defined GNSS system ID, see <a href="#">Signal Identifiers table</a> (only available in NMEA 4.10 and later)
23	cs	hexadecimal	-	*0D	Checksum
24	CRLF	character	-	-	Carriage return and line feed

## 2.8.5 RMC

### 2.8.5.1 Recommended minimum data

Message	NMEA-NAV2-RMC							
	Recommended minimum data							
Type	Output							
Comment	The recommended minimum sentence defined by NMEA for GNSS system data. To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard. <span style="color: #0070C0;">☞</span> The output of this message is dependent on the currently selected datum (default: WGS84)							
Information	Class/ID: 0xf7 0x04		Number of fields: 20					
Structure	\s:1*78\\$xxRMC,time,status,lat,NS,lon,EW,spd,cog,date,mv,mvEW,posMode,navStatus*cs\r\n							
Example	\s:1*78\\$GPRMC,083559.00,A,4717.11437,N,00833.91522,E,0.004,77.52,091202,,,A,V*57\r\n							
<i>Payload:</i>								
Field	Name	Format	Unit	Example	Description			
0	tagStart	string	-	\s:	NMEA TAG block start and parameter			
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)			
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum			
3	tagEnd	string	-	\	NMEA TAG block end character			
4	xxRMC	string	-	\$GPRMC	RMC Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )			
5	time	hhmmss.ss	-	083559.00	UTC time. See section UTC representation in the integration manual for details.			

6	status	character	-	A	Data validity status, see <a href="#">position fix flags description</a>
7	lat	ddmm. mmmmm	-	4717.11437	Latitude (degrees and minutes), see <a href="#">format description</a>
8	NS	character	-	N	North/South indicator
9	lon	dddmm. mmmmm	-	00833.91522	Longitude (degrees and minutes), see <a href="#">format description</a>
10	EW	character	-	E	East/West indicator
11	spd	numeric	knots	0.004	Speed over ground
12	cog	numeric	deg	77.52	Course over ground
13	date	ddmmyy	-	091202	Date in day, month, year format. See section UTC representation in the integration manual for details.
14	mv	numeric	deg	-	Magnetic variation value
15	mvEW	character	-	-	Magnetic variation E/W indicator
16	posMode	character	-	A	Mode Indicator, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
17	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
18	cs	hexadecimal	-	*57	Checksum
19	CRLF	character	-	-	Carriage return and line feed

## 2.8.6 VTG

### 2.8.6.1 Course over ground and ground speed

<b>Message</b>	NMEA-NAV2-VTG					
Course over ground and ground speed						
<b>Type</b>	Output					
<b>Comment</b>	Velocity is given as course over ground (COG) and speed over ground (SOG). To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.					
<b>Information</b>	Class/ID: 0xf7 0x05		Number of fields: 16			
<b>Structure</b>	\s:1*78\\$xxVTG,cogt,cogtUnit,cogm,cogmUnit,sogn,sognUnit,sogk,sogkUnit, posMode*cs\r\n					
<b>Example</b>	\s:1*78\$GPVTG,77.52,T,,M,0.004,N,0.008,K,A*06\r\n					
<b>Payload:</b>						
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>	
0	tagStart	string	-	\s:	NMEA TAG block start and parameter	
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)	
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum	
3	tagEnd	string	-	\	NMEA TAG block end character	
4	xxVTG	string	-	\$GPVTG	VTG Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )	
5	cogt	numeric	degrees	77.52	Course over ground (true)	
6	cogtUnit	character	-	T	Course over ground units: T (degrees true, fixed field)	
7	cogm	numeric	degrees	-	Course over ground (magnetic)	

8	cogmUnit	character	-	M	Course over ground units: M (degrees magnetic, fixed field)
9	sogn	numeric	knots	0.004	Speed over ground
10	sognUnit	character	-	N	Speed over ground units: N (knots, fixed field)
11	sogk	numeric	km/h	0.008	Speed over ground
12	sogkUnit	character	-	K	Speed over ground units: K (kilometers per hour, fixed field)
13	posMode	character	-	A	Mode indicator, see <a href="#">position fix flags description</a> (only available in NMEA 2.3 and later)
14	cs	hexadecimal	-	*06	Checksum
15	CRLF	character	-	-	Carriage return and line feed

## 2.8.7 ZDA

### 2.8.7.1 Time and date

<b>Message</b>	NMEA-NAV2-ZDA							
<b>Time and date</b>								
<b>Type</b>	Output							
<b>Comment</b>	UTC, day, month, year and local time zone.							
To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.								
<b>Information</b>	Class/ID: 0xf7 0x08		Number of fields: 13					
<b>Structure</b>	\s:1*78\\$GPZDA,time,day,month,year,ltzh,ltzn*cs\r\n							
<b>Example</b>	\s:1*78\\$xxZDA,082710.00,16,09,2002,00,00*64\r\n							
<b>Payload:</b>								
<b>Field</b>	<b>Name</b>	<b>Format</b>	<b>Unit</b>	<b>Example</b>	<b>Description</b>			
0	tagStart	string	-	\s:	NMEA TAG block start and parameter			
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)			
2	tagCs	hexadecimal	-	*78	NMEA TAG checksum			
3	tagEnd	string	-	\	NMEA TAG block end character			
4	xxZDA	string	-	\$GPZDA	ZDA Message ID (xx = current Talker ID, see <a href="#">NMEA Talker IDs table</a> )			
5	time	hhmmss.ss	-	082710.00	UTC Time. See section UTC representation in the integration manual for details.			
6	day	dd	day	16	UTC day (range: 1-31)			
7	month	mm	month	09	UTC month (range: 1-12)			
8	year	yyyy	year	2002	UTC year			
9	ltzh	xx	-	00	Local time zone hours (fixed field, always 00)			
10	ltzn	zz	-	00	Local time zone minutes (fixed field, always 00)			
11	cs	hexadecimal	-	*64	Checksum			
12	CRLF	character	-	-	Carriage return and line feed			

## 2.9 PUBX messages

Proprietary NMEA messages for u-blox positioning receivers. See also [NMEA-proprietary messages](#).

### 2.9.1 CONFIG (PUBX,41)

#### 2.9.1.1 Set protocols and baud rate

<b>Message</b>	NMEA-PUBX-CONFIG							
	Set protocols and baud rate							
<b>Type</b>	Set							
<i>Comment</i>								
<i>Information</i>	Class/ID: 0xf1 0x41		Number of fields: 9					
<i>Structure</i>	\$PUBX,41,portId,inProto,outProto,baudrate,autobausing*cs\r\n							
<i>Example</i>	\$PUBX,41,1,0007,0003,19200,0*25\r\n							
<i>Payload:</i>								
Field	Name	Format	Unit	Example	Description			
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence			
1	msgId	numeric	-	41	Proprietary message identifier			
2	portId	numeric	-	1	ID of communication port. See section Communication ports in the integration manual for details.			
3	inProto	hexadecimal	-	0007	Input protocol mask. Bitmask, specifying which protocols(s) are allowed for input. See section Communication ports in the integration manual for details.			
4	outProto	hexadecimal	-	0003	Output protocol mask. Bitmask, specifying which protocols(s) are allowed for input. See section Communication ports in the integration manual for details.			
5	baudrate	numeric	bits/s	19200	Baud rate			
6	autobausing	numeric	-	-	Autobausing: 1=enable, 0=disable (not supported on u-blox 5, set to 0)			
7	cs	hexadecimal	-	*25	Checksum			
8	CRLF	character	-	-	Carriage return and line feed			

### 2.9.2 POSITION (PUBX,00)

#### 2.9.2.1 Poll a PUBX,00 message

<b>Message</b>	NMEA-PUBX-POSITION							
	Poll a PUBX,00 message							
<b>Type</b>	Poll request							
<i>Comment</i>								
	A PUBX,00 message is polled by sending the PUBX,00 message without any data fields.							
<i>Information</i>	Class/ID: 0xf1 0x00		Number of fields: 4					
<i>Structure</i>	\$PUBX,00*33\r\n							
<i>Example</i>	\$PUBX,00*33\r\n							
<i>Payload:</i>								
Field	Name	Format	Unit	Example	Description			
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence			
1	msgId	numeric	-	00	Set to 00 to poll a PUBX,00 message			

2	cs	hexadecimal -	*33	Checksum
3	CRLF	character -	-	Carriage return and line feed

### 2.9.2.2 Lat/Long position data

Message NMEA-PUBX-POSITION					
Lat/Long position data					
Type	Output				
Comment	This message contains position solution data. The datum selection may be changed using the message <a href="#">UBX-CFG-DAT</a> . ☞ The output of this message is dependent on the currently selected datum (default: WGS84).				
Information	Class/ID: 0xf1 0x00      Number of fields: 23				
Structure	\$PUBX,00,time,lat,NS,long,EW,altRef,navStat,hAcc,vAcc,SOG,COG,vVel,diffAge,HDOP,VDOP ↴ ,TDOP,numSvs,reserved,DR,*cs\r\n				
Example	\$PUBX,00,081350.00,4717.113210,N,00833.915187,E,546.589,G3,2.1,2.0,0.007,77.52,0.007 ↴ ,0.92,1.19,0.77,9,0,0*5F\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	00	Proprietary message identifier: 00
2	time	hhmmss.ss	-	081350.00	UTC time. See section UTC representation in the integration manual for details.
3	lat	ddmm. mmmmm	-	4717.113210	Latitude (degrees and minutes), see <a href="#">format description</a>
4	NS	character	-	N	North/South Indicator
5	long	dddmm. mmmmm	-	00833.915187	Longitude (degrees and minutes), see <a href="#">format description</a>
6	EW	character	-	E	East/West indicator
7	altRef	numeric	m	546.589	Altitude above user datum ellipsoid
8	navStat	string	-	G3	Navigation Status: <ul style="list-style-type: none"> <li>• NF = No Fix</li> <li>• DR = Dead reckoning only solution</li> <li>• G2 = Stand alone 2D solution</li> <li>• G3 = Stand alone 3D solution</li> <li>• D2 = Differential 2D solution</li> <li>• D3 = Differential 3D solution</li> <li>• RK = Combined GPS + dead reckoning solution</li> <li>• TT = Time only solution</li> </ul>
9	hAcc	numeric	m	2.1	Horizontal accuracy estimate
10	vAcc	numeric	m	2.0	Vertical accuracy estimate
11	SOG	numeric	km/h	0.007	Speed over ground
12	COG	numeric	deg	77.52	Course over ground
13	vVel	numeric	m/s	0.007	Vertical velocity (positive downwards)
14	diffAge	numeric	s	-	Age of differential corrections (blank when DGPS is not used)
15	HDOP	numeric	-	0.92	HDOP, Horizontal Dilution of Precision
16	VDOP	numeric	-	1.19	VDOP, Vertical Dilution of Precision
17	TDOP	numeric	-	0.77	TDOP, Time Dilution of Precision
18	numSvs	numeric	-	9	Number of satellites used in the navigation solution

19	reserved	numeric	-	-	Reserved, always set to 0
20	DR	numeric	-	-	DR used
21	cs	hexadecimal	-	*5B	Checksum
22	CRLF	character	-	-	Carriage return and line feed

## 2.9.3 RATE (PUBX,40)

### 2.9.3.1 Set NMEA message output rate

Message NMEA-PUBX-RATE					
Set NMEA message output rate					
Type	Set				
Comment	Set/Get message rate configuration (s) to/from the receiver.				
	<ul style="list-style-type: none"> <li>Send rate is relative to the event a message is registered on. For example, if the rate of a navigation message is set to 2, the message is sent every second navigation solution.</li> </ul>				
Information	Class/ID: 0xf1 0x40      Number of fields: 11				
Structure	\$PUBX,40,msgId,rddc,rus1,rus2,rusb,rspl,reserved*cs\r\n				
Example	\$PUBX,40,GLL,1,0,0,0,0,0*5D\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	ID	numeric	-	40	Proprietary message identifier
2	msgId	string	-	GLL	NMEA message identifier
3	rddc	numeric	cycles	1	output rate on DDC <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
4	rus1	numeric	cycles	1	output rate on USART 1 <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
5	rus2	numeric	cycles	1	output rate on USART 2 <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
6	rusb	numeric	cycles	1	output rate on USB <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
7	rspl	numeric	cycles	1	output rate on SPI <ul style="list-style-type: none"> <li>0 disables that message from being output on this port</li> <li>1 means that this message is output every epoch</li> </ul>
8	reserved	numeric	-	-	Reserved: always fill with 0
9	cs	hexadecimal	-	*5D	Checksum
10	CRLF	character	-	-	Carriage return and line feed

## 2.9.4 SVSTATUS (PUBX,03)

### 2.9.4.1 Poll a PUBX,03 message

<b>Message</b> NMEA-PUBX-SVSTATUS						
Poll a PUBX,03 message						
Type	Poll request					
Comment	A PUBX,03 message is polled by sending the PUBX,03 message without any data fields.					
Information	Class/ID: 0xf1 0x03	Number of fields: 4				
Structure	\$PUBX,03*30\r\n					
Example	\$PUBX,03*30\r\n					
Payload:						
Field	Name	Format	Unit	Example	Description	
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence	
1	msgId	numeric	-	03	Set to 03 to poll a PUBX,03 message	
2	cs	hexadecimal	-	*30	Checksum	
3	CRLF	character	-	-	Carriage return and line feed	

### 2.9.4.2 Satellite status

<b>Message</b> NMEA-PUBX-SVSTATUS						
Satellite status						
Type	Output					
Comment	The PUBX,03 message contains satellite status information.					
Information	Class/ID: 0xf1 0x03	Number of fields: 5 + n·6				
Structure	\$PUBX,03,GT{,sv,s,az,el,cno,lck},*cs\r\n					
Example	\$PUBX,03,11,23,-,,,45,010,29,-,,,46,013,07,-,,,42,015,08,U,067,31,42,025,10,U,195,33,-,46,026,18,U,326,08,39,026,17,-,,,32,015,26,U,306,66,48,025,27,U,073,10,36,026,28,U,-,089,61,46,024,15,-,,,39,014*0D\r\n					
Payload:						
Field	Name	Format	Unit	Example	Description	
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence	
1	msgId	numeric	-	03	Proprietary message identifier: 03	
2	n	numeric	-	11	Number of GNSS satellites tracked	
Start of repeated group (n times)						
3 + n·6	sv	numeric	-	23	Satellite ID according to UBX svld mapping (see <a href="#">Satellite Numbering</a> )	
4 + n·6	s	character	-	-	Satellite status: <ul style="list-style-type: none"> <li>• - = Not used</li> <li>• U = Used in solution</li> <li>• e = Ephemeris available, but not used for navigation</li> </ul>	
5 + n·6	az	numeric	deg	-	Satellite azimuth (range: 0-359)	
6 + n·6	el	numeric	deg	-	Satellite elevation (<= 90)	
7 + n·6	cno	numeric	dBHz	45	Signal strength (C/N0, range 0-99), blank when not tracking	
8 + n·6	lck	numeric	s	010	Satellite carrier lock time (range: 0-64) <ul style="list-style-type: none"> <li>• 0 = code lock only</li> <li>• 64 = lock for 64 seconds or more</li> </ul>	
End of repeated group (n times)						
3 + n·6	cs	hexadecimal	-	*0D	Checksum	

4 + n·6 CRLF      character - - - Carriage return and line feed

## 2.9.5 TIME (PUBX,04)

### 2.9.5.1 Poll a PUBX,04 message

Message	NMEA-PUBX-TIME Poll a PUBX,04 message				
Type	Poll request				
Comment	A PUBX,04 message is polled by sending the PUBX,04 message without any data fields.				
Information	Class/ID: 0xf1 0x04      Number of fields: 4				
Structure	\$PUBX,04*37\r\n				
Example	\$PUBX,04*37\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	04	Set to 04 to poll a PUBX,04 message
2	cs	hexadecimal	-	*37	Checksum
3	CRLF	character	-	-	Carriage return and line feed

### 2.9.5.2 Time of day and clock information

Message	NMEA-PUBX-TIME Time of day and clock information				
Type	Output				
Comment					
Information	Class/ID: 0xf1 0x04      Number of fields: 12				
Structure	\$PUBX,04,time,date,utcTow,utcWk,leapSec,clkBias,clkDrift,tpGran,*cs\r\n				
Example	\$PUBX,04,073731.00,091202,113851.00,1196,15D,1930035,-2660.664,43,*3C\r\n				
Payload:					
Field	Name	Format	Unit	Example	Description
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	04	Proprietary message identifier: 04
2	time	hhmmss.ss	-	073731.00	UTC time. See section UTC representation in the integration manual for details.
3	date	ddmmyy	-	091202	UTC date, day, month, year. See section UTC representation in the integration manual for details.
4	utcTow	numeric	s	113851.00	UTC time of week
5	utcWk	numeric	-	1196	UTC week number, continues beyond 1023
6	leapSec	numeric/ text	s	15D	Leap seconds (not supported for protocol versions less than 13.01)  The number is marked with a D if the value is the firmware default value. If the value is not marked it has been received from a satellite.
7	clkBias	numeric	ns	1930035	Receiver clock bias
8	clkDrift	numeric	ns/s	-2660.664	Receiver clock drift
9	tpGran	numeric	ns	43	Time pulse granularity, the quantization error of the TIMEPULSE pin

10	cs	hexadecimal -	*3C	Checksum
11	CRLF	character -	-	Carriage return and line feed

## 3 UBX protocol


### 3.1 UBX protocol key features

u-blox receivers support a u-blox-proprietary protocol to communicate with a host computer. This protocol has the following key features:

- Compact – uses 8-bit binary data
- Checksum protected – uses a low-overhead checksum algorithm
- Modular – uses a two-stage message identifier (Class and Message ID)

### 3.2 UBX frame structure

The structure of a basic UBX frame is shown in the following diagram.

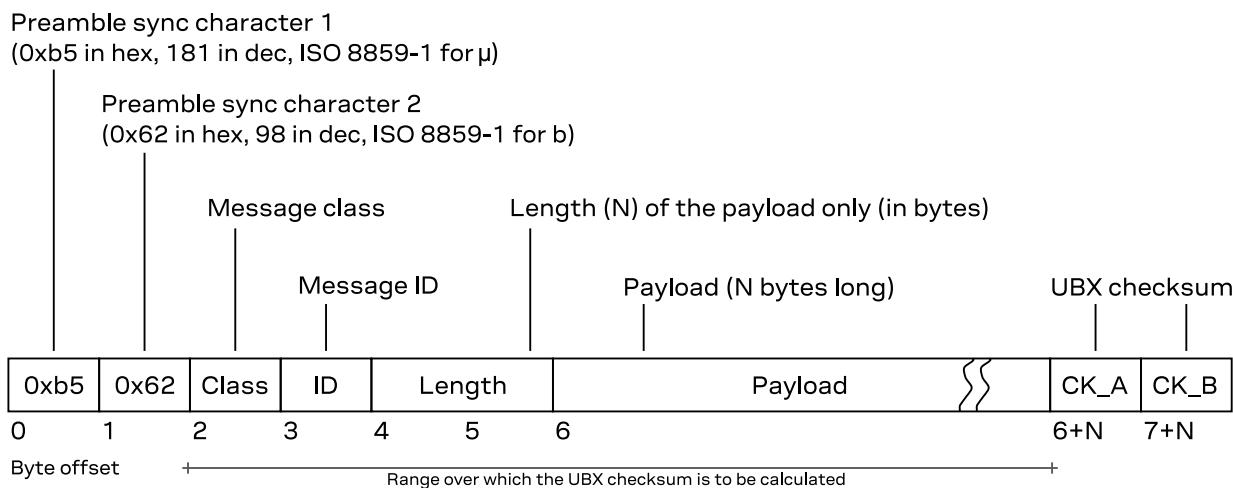

- Every *frame* starts with a 2-byte *preamble* consisting of two synchronization characters: 0xb5 and 0x62.
- A 1-byte *message class* field follows. A class is a group of messages that are related to each other.
- A 1-byte *message ID* field defines the message that is to follow.
- A 2-byte *length* field follows. The length is defined as being that of the payload only. It does not include the preamble, message class, message ID, length, or *UBX checksum* fields. The number format of the length field is an unsigned little-endian 16-bit integer (a "U2" in *UBX data types*).
- The *payload* field contains a variable number (= *length*) of bytes.
- The two 1-byte *CK\_A* and *CK\_B* fields hold a 16-bit checksum whose calculation is defined in *UBX checksum* section. This concludes the frame.

## 3.3 UBX payload definition rules

This section contains the rules and guidelines for UBX message payloads. See also [UBX message example](#).

### 3.3.1 UBX structure packing

Values are placed in such an order that structure packing is not a problem. This means that two-byte values shall start on offsets that are a multiple of two; four-byte values shall start at a multiple of four; and so on.

### 3.3.2 UBX reserved elements

Some messages contain reserved fields or bits to allow for future expansion. The contents of these elements should be ignored in output messages and must be set to zero in input messages. Where a message is output and subsequently returned to the receiver as an input message, reserved elements can either be explicitly set to zero or left with whatever value they were output with.

For fields in a bitfield the same rules apply. Note that bits not described are automatically reserved and are not explicitly stated (see [UBX message example](#)).

### 3.3.3 UBX undefined values

The description of some fields provide specific meanings for specific values. For example, the field `gnssId` appears in many UBX messages and uses 0 to indicate GPS, 1 for SBAS and so on (see [GNSS identifiers](#) for details); however it is usually stored in a byte with far more possible values than the handful currently defined. All such undefined values are reserved for future expansion and therefore should not be used.

### 3.3.4 UBX conditional values

Some UBX messages use validity flag fields to indicate whether the values of some value fields are valid. For example, the [UBX-NAV-PVT](#) message has the `validDate` and `validTime` fields that indicate whether the date (year, month and day fields), and, respectively, the time (hour, min and sec fields) are valid. This means that these value fields will only contain meaningful data if the corresponding flag field is set (has the value 1).

### 3.3.5 UBX data types

The following data types (number formats) are defined.

Name	Type	Size (Bytes)	Range	Resolution
U1	unsigned 8-bit integer	1	0...2 <sup>8</sup> -1	1
I1	signed 8-bit integer, two's complement	1	-2 <sup>7</sup> ...2 <sup>7</sup> -1	1
X1	8-bit bitfield	1	n/a	n/a
U2	unsigned little-endian 16-bit integer	2	0...2 <sup>16</sup> -1	1
I2	signed little-endian 16-bit integer, two's complement	2	-2 <sup>15</sup> ...2 <sup>15</sup> -1	1
X2	16-bit little-endian bitfield	2	n/a	n/a
U4	unsigned little-endian 32-bit integer	4	0...2 <sup>32</sup> -1	1
I4	signed little-endian 32-bit integer, two's complement	4	-2 <sup>31</sup> ...2 <sup>31</sup> -1	1
X4	32-bit little-endian bitfield	4	n/a	n/a

Name	Type	Size (Bytes)	Range	Resolution
R4	IEEE 754 single (32-bit) precision	4	-2 <sup>127</sup> ...2 <sup>127</sup>	~ value·2 <sup>-24</sup>
R8	IEEE 754 double (64-bit) precision	8	-2 <sup>1023</sup> ...2 <sup>1023</sup>	~ value·2 <sup>-53</sup>
CH	ASCII / ISO 8859-1 char (8-bit)	1	n/a	n/a
U <sub>:n</sub>	unsigned bitfield value of $n$ bits width	var.	variable	variable
I <sub>:n</sub>	signed (two's complement) bitfield value of $n$ bits width	var.	variable	variable
S <sub>:n</sub>	signed bitfield value of $n$ bits width, in sign (most significant bit) and magnitude (remaining bits) notation	var.	variable	variable

### 3.3.6 UBX fields scale and unit

Fields in UBX messages can have a unit defined. Whenever possible, SI units and symbols are used (e.g. "m" for meters, "s" for seconds). For civil (UTC) time representation units of years (y), months (month), days (d), hours (h), minutes (min) and seconds (s) are used.

Fields in UBX messages can have a scale factor defined. Unity (factor 1) is assumed if no scale is specified. For integer type fields this is often combined with a unit. When a scale is combined with a unit, the scale represents the smallest storage unit. For example, if meters (m) are expressed (stored) in centimeters the scale would be 0.01 (or 1e-2). This is equivalent of specifying a unit of centimeters (cm) and no scale.

The description of some integer values (e.g. U2, I4 or I8) indicates a fixed-point format (e.g. [UU.FF], [IIII.IFF] or [IIIIII.IFFFFFF]). The fixed-point value can be retrieved from the integer value by first casting it to appropriate type (e.g. as a floating-point number) and then scaling it with the indicated scaling factor.

### 3.3.7 UBX repeated fields

There are two types of repetitions in UBX messages. The first type specifies that a single field is repeated a constant number of times. This repetition is defined in the type of the field. For example, the [UBX message example](#) can specify a field data of type U1[5]. In this case the data field should be interpreted as an array of five U1 values.

The second type of repetition in messages is referred to as *repeated groups*, which groups one or more fields into a block of payload data. There are several types of repetition:

- The number of repetitions of *variable-by-field group* is indicated by another, earlier field in the same message. The number of repetitions can be zero or more, depending on the value of the referenced field.
- A *constant group* has a constant number of repetitions.
- An *optional group* is repeated zero or one times, depending on the available payload data. That is, the fields are present in the message only if the payload of the message is large enough to cover the whole group of fields.
- The number of repetitions of a *variable-by-size group* is given by the available payload size. The group will repeat until there is not enough payload data left to cover the whole group of fields another time.

Note that only some combinations of repeated groups of fields are possible in a single message. See also [UBX payload decoding](#).

### 3.3.8 UBX payload decoding

UBX message payloads are designed so that the data (fields) can be extracted by a single pass through the payload from start to end. Fixed-size messages are the trivial case where the offset of all fields is unambiguously defined. Variable-size messages have variable number of repetitions of one or multiple groups of fields. For groups where the number of repetitions is given by the value of another field, that field can always be found at a fixed offset in the message payload before the respective group of fields. Groups whose number of repetitions depend on the payload size can only be the last group of fields in a message and only one such group may exist in a message. See also [UBX repeated fields](#).

## 3.4 UBX checksum

The checksum is calculated over the message, starting and including the class field up until, but excluding, the checksum fields (see the figure [UBX frame structure](#)).

The checksum algorithm used is the 8-bit Fletcher algorithm, which is used in the TCP standard [RFC 1145](#)). This algorithm works as follows:

- Buffer [N] is an array of bytes that contains the data over which the checksum is to be calculated.
- The two CK\_A and CK\_B values are 8-bit unsigned integers, only! If implementing with larger-sized integer values, make sure to mask both CK\_A and CK\_B with the value 0xff after both operations in the loop.
- After the loop, the two U1 values contain the checksum, transmitted after the message payload, which concludes the frame.

```
1 CK_A = 0, CK_B = 0
2 For (I = 0; I < N; I++)
3 {
4     CK_A = CK_A + Buffer[I]
5     CK_B = CK_B + CK_A
6 }
```

## 3.5 UBX message flow

There are certain features associated with the messages being sent back and forth:

### 3.5.1 UBX acknowledgement

When messages from the class CFG are sent to the receiver, the receiver will send an "acknowledge" ([UBX-ACK-ACK](#)) or a "not acknowledge" ([UBX-ACK-NAK](#)) message back to the sender, depending on whether or not the message was processed correctly.

Some messages from other classes also use the same acknowledgement mechanism.

### 3.5.2 UBX polling mechanism

The UBX protocol is designed so that messages can be polled by sending the message required to the receiver but without a payload (or with just a single parameter that identifies the poll request). The receiver then responds with the same message with the payload populated.

## 3.6 GNSS, satellite, and signal numbering

See [GNSS, satellite, and signal identifiers](#) for details on how GNSS, satellites and signals are numbered in the UBX protocol.

## 3.7 UBX message example

This is an example of the definition of UBX messages as shown in the following sections.

Message <b>UBX-DEMO-EXAMPLE</b>						
① Example demo message						
Type ②	Periodic/pollled					
Comment	This is a comment that describes the use of the demo example message.					
③	There can be references to other sections in the documentation (such as: <a href="#">UBX protocol</a> ). ☞ Note that there can be important remarks here.					
Message ④	Header	Class ID	Length (bytes)	Payload	Checksum	
Structure	0xb5 0x62 0x01 0x07 16 + numRepeat*4			see below	CK_A CK_B	
<i>Payload description:</i> ⑤						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	aField	-	-	a field that contains an unsigned integer with no particular scale or unit	
4	I4	anotherField	1e-2	m	a field that contains a length in meters (m) with a scale of 1e-2 (= 0.01), i.e. a length in centimeters	
8	X2	bitfield ⑥	-	-	this field contains flags or values smaller than one byte, whose definition follows below (bits not described are <a href="#">reserved</a> )	
bit 0	U:1	aFieldValid	-	-	the first bit in bitfield indicates whether the aField is valid or not (see <a href="#">UBX conditional values</a> )	
bit 1	U:1	someFlag	-	-	the second bit is a flag (1 = true, 0 = false)	
bits 5...2	U:4	aBitFieldValue	-	-	a 4-bits value (range: 0...15)	
10	U1[5] ⑦	reserved0	-	-	a <a href="#">reserved</a> field, whose value shall be ignored (in output messages) or set to 0 (in input messages)	
15	U1	numRepeat	-	-	number of repetitions in the group of fields below	
<i>Start of repeated group (numRepeat times)</i> ⑧						
16 + n*4	I2	someValue	-	-	a signed value in a repeated group of fields	
18 + n*4	U2	anotherValue	-	-	another value in a repeated group of fields	
<i>End of repeated group (numRepeat times)</i>						

① The first line shows the message name (see [Message naming](#)). The second line shows a short description of the message.

② The message type (see [Message types](#)).

③ This section contains comments that describe the message. Often links to other related sections in the documentation or other related messages are found here.

- ④ The message structure gives the parameters for the [UBX frame structure](#), notably the message class and message ID values and the payload length. For many messages the payload length is a fixed number (of bytes). Messages that contain repeated blocks of information (fields) have a variable payload (see [UBX repeated fields](#)).
- ⑤ The message payload definition is given as a list of fields and their parameters. Each field starts at a specified offset (in bytes) in the payload (see also [UBX structure packing](#)), is of a specific type (see [UBX data types](#)), has a unique name (within the message), and a description. Optionally, fields can have a scale and/or a unit (see [UBX fields scale and unit](#)).
- ⑥ Bitfields ("X" types) are broken down into smaller parts. Each part can be one or more bits wide. Values that are two or more bits wide can be unsigned or one of two signed value representation (see [UBX data types](#)). Note that the ten unused bits 15...6 are not explicitly stated as [UBX reserved elements](#).
- ⑦ Fields can be arrays of values of the same type (see [UBX repeated fields](#)).
- ⑧ Groups of fields can be repeated in the payload. The number of repetitions can be given by another field in the message (this example), a constant number, zero or one times (known as "optional group"), or derived from the remaining payload size (labeled as "repeated N times"). See also [UBX repeated fields](#) and [UBX payload decoding](#).

## 3.8 UBX messages overview

Message	Class/ID	Description (Type)
<b>UBX-ACK – Acknowledgement and negative acknowledgement messages</b>		
UBX-ACK-ACK	0x05 0x01	<ul style="list-style-type: none"><li>• Message acknowledged (Output)</li></ul>
UBX-ACK-NAK	0x05 0x00	<ul style="list-style-type: none"><li>• Message not acknowledged (Output)</li></ul>
<b>UBX-CFG – Configuration and command messages</b>		
UBX-CFG-ANT	0x06 0x13	<ul style="list-style-type: none"><li>• Antenna control settings (Get/set)</li></ul>
UBX-CFG-CFG	0x06 0x09	<ul style="list-style-type: none"><li>• Clear, save and load configurations (Command)</li></ul>
UBX-CFG-DAT	0x06 0x06	<ul style="list-style-type: none"><li>• Set user-defined datum (Set)</li><li>• Get currently defined datum (Get)</li></ul>
UBX-CFG-DGNSS	0x06 0x70	<ul style="list-style-type: none"><li>• DGNSS configuration (Get/set)</li></ul>
UBX-CFG-GEOFENCE	0x06 0x69	<ul style="list-style-type: none"><li>• Geofencing configuration (Get/set)</li></ul>
UBX-CFG-GNSS	0x06 0x3e	<ul style="list-style-type: none"><li>• GNSS system configuration (Get/set)</li></ul>
UBX-CFG-INF	0x06 0x02	<ul style="list-style-type: none"><li>• Poll configuration for one protocol (Poll request)</li><li>• Information message configuration (Get/set)</li></ul>
UBX-CFG-LOGFILTER	0x06 0x47	<ul style="list-style-type: none"><li>• Data logger configuration (Get/set)</li></ul>
UBX-CFG-MSG	0x06 0x01	<ul style="list-style-type: none"><li>• Poll a message configuration (Poll request)</li><li>• Set message rate(s) (Get/set)</li><li>• Set message rate (Get/set)</li></ul>
UBX-CFG-NAV5	0x06 0x24	<ul style="list-style-type: none"><li>• Navigation engine settings (Get/set)</li></ul>
UBX-CFG-NAVX5	0x06 0x23	<ul style="list-style-type: none"><li>• Navigation engine expert settings (Get/set)</li></ul>
UBX-CFG-NMEA	0x06 0x17	<ul style="list-style-type: none"><li>• Extended NMEA protocol configuration V1 (Get/set)</li></ul>
UBX-CFG-ODO	0x06 0x1e	<ul style="list-style-type: none"><li>• Odometer, low-speed COG engine settings (Get/set)</li></ul>
UBX-CFG-PRT	0x06 0x00	<ul style="list-style-type: none"><li>• Polls the configuration for one I/O port (Poll request)</li><li>• Port configuration for UART ports (Get/set)</li><li>• Port configuration for USB port (Get/set)</li><li>• Port configuration for SPI port (Get/set)</li><li>• Port configuration for I2C (DDC) port (Get/set)</li></ul>

<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
UBX-CFG-PWR	0x06 0x57	<ul style="list-style-type: none"> <li>Put receiver in a defined power state (Set)</li> </ul>
UBX-CFG-RATE	0x06 0x08	<ul style="list-style-type: none"> <li>Navigation/measurement rate settings (Get/set)</li> </ul>
UBX-CFG-RINV	0x06 0x34	<ul style="list-style-type: none"> <li>Contents of remote inventory (Get/set)</li> </ul>
UBX-CFG-RST	0x06 0x04	<ul style="list-style-type: none"> <li>Reset receiver / Clear backup data structures (Command)</li> </ul>
UBX-CFG-SBAS	0x06 0x16	<ul style="list-style-type: none"> <li>SBAS configuration (Get/set)</li> </ul>
UBX-CFG-TMODE3	0x06 0x71	<ul style="list-style-type: none"> <li>Time mode settings 3 (Get/set)</li> </ul>
UBX-CFG-TP5	0x06 0x31	<ul style="list-style-type: none"> <li>Time pulse parameters (Get/set)</li> </ul>
UBX-CFG-USB	0x06 0x1b	<ul style="list-style-type: none"> <li>USB configuration (Get/set)</li> </ul>
UBX-CFG-VALDEL	0x06 0x8c	<ul style="list-style-type: none"> <li>Delete configuration item values (Set)</li> <li>Delete configuration item values (with transaction) (Set)</li> </ul>
UBX-CFG-VALGET	0x06 0x8b	<ul style="list-style-type: none"> <li>Get configuration items (Poll request)</li> <li>Configuration items (Polled)</li> </ul>
UBX-CFG-VALSET	0x06 0x8a	<ul style="list-style-type: none"> <li>Set configuration item values (Set)</li> <li>Set configuration item values (with transaction) (Set)</li> </ul>
<b>UBX-INF – Information messages</b>		
UBX-INF-DEBUG	0x04 0x04	<ul style="list-style-type: none"> <li>ASCII output with debug contents (Output)</li> </ul>
UBX-INF-ERROR	0x04 0x00	<ul style="list-style-type: none"> <li>ASCII output with error contents (Output)</li> </ul>
UBX-INF-NOTICE	0x04 0x02	<ul style="list-style-type: none"> <li>ASCII output with informational contents (Output)</li> </ul>
UBX-INF-TEST	0x04 0x03	<ul style="list-style-type: none"> <li>ASCII output with test contents (Output)</li> </ul>
UBX-INF-WARNING	0x04 0x01	<ul style="list-style-type: none"> <li>ASCII output with warning contents (Output)</li> </ul>
<b>UBX-LOG – Logging messages</b>		
UBX-LOG-CREATE	0x21 0x07	<ul style="list-style-type: none"> <li>Create log file (Command)</li> </ul>
UBX-LOG-ERASE	0x21 0x03	<ul style="list-style-type: none"> <li>Erase logged data (Command)</li> </ul>
UBX-LOG-FINDTIME	0x21 0x0e	<ul style="list-style-type: none"> <li>Find index of a log entry based on a given time (Input)</li> <li>Response to FINDTIME request (Output)</li> </ul>
UBX-LOG-INFO	0x21 0x08	<ul style="list-style-type: none"> <li>Poll for log information (Poll request)</li> <li>Log information (Output)</li> </ul>
UBX-LOG-RETRIEVE	0x21 0x09	<ul style="list-style-type: none"> <li>Request log data (Command)</li> </ul>
UBX-LOG-RETRIEVEPOS	0x21 0x0b	<ul style="list-style-type: none"> <li>Position fix log entry (Output)</li> </ul>
UBX-LOG-RETRIEVEPOSEXTRA	0x21 0x0f	<ul style="list-style-type: none"> <li>Odometer log entry (Output)</li> </ul>
UBX-LOG-RETRIEVESTRING	0x21 0x0d	<ul style="list-style-type: none"> <li>Byte string log entry (Output)</li> </ul>
UBX-LOG-STRING	0x21 0x04	<ul style="list-style-type: none"> <li>Store arbitrary string in on-board flash (Command)</li> </ul>
<b>UBX-MGA – GNSS assistance (A-GNSS) messages</b>		
UBX-MGA-ACK	0x13 0x60	<ul style="list-style-type: none"> <li>Multiple GNSS acknowledge message (Output)</li> </ul>
UBX-MGA-BDS	0x13 0x03	<ul style="list-style-type: none"> <li>BeiDou ephemeris assistance for satellites svld 1..37 (Input)</li> <li>BeiDou almanac assistance (Input)</li> <li>BeiDou health assistance (Input)</li> <li>BeiDou UTC assistance (Input)</li> <li>BeiDou ionosphere assistance (Input)</li> </ul>
UBX-MGA-DBD	0x13 0x80	<ul style="list-style-type: none"> <li>Poll the navigation database (Poll request)</li> <li>Navigation database dump entry (Input/output)</li> </ul>
UBX-MGA-GAL	0x13 0x02	<ul style="list-style-type: none"> <li>Galileo ephemeris assistance (Input)</li> <li>Galileo almanac assistance (Input)</li> <li>Galileo GPS time offset assistance (Input)</li> <li>Galileo UTC assistance (Input)</li> </ul>
UBX-MGA-GLO	0x13 0x06	<ul style="list-style-type: none"> <li>GLONASS ephemeris assistance (Input)</li> </ul>

<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
		<ul style="list-style-type: none"> <li>• GLONASS almanac assistance (Input)</li> <li>• GLONASS auxiliary time offset assistance (Input)</li> </ul>
UBX-MGA-GPS	0x13 0x00	<ul style="list-style-type: none"> <li>• GPS ephemeris assistance (Input)</li> <li>• GPS almanac assistance (Input)</li> <li>• GPS health assistance (Input)</li> <li>• GPS UTC assistance (Input)</li> <li>• GPS ionosphere assistance (Input)</li> </ul>
UBX-MGA-INI	0x13 0x40	<ul style="list-style-type: none"> <li>• Initial position assistance (Input)</li> <li>• Initial time assistance (Input)</li> <li>• Initial clock drift assistance (Input)</li> <li>• Initial frequency assistance (Input)</li> </ul>
UBX-MGA-QZSS	0x13 0x05	<ul style="list-style-type: none"> <li>• QZSS ephemeris assistance (Input)</li> <li>• QZSS almanac assistance (Input)</li> <li>• QZSS health assistance (Input)</li> </ul>
<b>UBX-MON – Monitoring messages</b>		
UBX-MON-COMMS	0x0a 0x36	<ul style="list-style-type: none"> <li>• Communication port information (Periodic/polled)</li> </ul>
UBX-MON-GNSS	0x0a 0x28	<ul style="list-style-type: none"> <li>• Information message major GNSS selection (Polled)</li> </ul>
UBX-MON-HW	0x0a 0x09	<ul style="list-style-type: none"> <li>• Hardware status (Periodic/polled)</li> </ul>
UBX-MON-HW2	0x0a 0x0b	<ul style="list-style-type: none"> <li>• Extended hardware status (Periodic/polled)</li> </ul>
UBX-MON-HW3	0x0a 0x37	<ul style="list-style-type: none"> <li>• I/O pin status (Periodic/polled)</li> </ul>
UBX-MON-IO	0x0a 0x02	<ul style="list-style-type: none"> <li>• I/O system status (Periodic/polled)</li> </ul>
UBX-MON-MSGPP	0x0a 0x06	<ul style="list-style-type: none"> <li>• Message parse and process status (Periodic/polled)</li> </ul>
UBX-MON-PATCH	0x0a 0x27	<ul style="list-style-type: none"> <li>• Installed patches (Polled)</li> </ul>
UBX-MON-RF	0x0a 0x38	<ul style="list-style-type: none"> <li>• RF information (Periodic/polled)</li> </ul>
UBX-MON-RXBUF	0x0a 0x07	<ul style="list-style-type: none"> <li>• Receiver buffer status (Periodic/polled)</li> </ul>
UBX-MON-RXR	0x0a 0x21	<ul style="list-style-type: none"> <li>• Receiver status information (Output)</li> </ul>
UBX-MON-SPAN	0x0a 0x31	<ul style="list-style-type: none"> <li>• Signal characteristics (Periodic/polled)</li> </ul>
UBX-MON-SYS	0x0a 0x39	<ul style="list-style-type: none"> <li>• Current system performance information (Periodic/polled)</li> </ul>
UBX-MON-TXBUF	0x0a 0x08	<ul style="list-style-type: none"> <li>• Transmitter buffer status (Periodic/polled)</li> </ul>
UBX-MON-VER	0x0a 0x04	<ul style="list-style-type: none"> <li>• Poll receiver and software version (Poll request)</li> <li>• Receiver and software version (Polled)</li> </ul>
<b>UBX-NAV – Navigation solution messages</b>		
UBX-NAV-CLOCK	0x01 0x22	<ul style="list-style-type: none"> <li>• Clock solution (Periodic/polled)</li> </ul>
UBX-NAV-COV	0x01 0x36	<ul style="list-style-type: none"> <li>• Covariance matrices (Periodic/polled)</li> </ul>
UBX-NAV-DOP	0x01 0x04	<ul style="list-style-type: none"> <li>• Dilution of precision (Periodic/polled)</li> </ul>
UBX-NAV-EOE	0x01 0x61	<ul style="list-style-type: none"> <li>• End of epoch (Periodic)</li> </ul>
UBX-NAV-GEOFENCE	0x01 0x39	<ul style="list-style-type: none"> <li>• Geofencing status (Periodic/polled)</li> </ul>
UBX-NAV-HPPOSECEF	0x01 0x13	<ul style="list-style-type: none"> <li>• High precision position solution in ECEF (Periodic/polled)</li> </ul>
UBX-NAV-HPPOSLLH	0x01 0x14	<ul style="list-style-type: none"> <li>• High precision geodetic position solution (Periodic/polled)</li> </ul>
UBX-NAV-ODO	0x01 0x09	<ul style="list-style-type: none"> <li>• Odometer solution (Periodic/polled)</li> </ul>
UBX-NAV-ORB	0x01 0x34	<ul style="list-style-type: none"> <li>• GNSS orbit database info (Periodic/polled)</li> </ul>
UBX-NAV-PL	0x01 0x62	<ul style="list-style-type: none"> <li>• Protection level information (Periodic)</li> </ul>
UBX-NAV-POSECEF	0x01 0x01	<ul style="list-style-type: none"> <li>• Position solution in ECEF (Periodic/polled)</li> </ul>
UBX-NAV-POSLLH	0x01 0x02	<ul style="list-style-type: none"> <li>• Geodetic position solution (Periodic/polled)</li> </ul>
UBX-NAV-PVT	0x01 0x07	<ul style="list-style-type: none"> <li>• Navigation position velocity time solution (Periodic/polled)</li> </ul>
UBX-NAV-RELPOSNED	0x01 0x3c	<ul style="list-style-type: none"> <li>• Relative positioning information in NED frame (Periodic/polled)</li> </ul>

<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
UBX-NAV-RESETODO	0x01 0x10	• Reset odometer (Command)
UBX-NAV-SAT	0x01 0x35	• Satellite information (Periodic/polled)
UBX-NAV-SBAS	0x01 0x32	• SBAS status data (Periodic/polled)
UBX-NAV-SIG	0x01 0x43	• Signal information (Periodic/polled)
UBX-NAV-SLAS	0x01 0x42	• QZSS L1S SLAS status data (Periodic/polled)
UBX-NAV-STATUS	0x01 0x03	• Receiver navigation status (Periodic/polled)
UBX-NAV-SVIN	0x01 0x3b	• Survey-in data (Periodic/polled)
UBX-NAV-TIMEBDS	0x01 0x24	• BeiDou time solution (Periodic/polled)
UBX-NAV-TIMEGAL	0x01 0x25	• Galileo time solution (Periodic/polled)
UBX-NAV-TIMEGLO	0x01 0x23	• GLONASS time solution (Periodic/polled)
UBX-NAV-TIMEGPS	0x01 0x20	• GPS time solution (Periodic/polled)
UBX-NAV-TIMELS	0x01 0x26	• Leap second event information (Periodic/polled)
UBX-NAV-TIMEQZSS	0x01 0x27	• QZSS time solution (Periodic/polled)
UBX-NAV-TIMEUTC	0x01 0x21	• UTC time solution (Periodic/polled)
UBX-NAV-VELECEF	0x01 0x11	• Velocity solution in ECEF (Periodic/polled)
UBX-NAV-VELNED	0x01 0x12	• Velocity solution in NED frame (Periodic/polled)
<b>UBX-NAV2 – Navigation solution messages (Secondary output)</b>		
UBX-NAV2-CLOCK	0x29 0x22	• Clock solution (Periodic/polled)
UBX-NAV2-COV	0x29 0x36	• Covariance matrices (Periodic/polled)
UBX-NAV2-DOP	0x29 0x04	• Dilution of precision (Periodic/polled)
UBX-NAV2-EOE	0x29 0x61	• End of epoch (Periodic)
UBX-NAV2-ODO	0x29 0x09	• Odometer solution (Periodic/polled)
UBX-NAV2-POSECEF	0x29 0x01	• Position solution in ECEF (Periodic/polled)
UBX-NAV2-POSLH	0x29 0x02	• Geodetic position solution (Periodic/polled)
UBX-NAV2-PVT	0x29 0x07	• Navigation position velocity time solution (Periodic/polled)
UBX-NAV2-SAT	0x29 0x35	• Satellite information (Periodic/polled)
UBX-NAV2-SBAS	0x29 0x32	• SBAS status data (Periodic/polled)
UBX-NAV2-SIG	0x29 0x43	• Signal information (Periodic/polled)
UBX-NAV2-SLAS	0x29 0x42	• QZSS L1S SLAS status data (Periodic/polled)
UBX-NAV2-STATUS	0x29 0x03	• Receiver navigation status (Periodic/polled)
UBX-NAV2-SVIN	0x29 0x3b	• Survey-in data (Periodic/polled)
UBX-NAV2-TIMEBDS	0x29 0x24	• BeiDou time solution (Periodic/polled)
UBX-NAV2-TIMEGAL	0x29 0x25	• Galileo time solution (Periodic/polled)
UBX-NAV2-TIMEGLO	0x29 0x23	• GLONASS time solution (Periodic/polled)
UBX-NAV2-TIMEGPS	0x29 0x20	• GPS time solution (Periodic/polled)
UBX-NAV2-TIMELS	0x29 0x26	• Leap second event information (Periodic/polled)
UBX-NAV2-TIMEQZSS	0x29 0x27	• QZSS time solution (Periodic/polled)
UBX-NAV2-TIMEUTC	0x29 0x21	• UTC time solution (Periodic/polled)
UBX-NAV2-VELECEF	0x29 0x11	• Velocity solution in ECEF (Periodic/polled)
UBX-NAV2-VELNED	0x29 0x12	• Velocity solution in NED frame (Periodic/polled)
<b>UBX-RXM – Receiver manager messages</b>		
UBX-RXM-COR	0x02 0x34	• Differential correction input status (Output)
UBX-RXM-MEASX	0x02 0x14	• Satellite measurements for RRLP (Periodic/polled)
UBX-RXM-PMP	0x02 0x72	• PMP (LBAND) message (Input)

<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
UBX-RXM-PMREQ	0x02 0x41	<ul style="list-style-type: none"> <li>Power management request (Command)</li> </ul>
UBX-RXM-QZSSL6	0x02 0x73	<ul style="list-style-type: none"> <li>QZSS L6 message (Input)</li> </ul>
UBX-RXM-RAWX	0x02 0x15	<ul style="list-style-type: none"> <li>Multi-GNSS raw measurements (Periodic/polled)</li> </ul>
UBX-RXM-RLM	0x02 0x59	<ul style="list-style-type: none"> <li>Galileo SAR short-RLM report (Output)</li> <li>Galileo SAR long-RLM report (Output)</li> </ul>
UBX-RXM-RTCM	0x02 0x32	<ul style="list-style-type: none"> <li>RTCM input status (Output)</li> </ul>
UBX-RXM-SFRBX	0x02 0x13	<ul style="list-style-type: none"> <li>Broadcast navigation data subframe (Output)</li> </ul>
UBX-RXM-SPARTN	0x02 0x33	<ul style="list-style-type: none"> <li>SPARTN input status (Output)</li> </ul>
UBX-RXM-SPARTNKEY	0x02 0x36	<ul style="list-style-type: none"> <li>Poll installed keys (Poll request)</li> <li>Transfer dynamic SPARTN keys (Input/output)</li> </ul>
<b>UBX-SEC – Security messages</b>		
UBX-SEC-OSNMA	0x27 0x0a	<ul style="list-style-type: none"> <li>Galileo Open Service Navigation Message Authentication (OSNMA) security information (Periodic/polled)</li> </ul>
UBX-SEC-SIG	0x27 0x09	<ul style="list-style-type: none"> <li>Signal security information (Periodic/polled)</li> </ul>
UBX-SEC-SIGLOG	0x27 0x10	<ul style="list-style-type: none"> <li>Signal security log (Periodic/polled)</li> </ul>
UBX-SEC-UNIQID	0x27 0x03	<ul style="list-style-type: none"> <li>Unique chip ID (Output)</li> </ul>
<b>UBX-TIM – Timing messages</b>		
UBX-TIM-TM2	0x0d 0x03	<ul style="list-style-type: none"> <li>Time mark data (Periodic/polled)</li> </ul>
UBX-TIM-TP	0x0d 0x01	<ul style="list-style-type: none"> <li>Time pulse time data (Periodic/polled)</li> </ul>
UBX-TIM-VRFY	0x0d 0x06	<ul style="list-style-type: none"> <li>Sourced time verification (Periodic/polled)</li> </ul>
<b>UBX-UPD – Firmware update messages</b>		
UBX-UPD-SOS	0x09 0x14	<ul style="list-style-type: none"> <li>Poll backup restore status (Poll request)</li> <li>Create backup in flash (Command)</li> <li>Clear backup in flash (Command)</li> <li>Backup creation acknowledge (Output)</li> <li>System restored from backup (Output)</li> </ul>

## 3.9 UBX-ACK (0x05)

The messages in the UBX-ACK class are used to indicate acknowledgement or rejection (i.e. negative acknowledgement) of input messages, such as UBX-CFG messages.

### 3.9.1 UBX-ACK-ACK (0x05 0x01)

#### 3.9.1.1 Message acknowledged

<b>Message</b>	UBX-ACK-ACK					
	Message acknowledged					
Type	Output					
Comment	Output upon processing of an input message. A UBX-ACK-ACK is sent as soon as possible but at least within one second.					
<b>Message structure</b>						
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x05	0x01	2	see below	CK_A CK_B
<b>Payload description:</b>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	clsID	-	-	Class ID of the Acknowledged Message	

1	U1	msgID	-	-	Message ID of the Acknowledged Message
---	----	-------	---	---	--

## 3.9.2 UBX-ACK-NAK (0x05 0x00)

### 3.9.2.1 Message not acknowledged

Message	UBX-ACK-NAK Message not acknowledged				
Type	Output				
Comment	Output upon processing of an input message. A UBX-ACK-NAK is sent as soon as possible but at least within one second.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x05	0x00	2
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	clsID	-	-	Class ID of the Not-Acknowledged Message
1	U1	msgID	-	-	Message ID of the Not-Acknowledged Message

## 3.10 UBX-CFG (0x06)

The messages in the UBX-CFG class are used to configure the receiver and poll current configuration values as well as for sending commands to the receiver. Unless stated otherwise, any message in this class sent to the receiver is either acknowledged (by a [UBX-ACK-ACK](#) message) if processed successfully or rejected (with a [UBX-ACK-NAK](#) message) if processed unsuccessfully.

### 3.10.1 UBX-CFG-ANT (0x06 0x13)

#### 3.10.1.1 Antenna control settings

Message	UBX-CFG-ANT Antenna control settings				
Type	Get/set				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. This message allows the user to configure the antenna supervisor. The antenna supervisor can be used to detect the status of an active antenna and control it. It can be used to turn off the supply to the antenna in the event of a short circuit (for example) or to manage power consumption in power save mode. Refer to antenna supervisor configuration in the integration manual for more information regarding the behavior of the antenna supervisor. Note that not all pins can be used for antenna supervisor operation, the default pins are recommended. Consult the integration manual if you need to use the other pins.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x06	0x13	4
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X2	flags	-	-	Antenna flag mask
bit 0	U <sub>1</sub>	svcs	-	-	Enable antenna supply voltage control signal
bit 1	U <sub>1</sub>	scd	-	-	Enable short circuit detection

	bit 2	U <sub>:1</sub>	ocd	-	-	Enable open circuit detection
	bit 3	U <sub>:1</sub>	pdwnOnSCD	-	-	Power down antenna supply if short circuit is detected. (only in combination with bit 1)
	bit 4	U <sub>:1</sub>	recovery	-	-	Enable automatic recovery from short state
2	X2	pins	-	-	-	Antenna pin configuration
	bits 4...0	U <sub>:5</sub>	pinSwitch	-	-	PIO-pin used for switching antenna supply
	bits 9...5	U <sub>:5</sub>	pinSCD	-	-	PIO-pin used for detecting a short in the antenna supply
	bits 14...10	U <sub>:5</sub>	pinOCD	-	-	PIO-pin used for detecting open/not connected antenna
	bit 15	U <sub>:1</sub>	reconfig	-	-	if set to one, and this command is sent to the receiver, the receiver will reconfigure the pins as specified.

### 3.10.2 UBX-CFG-CFG (0x06 0x09)

#### 3.10.2.1 Clear, save and load configurations

Message	UBX-CFG-CFG												
Type	Command												
Comment	<p>See <a href="#">Receiver configuration</a> for a detailed description on how receiver configuration should be used. The behavior of this message has changed for protocol versions greater than 23.01. Use UBX-CFG-VALSET and UBX-CFG-VALDEL with the appropriate layers instead. These new messages support selective saving and clearing to retain the behavior removed from this message. The three masks which were used to clear, save and load a subsection of configuration have lost their meaning. It is no longer possible to save or clear a subsection of the configuration using this message. The behavior of the masks is now:</p> <ul style="list-style-type: none"> <li>• if any bit is set in the clearMask: all configuration in the selected non-volatile memory is deleted</li> <li>• if any bit is set in the saveMask: all current configuration is stored (copied) to the selected layers</li> <li>• if any bit is set in the loadMask: The current configuration is discarded and rebuilt from all the lower layers</li> </ul> <p>Note that commands can be combined. The sequence of execution is clear, save, then load. The receiver replies with a single UBX-ACK-ACK or UBX-ACK-NAK. A UBX-ACK-ACK indicates that all operations were successful. A UBX-ACK-NAK indicates that at least one of the configured operations was unsuccessful. It is recommended to send individual commands for a more comprehensive monitoring of the success or not of the individual operations.</p> <p><small>☞ Old functionality of this message is not available in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</small></p>												
Message structure	<table border="1"> <tr> <th>Header</th> <th>Class</th> <th>ID</th> <th>Length (Bytes)</th> <th>Payload</th> <th>Checksum</th> </tr> <tr> <td>0xb5 0x62</td> <td>0x06</td> <td>0x09</td> <td>12 + [0,1]</td> <td>see below</td> <td>CK_A CK_B</td> </tr> </table>	Header	Class	ID	Length (Bytes)	Payload	Checksum	0xb5 0x62	0x06	0x09	12 + [0,1]	see below	CK_A CK_B
Header	Class	ID	Length (Bytes)	Payload	Checksum								
0xb5 0x62	0x06	0x09	12 + [0,1]	see below	CK_A CK_B								
Payload description:													

Byte offset	Type	Name	Scale	Unit	Description
0	X4	clearMask	-	-	Mask for configuration to clear
bits 31...0	U <sub>:32</sub>	clearAll	-	-	Clear all saved configuration from the selected non-volatile memory if any bit is set
4	X4	saveMask	-	-	Mask for configuration to save
bits 31...0	U <sub>:32</sub>	saveAll	-	-	Save all current configuration to the selected non-volatile memory if any bit is set
8	X4	loadMask	-	-	Mask for configuration to load
bits 31...0	U <sub>:32</sub>	loadAll	-	-	Discard current configuration and rebuilt it from lower non-volatile memory layers if any bit is set

*Start of optional group*

12	X1	deviceMask	-	-	Mask which selects the memory devices for saving and/or clearing operation  Note that if a deviceMask is not provided, the receiver defaults the operation requested to battery-backed RAM (BBR) and Flash (if available)
	bit 0	U:1	devBBR	-	Battery-backed RAM
	bit 1	U:1	devFlash	-	Flash
	bit 2	U:1	devEEPROM	-	EEPROM (only supported for protocol versions less than 14.00)
	bit 4	U:1	devSpiFlash	-	SPI Flash (only supported for protocol versions less than 14.00)

*End of optional group*

### 3.10.3 UBX-CFG-DAT (0x06 0x06)

#### 3.10.3.1 Set user-defined datum

Message	UBX-CFG-DAT				
Type	Set user-defined datum				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x06	0x06	44	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	R8	majA	-	m	Semi-major axis ( accepted range = 6,300,000.0 to 6,500,000.0 meters ).
8	R8	flat	-	-	1.0 / flattening ( accepted range is 0.0 to 500.0 ).
16	R4	dX	-	m	X axis shift at the origin ( accepted range is +/- 5000.0 meters ).
20	R4	dY	-	m	Y axis shift at the origin ( accepted range is +/- 5000.0 meters ).
24	R4	dZ	-	m	Z axis shift at the origin ( accepted range is +/- 5000.0 meters ).
28	R4	rotX	-	s	Rotation about the X axis ( accepted range is +/- 20.0 milli-arc seconds ).
32	R4	rotY	-	s	Rotation about the Y axis ( accepted range is +/- 20.0 milli-arc seconds ).
36	R4	rotZ	-	s	Rotation about the Z axis ( accepted range is +/- 20.0 milli-arc seconds ).
40	R4	scale	-	ppm	Scale change ( accepted range is 0.0 to 50.0 parts per million ).

### 3.10.3.2 Get currently defined datum

<b>Message</b>	UBX-CFG-DAT				<b>Payload</b>	<b>Checksum</b>				
	<b>Get currently defined datum</b>									
<b>Type</b>	Get									
<b>Comment</b>	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b>									
See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.										
Returns the parameters of the currently defined datum. If no user-defined datum has been set, this will default to WGS84.										
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>				
	0xb5 0x62	0x06	0x06	52	see below	CK_A CK_B				
<b>Payload description:</b>										
Byte offset	Type	Name	Scale	Unit	Description					
0	U2	datumNum	-	-	Datum number: 0 = WGS84, 0xFFFF = user-defined (extra values are defined for protocol versions less than 13.00)					
2	CH[6]	datumName	-	-	ASCII string: WGS84 or USER (extra values are defined for protocol versions less than 13.00)					
8	R8	majA	-	m	Semi-major axis ( accepted range = 6,300,000.0 to 6,500,000.0 meters ).					
16	R8	flat	-	-	1.0 / flattening ( accepted range is 0.0 to 500.0 ).					
24	R4	dX	-	m	X axis shift at the origin ( accepted range is +/- 5000.0 meters ).					
28	R4	dY	-	m	Y axis shift at the origin ( accepted range is +/- 5000.0 meters ).					
32	R4	dZ	-	m	Z axis shift at the origin ( accepted range is +/- 5000.0 meters ).					
36	R4	rotX	-	s	Rotation about the X axis ( accepted range is +/- 20.0 milli-arc seconds ).					
40	R4	rotY	-	s	Rotation about the Y axis ( accepted range is +/- 20.0 milli-arc seconds ).					
44	R4	rotZ	-	s	Rotation about the Z axis ( accepted range is +/- 20.0 milli-arc seconds ).					
48	R4	scale	-	ppm	Scale change ( accepted range is 0.0 to 50.0 parts per million ).					

### 3.10.4 UBX-CFG-DGNSS (0x06 0x70)

#### 3.10.4.1 DGNSS configuration

<b>Message</b>	UBX-CFG-DGNSS				<b>Payload</b>	<b>Checksum</b>				
	<b>DGNSS configuration</b>									
<b>Type</b>	Get/set									
<b>Comment</b>	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b>									
See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.										
This message allows the user to configure the DGNSS configuration of the receiver.										
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>				
	0xb5 0x62	0x06	0x70	4	see below	CK_A CK_B				
<b>Payload description:</b>										

Byte offset	Type	Name	Scale	Unit	Description
0	U1	dgnssMode	-	-	Specifies differential mode: <ul style="list-style-type: none"><li>• 2 = RTK float: No attempts are made to fix ambiguities.</li><li>• 3 = RTK fixed: Ambiguities are fixed whenever possible.</li></ul>
1	U1[3]	reserved0	-	-	Reserved

### 3.10.5 UBX-CFG-GEOFENCE (0x06 0x69)

#### 3.10.5.1 Geofencing configuration

Message	UBX-CFG-GEOFENCE				
Type	Geofencing configuration				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Gets or sets the geofencing configuration. If the receiver is sent a valid new configuration, it will respond with a <a href="#">UBX-ACK-ACK</a> message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a <a href="#">UBX-ACK-NAK</a> and continuing operation with the previous configuration. Note that the acknowledge message does not indicate whether the PIO configuration has been successfully applied (pin assigned), it only indicates the successful configuration of the feature. The configured PIO must be previously unoccupied for successful assignment.				
<i>Message structure</i>					
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x06	0x69	8 + numFences·12	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	numFences	-	-	Number of geofences contained in this message. Note that the receiver can only store a limited number of geofences (currently 4).
2	U1	confLvl	-	-	Required confidence level for state evaluation. This value times the position's standard deviation (sigma) defines the confidence band. <ul style="list-style-type: none"><li>• 0 = no confidence required</li><li>• 1 = 68%</li><li>• 2 = 95%</li><li>• 3 = 99.7%</li><li>• 4 = 99.99%</li></ul>
3	U1	reserved0	-	-	Reserved
4	U1	pioEnabled	-	-	1 = Enable PIO combined fence state output, 0 = disable
5	U1	pinPolarity	-	-	PIO pin polarity. 0 = Low means inside, 1 = Low means outside. Unknown state is always high.
6	U1	pin	-	-	PIO pin number
7	U1	reserved1	-	-	Reserved
<i>Start of repeated group (numFences times)</i>					
8 + n·12	I4	lat	1e-7	deg	Latitude of the geofence circle center
12 + n·12	I4	lon	1e-7	deg	Longitude of the geofence circle center

16 + n·12	U4	radius	1e-2	m	Radius of the geofence circle
-----------	----	--------	------	---	-------------------------------

*End of repeated group (numFences times)*

### 3.10.6 UBX-CFG-GNSS (0x06 0x3e)

#### 3.10.6.1 GNSS system configuration

<b>Message</b>	UBX-CFG-GNSS				
	GNSS system configuration				
<b>Type</b>	Get/set				
<b>Comment</b>	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Gets or sets the GNSS system channel sharing configuration. If the receiver is sent a valid new configuration, it will respond with a <a href="#">UBX-ACK-ACK</a> message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a <a href="#">UBX-ACK-NAK</a> and continuing operation with the previous configuration. <b>Configuration requirements:</b> <ul style="list-style-type: none"> <li>• It is necessary for at least one major GNSS to be enabled, after applying the new configuration to the current one.</li> <li>• It is also required that at least 4 tracking channels are available to each enabled major GNSS, i.e. maxTrkCh must have a minimum value of 4 for each enabled major GNSS.</li> <li>• The number of tracking channels in use must not exceed the number of tracking channels available in hardware, and the sum of all reserved tracking channels needs to be less than or equal to the number of tracking channels in use.</li> </ul> <b>Notes:</b> <ul style="list-style-type: none"> <li>• To avoid cross-correlation issues, it is recommended that GPS and QZSS are always both enabled or both disabled.</li> <li>• Polling this message returns the configuration of all supported GNSS, whether enabled or not; it may also include GNSS unsupported by the particular product, but in such cases the enable flag will always be unset.</li> <li>• See section <a href="#">Satellite Numbering</a> for a description of the GNSS IDs available.</li> <li>• Configuration specific to the GNSS system can be done via other messages (e.g. <a href="#">UBX-CFG-SBAS</a>).</li> </ul>				
<b>Message structure</b>					

Header	Class	ID	Length (Bytes)	Payload	Checksum
0xb5 0x62	0x06	0x3e	4 + numConfigBlocks·8	see below	CK_A CK_B

#### *Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	msgVer	-	-	Message version (0x00 for this version)
1	U1	numTrkChHw	-	-	Number of tracking channels available in hardware (read only)
2	U1	numTrkChUse	-	-	(Read only for protocol versions greater than 23.00) Number of tracking channels to use. Must be > 0, <= numTrkChHw. If 0xFF, then number of tracking channels to use will be set to numTrkChHw.
3	U1	numConfigBlocks	-	-	Number of configuration blocks following

#### *Start of repeated group (numConfigBlocks times)*

4 + n·8	U1	gnssId	-	-	System identifier (see <a href="#">Satellite Numbering</a> )
5 + n·8	U1	resTrkCh	-	-	(Read only for protocol versions greater than 23.00) Number of reserved (minimum) tracking channels for this system.

6 + n·8	U1	maxTrkCh	-	-	(Read only for protocol versions greater than 23.00) Maximum number of tracking channels used for this system. Must be > 0, $\geq$ resTrkChn, $\leq$ numTrkChUse and $\leq$ maximum number of tracking channels supported for this system.
7 + n·8	U1	reserved0	-	-	Reserved
8 + n·8	X4	flags	-	-	Bitfield of flags. At least one signal must be configured in every enabled system.
bit 0	U <sub>1</sub>	enable	-	-	Enable this system
bits 23...16	U <sub>8</sub>	sigCfgMask	-	-	<p>Signal configuration mask When gnssId is 0 (GPS)</p> <ul style="list-style-type: none"> <li>• 0x01 = GPS L1C/A</li> <li>• 0x10 = GPS L2C</li> <li>• 0x20 = GPS L5</li> </ul> <p>When gnssId is 1 (SBAS)</p> <ul style="list-style-type: none"> <li>• 0x01 = SBAS L1C/A</li> </ul> <p>When gnssId is 2 (Galileo)</p> <ul style="list-style-type: none"> <li>• 0x01 = Galileo E1 (not supported for protocol versions less than 18.00)</li> <li>• 0x10 = Galileo E5a</li> <li>• 0x20 = Galileo E5b</li> </ul> <p>When gnssId is 3 (BeiDou)</p> <ul style="list-style-type: none"> <li>• 0x01 = BeiDou B1I</li> <li>• 0x10 = BeiDou B2I</li> <li>• 0x80 = BeiDou B2A</li> </ul> <p>When gnssId is 5 (QZSS)</p> <ul style="list-style-type: none"> <li>• 0x01 = QZSS L1C/A</li> <li>• 0x04 = QZSS L1S</li> <li>• 0x10 = QZSS L2C</li> <li>• 0x20 = QZSS L5</li> </ul> <p>When gnssId is 6 (GLONASS)</p> <ul style="list-style-type: none"> <li>• 0x01 = GLONASS L1</li> <li>• 0x10 = GLONASS L2</li> </ul>

*End of repeated group (numConfigBlocks times)*

### 3.10.7 UBX-CFG-INF (0x06 0x02)

#### 3.10.7.1 Poll configuration for one protocol

Message	UBX-CFG-INF			
Type	Poll configuration for one protocol			
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.			
Message structure	Header	Class	ID	Length (Bytes)
	0xb5	0x62	0x06	1
Payload description:			Payload	Checksum
			see below	CK_A CK_B

Byte offset	Type	Name	Scale	Unit	Description
0	U1	protocolID	-	-	Protocol identifier, identifying the output protocol for this poll request. The following are valid protocol identifiers: <ul style="list-style-type: none"> <li>• 0: UBX protocol</li> <li>• 1: NMEA protocol</li> <li>• 2-255: Reserved</li> </ul>

### 3.10.7.2 Information message configuration

Message	UBX-CFG-INF				
	Information message configuration				
Type	Get/set				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> <p>The value of infMsgMask[x] below is formed so that each bit represents one of the INF class messages (bit 0 for ERROR, bit 1 for WARNING and so on). For a complete list, see the <a href="#">Message class INF</a>. Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length. Output messages from the module contain only one configuration unit.</p> <p>Note that:</p> <ul style="list-style-type: none"> <li>• I/O ports 1 and 2 correspond to serial ports 1 and 2.</li> <li>• I/O port 0 is I2C (DDC).</li> <li>• I/O port 3 is USB.</li> <li>• I/O port 4 is SPI.</li> <li>• I/O port 5 is reserved for future use.</li> </ul>				
Message structure	Header      Class      ID			Length (Bytes)	Payload      Checksum
	0xb5	0x62	0x06	0x02	[0..n]·10      CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
<i>Start of repeated group (N times)</i>					
0 + n·10	U1	protocolID	-	-	Protocol identifier, identifying for which protocol the configuration is set/get. The following are valid protocol identifiers: <ul style="list-style-type: none"> <li>• 0: UBX protocol</li> <li>• 1: NMEA protocol</li> <li>• 2-255: Reserved</li> </ul>
1 + n·10	U1[3]	reserved0	-	-	Reserved
4 + n·10	X1[6]	infMsgMask	-	-	A bit mask, saying which information messages are enabled on each I/O port
bit 0	U <sub>1</sub>	ERROR	-	-	enable ERROR
bit 1	U <sub>1</sub>	WARNING	-	-	enable WARNING
bit 2	U <sub>1</sub>	NOTICE	-	-	enable NOTICE
bit 3	U <sub>1</sub>	TEST	-	-	enable TEST
bit 4	U <sub>1</sub>	DEBUG	-	-	enable DEBUG
<i>End of repeated group (N times)</i>					

### 3.10.8 UBX-CFG-LOGFILTER (0x06 0x47)

### 3.10.8.1 Data logger configuration

<b>Message</b>	UBX-CFG-LOGFILTER				
	Data logger configuration				
<b>Type</b>	Get/set				
<b>Comment</b>	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. This message can be used to configure the data logger, i.e. to enable/disable the log recording and to get/set the position entry filter settings. Position entries can be filtered based on time difference, position difference or current speed thresholds. Position and speed filtering also have a minimum time interval. A position is logged if any of the thresholds are exceeded. If a threshold is set to zero it is ignored. The maximum rate of position logging is 1 Hz. The filter settings will be configured to the provided values only if the 'applyAllFilterSettings' flag is set. This allows the recording to be enabled/disabled independently of configuring the filter settings. Configuring the data logger in the absence of a logging file is supported. By doing so, once the logging file is created, the data logger configuration will take effect immediately and logging recording and filtering will activate according to the configuration.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x06	0x47	12	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	X1	flags	-	-	Flags
bit 0	U:1	recordEnabled	-	-	1 = enable recording, 0 = disable recording
bit 1	U:1	psmOncePer	-	-	1 = enable recording only one single position per PSM on/off mode wake-up period, 0 = disable once per wake-up
bit 2	U:1	WakeupEnabled	-	-	
bit 2	U:1	applyAllFilter	-	-	1 = apply all filter settings, 0 = only apply recordEnabled
Settings					
2	U2	minInterval	-	s	Minimum time interval between logged positions (0 = not set). <b>This is only applied in combination with the speed and/or position thresholds.</b> If both minInterval and timeThreshold are set, minInterval must be less than or equal to timeThreshold.
4	U2	timeThreshold	-	s	If the time difference is greater than the threshold, then the position is logged (0 = not set).
6	U2	speedThreshold	-	m/s	If the current speed is greater than the threshold, then the position is logged (0 = not set). minInterval also applies.
8	U4	position Threshold	-	m	If the 3D position difference is greater than the threshold, then the position is logged (0 = not set). minInterval also applies.

### 3.10.9 UBX-CFG-MSG (0x06 0x01)

#### 3.10.9.1 Poll a message configuration

<b>Message</b>	UBX-CFG-MSG	
	Poll a message configuration	
<b>Type</b>	Poll request	

<b>Comment</b>	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.							
<b>Message structure</b>	Header	Class	ID	<i>Length (Bytes)</i>		<i>Payload</i>		
<hr/>								
<i>Payload description:</i>								
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>		<i>Scale</i>	<i>Unit</i>	<i>Description</i>		
0	U1	msgClass		-	-	Message class		
1	U1	msgID		-	-	Message identifier		

### 3.10.9.2 Set message rate(s)

<b>Message</b>	UBX-CFG-MSG							
	<b>Set message rate(s)</b>							
<b>Type</b>	Get/set							
<hr/>								
<b>Comment</b>	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Get/set message rate configuration (s) to/from the receiver.							
	<ul style="list-style-type: none"> <li>Send rate is relative to the event a message is registered on. For example, if the rate of a navigation message is set to 2, the message is sent every second navigation solution. For configuring NMEA messages, the section <a href="#">NMEA Messages Overview</a> describes class and identifier numbers used.</li> </ul>							
<b>Message structure</b>	Header	Class	ID	<i>Length (Bytes)</i>		<i>Payload</i>		
	0xb5	0x62	0x06	0x01	8			
<hr/>								
<i>Payload description:</i>								
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>		<i>Scale</i>	<i>Unit</i>	<i>Description</i>		
0	U1	msgClass		-	-	Message class		
1	U1	msgID		-	-	Message identifier		
2	U1[6]	rate		-	-	Send rate on I/O port (6 ports)		

### 3.10.9.3 Set message rate

<b>Message</b>	UBX-CFG-MSG							
	<b>Set message rate</b>							
<b>Type</b>	Get/set							
<hr/>								
<b>Comment</b>	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Set message rate configuration for the current port.							
<b>Message structure</b>	Header	Class	ID	<i>Length (Bytes)</i>		<i>Payload</i>		
	0xb5	0x62	0x06	0x01	3			
<hr/>								
<i>Payload description:</i>								
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>		<i>Scale</i>	<i>Unit</i>	<i>Description</i>		
0	U1	msgClass		-	-	Message class		
1	U1	msgID		-	-	Message identifier		
2	U1	rate		-	-	Send rate on current port		

## 3.10.10 UBX-CFG-NAV5 (0x06 0x24)

### 3.10.10.1 Navigation engine settings

Message	UBX-CFG-NAV5				
Type	Get/set				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X2	mask	-	-	Parameters bitmask. Only the masked parameters will be applied.
bit 0	U:1	dyn	-	-	Apply dynamic model settings
bit 1	U:1	minEl	-	-	Apply minimum elevation settings
bit 2	U:1	posFixMode	-	-	Apply fix mode settings
bit 3	U:1	drLim	-	-	Reserved (apply DR limit settings, only applicable for protocol versions less than 14.00)
bit 4	U:1	posMask	-	-	Apply position mask settings
bit 5	U:1	timeMask	-	-	Apply time mask settings
bit 6	U:1	staticHoldMask	-	-	Apply static hold settings
bit 7	U:1	dgpsMask	-	-	Apply DGPS settings (not supported for protocol versions less than 13.00)
bit 8	U:1	cnoThreshold	-	-	Apply CNO threshold settings (cnoThresh, cnoThreshNumSVs) (not supported for protocol versions less than 14.00)
bit 10	U:1	utc	-	-	Apply UTC settings (not supported for protocol versions less than 16.00)
2	U1	dynModel	-	-	Dynamic platform model: <ul style="list-style-type: none"> <li>• 0 = portable</li> <li>• 2 = stationary</li> <li>• 3 = pedestrian</li> <li>• 4 = automotive</li> <li>• 5 = sea</li> <li>• 6 = airborne with &lt;1g acceleration</li> <li>• 7 = airborne with &lt;2g acceleration</li> <li>• 8 = airborne with &lt;4g acceleration</li> <li>• 9 = wrist-worn watch (not supported for protocol versions less than 18.00)</li> <li>• 10 = motorbike (supported for protocol versions 19.20, and 35.10, and 35.15, and 35.16, and 35.20)</li> <li>• 11 = robotic lawn mower (supported for protocol versions 33.21)</li> <li>• 12 = electric kick scooter (supported for protocol versions 33.21, and 35.10, and 35.15, and 35.16, and 35.20)</li> </ul>

3	U1	fixMode	-	-	Position fixing mode: <ul style="list-style-type: none"> <li>• 1 = 2D only</li> <li>• 2 = 3D only</li> <li>• 3 = auto 2D/3D</li> </ul>
4	I4	fixedAlt	0.01	m	Fixed altitude (mean sea level) for 2D fix mode
8	U4	fixedAltVar	0.0001	m^2	Fixed altitude variance for 2D mode
12	I1	minElev	-	deg	Minimum elevation for a GNSS satellite to be used in NAV
13	U1	drLimit	-	s	Reserved (maximum time to perform dead reckoning (linear extrapolation) in case of GPS signal loss, only applicable for protocol versions less than 14.00)
14	U2	pDop	0.1	-	Position DOP mask to use
16	U2	tDop	0.1	-	Time DOP mask to use
18	U2	pAcc	-	m	Position accuracy mask
20	U2	tAcc	-	m	Time accuracy mask
22	U1	staticHoldThresh	-	cm/s	Static hold threshold
23	U1	dgnssTimeout	-	s	DGNSS timeout (not supported for protocol versions less than 13.00)
24	U1	cnoThreshNumSv	-	-	Number of satellites required to have C/N0 above cnoThresh for a fix to be attempted (not supported for protocol versions less than 14.00)
25	U1	cnoThresh	-	dBHz	C/N0 threshold for deciding whether to attempt a fix (not supported for protocol versions less than 14.00)
26	U1[2]	reserved0	-	-	Reserved
28	U2	staticHoldMaxDist	-	m	Static hold distance threshold (before quitting static hold) (not supported for protocol versions less than 15.00)
30	U1	utcStandard	-	-	UTC standard to be used (see GNSS time bases section in the integration manual): <ul style="list-style-type: none"> <li>• 0 = Automatic; receiver selects based on GNSS configuration</li> <li>• 3 = UTC as operated by the U.S. Naval Observatory (USNO); derived from GPS time</li> <li>• 5 = UTC as combined from multiple European laboratories; derived from Galileo time</li> <li>• 6 = UTC as operated by the former Soviet Union (SU); derived from GLONASS time</li> <li>• 7 = UTC as operated by the National Time Service Center (NTSC), China; derived from BeiDou time</li> <li>• 8 = UTC as operated by the National Physics Laboratory, India (NPLI); derived from NavIC time</li> </ul> (not supported for protocol versions less than 16.00)
31	U1[5]	reserved1	-	-	Reserved

### 3.10.11 UBX-CFG-NAVX5 (0x06 0x23)

### 3.10.11.1 Navigation engine expert settings

Message	UBX-CFG-NAVX5 Navigation engine expert settings				
Type	Get/set				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x06	0x23	40
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U2	version	-	-	Message version (0x0002 for this version)
2	X2	mask1	-	-	First parameters bitmask. Only the flagged parameters will be applied, unused bits must be set to 0.
	bit 2	U <sub>1</sub>	minMax	-	1 = apply min/max SVs settings
	bit 3	U <sub>1</sub>	minCno	-	1 = apply minimum C/N0 setting
	bit 6	U <sub>1</sub>	initial3dfix	-	1 = apply initial 3D fix settings
	bit 9	U <sub>1</sub>	wknRoll	-	1 = apply GPS weeknumber rollover settings
	bit 10	U <sub>1</sub>	ackAid	-	1 = apply assistance acknowledgement settings
	bit 13	U <sub>1</sub>	ppp	-	1 = apply usePPP flag
	bit 14	U <sub>1</sub>	aop	-	1 = apply aopCfg (useAOP flag) and aopOrbMaxErr settings (AssistNow Autonomous)
4	X4	mask2	-	-	Second parameters bitmask. Only the flagged parameters will be applied, unused bits must be set to 0.
	bit 6	U <sub>1</sub>	adr	-	Apply ADR/UDR sensor fusion on/off setting (useAdr flag)
	bit 7	U <sub>1</sub>	sigAttenComp	-	Only supported on certain products
8	U1[2]	reserved0	-	-	Reserved
10	U1	minSVs	-	#SVs	Minimum number of satellites for navigation
11	U1	maxSVs	-	#SVs	Maximum number of satellites for navigation
12	U1	minCNO	-	dBHz	Minimum satellite signal level for navigation
13	U1	reserved1	-	-	Reserved
14	U1	iniFix3D	-	-	1 = initial fix must be 3D
15	U1[2]	reserved2	-	-	Reserved
17	U1	ackAiding	-	-	1 = issue acknowledgements for assistance message input
18	U2	wknRollover	-	-	GPS week rollover number; GPS week numbers will be set correctly from this week up to 1024 weeks after this week. Setting this to 0 reverts to firmware default.
20	U1	sigAttenComp Mode	-	dBHz	Only supported on certain products
21	U1	reserved3	-	-	Reserved

22	U1[2]	reserved4	-	-	Reserved
24	U1[2]	reserved5	-	-	Reserved
26	U1	usePPP	-	-	1 = use Precise Point Positioning (only available with the PPP product variant)
27	U1	aopCfg	-	-	AssistNow Autonomous configuration
bit 0	U:1	useAOP	-	-	1 = enable AssistNow Autonomous
28	U1	reserved6	-	-	Reserved
29	U1	reserved7	-	-	Reserved
30	U2	aopOrbMaxErr	-	m	Maximum acceptable (modeled) Autonomous orbit error (valid range = 5..1000, or 0 = reset to firmware default)
32	U1[4]	reserved8	-	-	Reserved
36	U1[3]	reserved9	-	-	Reserved
39	U1	useAddr	-	-	Only supported on certain products

### 3.10.12 UBX-CFG-NMEA (0x06 0x17)

#### 3.10.12.1 Extended NMEA protocol configuration V1

Message	UBX-CFG-NMEA Extended NMEA protocol configuration V1				
Type	Get/set				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> Get/set the <a href="#">NMEA protocol</a> configuration. See section <a href="#">NMEA Protocol Configuration</a> for a detailed description of the configuration effects on NMEA output. See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x06	0x17	20	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	filter	-	-	filter flags
bit 0	U:1	posFilt	-	-	Enable position output for failed or invalid fixes
bit 1	U:1	mskPosFilt	-	-	Enable position output for invalid fixes
bit 2	U:1	timeFilt	-	-	Enable time output for invalid times
bit 3	U:1	dateFilt	-	-	Enable date output for invalid dates
bit 4	U:1	gpsOnlyFilter	-	-	Restrict output to GPS satellites only
bit 5	U:1	trackFilt	-	-	Enable COG output even if COG is frozen

1	U1	nmeaVersion	-	-	<ul style="list-style-type: none"> <li>• 0x4b = NMEA version 4.11 (not available in all products)</li> <li>• 0x41 = NMEA version 4.10 (not available in all products)</li> <li>• 0x40 = NMEA version 4.0 (not available in all products)</li> <li>• 0x23 = NMEA version 2.3</li> <li>• 0x21 = NMEA version 2.1</li> </ul>
2	U1	numSV	-	-	Maximum number of SVs to report per TalkerId. <ul style="list-style-type: none"> <li>• 0 = unlimited</li> <li>• 8 = 8 SVs</li> <li>• 12 = 12 SVs</li> <li>• 16 = 16 SVs</li> </ul>
3	X1	flags	-	-	flags
	bit 0 U:1	compat	-	-	enable compatibility mode. This might be needed for certain applications when customer's NMEA parser expects a fixed number of digits in position coordinates.
	bit 1 U:1	consider	-	-	enable considering mode.
	bit 2 U:1	limit82	-	-	enable strict limit to 82 characters maximum.
	bit 3 U:1	highPrec	-	-	enable high precision mode. This flag cannot be set in conjunction with either compatibility mode or Limit82 mode (not supported for protocol versions less than 20.01).
4	X4	gnssToFilter	-	-	Filters out satellites based on their GNSS. If a bitfield is enabled, the corresponding satellites will be not output.
	bit 0 U:1	gps	-	-	Disable reporting of GPS satellites
	bit 1 U:1	sbas	-	-	Disable reporting of SBAS satellites
	bit 2 U:1	galileo	-	-	Disable reporting of Galileo satellites
	bit 4 U:1	qzss	-	-	Disable reporting of QZSS satellites
	bit 5 U:1	glonass	-	-	Disable reporting of GLONASS satellites
	bit 6 U:1	beidou	-	-	Disable reporting of BeiDou satellites
8	U1	svNumbering	-	-	Configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. <ul style="list-style-type: none"> <li>• 0 = Strict - Satellites are not output</li> <li>• 1 = Extended - Use proprietary numbering (see <a href="#">Satellite Numbering</a>)</li> </ul>

9	U1	mainTalkerId	-	-	<p>By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see <a href="#">UBX-CFG-GNSS</a>).</p> <p>This field enables the main Talker ID to be overridden.</p> <ul style="list-style-type: none"> <li>• 0 = Main Talker ID is not overridden</li> <li>• 1 = Set main Talker ID to 'GP'</li> <li>• 2 = Set main Talker ID to 'GL'</li> <li>• 3 = Set main Talker ID to 'GN'</li> <li>• 4 = Set main Talker ID to 'GA' (not supported for protocol versions less than 15.00)</li> <li>• 5 = Set main Talker ID to 'GB' (not supported for protocol versions less than 15.00)</li> <li>• 6 = Set main Talker ID to 'GQ' (available in NMEA 4.11 and later)</li> </ul>
10	U1	gsvTalkerId	-	-	<p>By default the Talker ID for GSV messages is GNSS-specific (as defined by NMEA).</p> <p>This field enables the GSV Talker ID to be overridden.</p> <ul style="list-style-type: none"> <li>• 0 = Use GNSS-specific Talker ID (as defined by NMEA)</li> <li>• 1 = Use the main Talker ID</li> </ul>
11	U1	version	-	-	Message version (0x01 for this version)
12	CH[2]	bdsTalkerId	-	-	Sets the two characters that should be used for the BeiDou Talker ID. If these are set to zero, the receiver uses the default BeiDou Talker ID.
14	U1[6]	reserved0	-	-	Reserved

### 3.10.13 UBX-CFG-ODO (0x06 0x1e)

#### 3.10.13.1 Odometer, low-speed COG engine settings

Message	UBX-CFG-ODO Odometer, low-speed COG engine settings				
Type	Get/set				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a>, <a href="#">UBX-CFG-VALGET</a>, <a href="#">UBX-CFG-VALDEL</a> instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. <span style="color: #999;">☞</span> This feature is not supported for the FTS product variant. The Low-speed COG filter feature is not supported for firmware version 32.01.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x06	0x1e	20	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1[3]	reserved0	-	-	Reserved
4	U1	flags	-	-	Odometer/Low-speed COG filter flags
bit 0	U:1	useODO	-	-	Odometer-enabled flag
bit 1	U:1	useCOG	-	-	Low-speed COG filter enabled flag
bit 2	U:1	outLPVel	-	-	Output low-pass filtered velocity flag
bit 3	U:1	outLPCog	-	-	Output low-pass filtered heading (COG) flag

5	X1	odoCfg	-	-	Odometer filter settings
	bits 2...0	U <sub>3</sub>	profile	-	Profile type (0=running, 1=cycling, 2=swimming, 3=car, 4=custom)
6	U1[6]	reserved1	-	-	Reserved
12	U1	cogMaxSpeed	1e-1	m/s	Speed below which course-over-ground (COG) is computed with the low-speed COG filter
13	U1	cogMaxPosAcc	-	m	Maximum acceptable position accuracy for computing COG with the low-speed COG filter
14	U1[2]	reserved2	-	-	Reserved
16	U1	velLpGain	-	-	Velocity low-pass filter level, range 0..255
17	U1	cogLpGain	-	-	COG low-pass filter level (at speed < 8 m/s), range 0..255
18	U1[2]	reserved3	-	-	Reserved

### 3.10.14 UBX-CFG-PRT (0x06 0x00)

#### 3.10.14.1 Polls the configuration for one I/O port

<b>Message</b>	UBX-CFG-PRT																
	Polls the configuration for one I/O port																
<b>Type</b>	Poll request																
<b>Comment</b>	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Sending this message with a port ID as payload results in having the receiver return the configuration for the specified port.																
<b>Message structure</b> <table border="1"> <tr> <th>Header</th> <th>Class</th> <th>ID</th> <th>Length (Bytes)</th> <th>Payload</th> <th>Checksum</th> </tr> <tr> <td>0xb5 0x62</td> <td>0x06</td> <td>0x00</td> <td>1</td> <td>see below</td> <td>CK_A CK_B</td> </tr> </table>						Header	Class	ID	Length (Bytes)	Payload	Checksum	0xb5 0x62	0x06	0x00	1	see below	CK_A CK_B
Header	Class	ID	Length (Bytes)	Payload	Checksum												
0xb5 0x62	0x06	0x00	1	see below	CK_A CK_B												
<b>Payload description:</b>																	
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>												
0	U1	PortID	-	-	Port identifier number (see the other versions of CFG-PRT for valid values)												

#### 3.10.14.2 Port configuration for UART ports

<b>Message</b>	UBX-CFG-PRT																
	Port configuration for UART ports																
<b>Type</b>	Get/set																
<b>Comment</b>	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit. Note that this message can affect baud rate and other transmission parameters. Because there may be messages queued for transmission there may be uncertainty about which protocol applies to such messages. In addition a message currently in transmission may be corrupted by a protocol change. Host data reception parameters may have to be changed to be able to receive future messages, including the acknowledge message resulting from the CFG-PRT message.																
<b>Message structure</b> <table border="1"> <tr> <th>Header</th> <th>Class</th> <th>ID</th> <th>Length (Bytes)</th> <th>Payload</th> <th>Checksum</th> </tr> <tr> <td>0xb5 0x62</td> <td>0x06</td> <td>0x00</td> <td>20</td> <td>see below</td> <td>CK_A CK_B</td> </tr> </table>						Header	Class	ID	Length (Bytes)	Payload	Checksum	0xb5 0x62	0x06	0x00	20	see below	CK_A CK_B
Header	Class	ID	Length (Bytes)	Payload	Checksum												
0xb5 0x62	0x06	0x00	20	see below	CK_A CK_B												

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	U1	portID	-	-	Port identifier number (see the integration manual for valid UART port IDs)
1	U1	reserved0	-	-	Reserved
2	X2	txReady	-	-	TX ready PIN configuration (not supported for protocol versions less than 13.01)
bit 0	U <sub>1</sub>	en	-	-	Enable TX ready feature for this port
bit 1	U <sub>1</sub>	pol	-	-	Polarity <ul style="list-style-type: none"> <li>• 0 High-active</li> <li>• 1 Low-active</li> </ul>
bits 6...2	U <sub>5</sub>	pin	-	-	PIO to be used (must not be in use by another function)
bits 15...7	U <sub>9</sub>	thres	-	-	Threshold <p>The given threshold is multiplied by 8 bytes.</p> <p>The TX ready PIN goes active after &gt;= thres*8 bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream).</p> <ul style="list-style-type: none"> <li>• 0x000 no threshold</li> <li>• 0x001 8byte</li> <li>• 0x002 16byte</li> <li>• ...</li> <li>• 0x1FE 4080byte</li> <li>• 0xFF 4088byte</li> </ul>
4	X4	mode	-	-	A bit mask describing the UART mode
bits 7...6	U <sub>2</sub>	charLen	-	-	Character length <ul style="list-style-type: none"> <li>• 00 5bit (not supported)</li> <li>• 01 6bit (not supported)</li> <li>• 10 7bit (supported only with parity)</li> <li>• 11 8bit</li> </ul>
bits 11...9	U <sub>3</sub>	parity	-	-	<ul style="list-style-type: none"> <li>• 000 Even parity</li> <li>• 001 Odd parity</li> <li>• 10X No parity</li> <li>• X1X Reserved</li> </ul>
bits 13...12	U <sub>2</sub>	nStopBits	-	-	Number of Stop bits <ul style="list-style-type: none"> <li>• 00 1 Stop bit</li> <li>• 01 1.5 Stop bit</li> <li>• 10 2 Stop bit</li> <li>• 11 0.5 Stop bit</li> </ul>
8	U4	baudRate	-	Bits/s	Baud rate in bits/second
12	X2	inProtoMask	-	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port.
bit 0	U <sub>1</sub>	inUbx	-	-	UBX protocol
bit 1	U <sub>1</sub>	inNmea	-	-	NMEA protocol

		bit 2	U:1	inRtcm	-	-	RTCM2 protocol
		bit 5	U:1	inRtcm3	-	-	RTCM3 protocol (not supported for protocol versions less than 20.00)
14	X2			outProtoMask	-	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port.
		bit 0	U:1	outUbx	-	-	UBX protocol
		bit 1	U:1	outNmea	-	-	NMEA protocol
		bit 5	U:1	outRtcm3	-	-	RTCM3 protocol (not supported for protocol versions less than 20.00)
16	X2			flags	-	-	Flags bit mask
		bit 1	U:1	extendedTx Timeout	-	-	Extended TX timeout: if set, the port will time out if allocated TX memory $\geq 4$ kB and no activity for 1.5 s. If not set the port will time out if no activity for 1.5 s regardless on the amount of allocated TX memory (not supported for protocol versions less than 13.01).
18	U1[2]			reserved1	-	-	Reserved

### 3.10.14.3 Port configuration for USB port

Message	UBX-CFG-PRT																	
Type	Port configuration for USB port																	
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.																	
<i>Message structure</i>	<table border="1"> <thead> <tr> <th>Header</th><th>Class</th><th>ID</th><th>Length (Bytes)</th><th>Payload</th><th>Checksum</th></tr> </thead> <tbody> <tr> <td>0xb5 0x62</td><td>0x06</td><td>0x00</td><td>20</td><td>see below</td><td>CK_A CK_B</td></tr> </tbody> </table>						Header	Class	ID	Length (Bytes)	Payload	Checksum	0xb5 0x62	0x06	0x00	20	see below	CK_A CK_B
Header	Class	ID	Length (Bytes)	Payload	Checksum													
0xb5 0x62	0x06	0x00	20	see below	CK_A CK_B													
<i>Payload description:</i>																		
Byte offset	Type	Name	Scale	Unit	Description													
0	U1	portID	-	-	Port identifier number (= 3 for USB port)													
1	U1	reserved0	-	-	Reserved													
2	X2	txReady	-	-	TX ready PIN configuration (not supported for protocol versions less than 13.01)													
	bit 0	U:1	en	-	Enable TX ready feature for this port													
	bit 1	U:1	pol	-	Polarity <ul style="list-style-type: none"> <li>• 0 High-active</li> <li>• 1 Low-active</li> </ul>													
	bits 6...2	U:5	pin	-	PIO to be used (must not be in use by another function)													
	bits 15...7	U:9	thres	-	Threshold The given threshold is multiplied by 8 bytes. The TX ready PIN goes active after $\geq$ thres*8 bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream).													

					<ul style="list-style-type: none"> <li>• 0x000 no threshold</li> <li>• 0x001 8byte</li> <li>• 0x002 16byte</li> <li>• ...</li> <li>• 0x1FE 4080byte</li> <li>• 0xFF 4088byte</li> </ul>
4	U1[8]	reserved1	-	-	Reserved
12	X2	inProtoMask	-	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port.
	bit 0	U <sub>1</sub>	inUbx	-	UBX protocol
	bit 1	U <sub>1</sub>	inNmea	-	NMEA protocol
	bit 2	U <sub>1</sub>	inRtcm	-	RTCM2 protocol
	bit 5	U <sub>1</sub>	inRtcm3	-	RTCM3 protocol (not supported for protocol versions less than 20.00)
14	X2	outProtoMask	-	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port.
	bit 0	U <sub>1</sub>	outUbx	-	UBX protocol
	bit 1	U <sub>1</sub>	outNmea	-	NMEA protocol
	bit 5	U <sub>1</sub>	outRtcm3	-	RTCM3 protocol (not supported for protocol versions less than 20.00)
16	U1[2]	reserved2	-	-	Reserved
18	U1[2]	reserved3	-	-	Reserved

### 3.10.14.4 Port configuration for SPI port

Message	UBX-CFG-PRT				
Type	Port configuration for SPI port				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length. Output messages from the module contain only one configuration unit.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x06	0x00	20	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	portID	-	-	Port identifier number (= 4 for SPI port)
1	U1	reserved0	-	-	Reserved
2	X2	txReady	-	-	TX ready PIN configuration (not supported for protocol versions less than 13.01)
	bit 0	U <sub>1</sub>	en	-	Enable TX ready feature for this port
	bit 1	U <sub>1</sub>	pol	-	Polarity <ul style="list-style-type: none"> <li>• 0 High-active</li> </ul>

					• 1 Low-active
bits 6...2	<b>U<sub>5</sub></b>	pin	-	-	PIO to be used (must not be in use by another function)
bits 15...7	<b>U<sub>9</sub></b>	thres	-	-	<p>Threshold</p> <p>The given threshold is multiplied by 8 bytes.</p> <p>The TX ready PIN goes active after &gt;= thres*8 bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream).</p> <ul style="list-style-type: none"> <li>• 0x000 no threshold</li> <li>• 0x001 8byte</li> <li>• 0x002 16byte</li> <li>• ...</li> <li>• 0x1FE 4080byte</li> <li>• 0x1FF 4088byte</li> </ul>
<b>4</b>	<b>X4</b>	mode	-	-	SPI Mode Flags
bits 2...1	<b>U<sub>2</sub></b>	spiMode	-	-	<ul style="list-style-type: none"> <li>• 00 SPI Mode 0: CPOL = 0, CPHA = 0</li> <li>• 01 SPI Mode 1: CPOL = 0, CPHA = 1</li> <li>• 10 SPI Mode 2: CPOL = 1, CPHA = 0</li> <li>• 11 SPI Mode 3: CPOL = 1, CPHA = 1</li> </ul>
bits 13...8	<b>U<sub>6</sub></b>	ffCnt	-	-	Number of bytes containing 0xFF to receive before switching off reception. Range: 0 (mechanism off) - 63
<b>8</b>	<b>U1[4]</b>	reserved1	-	-	Reserved
<b>12</b>	<b>X2</b>	inProtoMask	-	-	<p>A mask describing which input protocols are active.</p> <p>Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port.</p> <p>(The bitfield inRtcm3 is not supported for protocol versions less than 20.00)</p>
bit 0	<b>U<sub>1</sub></b>	inUbx	-	-	
bit 1	<b>U<sub>1</sub></b>	inNmea	-	-	
bit 2	<b>U<sub>1</sub></b>	inRtcm	-	-	
bit 5	<b>U<sub>1</sub></b>	inRtcm3	-	-	
<b>14</b>	<b>X2</b>	outProtoMask	-	-	<p>A mask describing which output protocols are active.</p> <p>Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port.</p> <p>(The bitfield outRtcm3 is not supported for protocol versions less than 20.00)</p>
bit 0	<b>U<sub>1</sub></b>	outUbx	-	-	
bit 1	<b>U<sub>1</sub></b>	outNmea	-	-	
bit 5	<b>U<sub>1</sub></b>	outRtcm3	-	-	
<b>16</b>	<b>X2</b>	flags	-	-	Flags bit mask
bit 1	<b>U<sub>1</sub></b>	extendedTx Timeout	-	-	<p>Extended TX timeout: if set, the port will time out if allocated TX memory &gt;=4 kB and no activity for 1.5 s.</p> <p>(not supported for protocol versions less than 13.01)</p>
<b>18</b>	<b>U1[2]</b>	reserved2	-	-	Reserved

### 3.10.14.5 Port configuration for I2C (DDC) port

Message	UBX-CFG-PRT				
Type	Get/set				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.				
<i>Message structure</i>					
	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x06	0x00	20	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	portID	-	-	Port identifier number (= 0 for I2C (DDC) port)
1	U1	reserved0	-	-	<a href="#">Reserved</a>
2	X2	txReady	-	-	TX ready PIN configuration (not supported for protocol versions less than 13.01)
bit 0	U <sub>1</sub>	en	-	-	Enable TX ready feature for this port
bit 1	U <sub>1</sub>	pol	-	-	Polarity <ul style="list-style-type: none"><li>• 0 High-active</li><li>• 1 Low-active</li></ul>
bits 6...2	U <sub>5</sub>	pin	-	-	PIO to be used (must not be in use by another function)
bits 15...7	U <sub>9</sub>	thres	-	-	Threshold <ul style="list-style-type: none"><li>The given threshold is multiplied by 8 bytes.</li><li>The TX ready PIN goes active after &gt;= thres*8 bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream).</li><li>• 0x000 no threshold</li><li>• 0x001 8byte</li><li>• 0x002 16byte</li><li>• ...</li><li>• 0x1FE 4080byte</li><li>• 0xFF 4088byte</li></ul>
4	X4	mode	-	-	I2C (DDC) Mode Flags
bits 7...1	U <sub>7</sub>	slaveAddr	-	-	Slave address <ul style="list-style-type: none"><li>Range: 0x07 &lt; slaveAddr &lt; 0x78. Bit 0 must be 0</li></ul>
8	U1[4]	reserved1	-	-	<a href="#">Reserved</a>
12	X2	inProtoMask	-	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (The bitfield inRtcm3 is not supported for protocol versions less than 20.00)
bit 0	U <sub>1</sub>	inUbx	-	-	
bit 1	U <sub>1</sub>	inNmea	-	-	

	bit 2	U:1	inRtcm	-	-
	bit 5	U:1	inRtcm3	-	-
14	X2		outProtoMask	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (The bitfield outRtcm3 is not supported for protocol versions less than 20.00)
	bit 0	U:1	outUbx	-	-
	bit 1	U:1	outNmea	-	-
	bit 5	U:1	outRtcm3	-	-
16	X2		flags	-	Flags bit mask
	bit 1	U:1	extendedTx Timeout	-	Extended TX timeout: if set, the port will time out if allocated TX memory >=4 kB and no activity for 1.5 s (not supported for protocol versions less than 13.01).
18	U1[2]		reserved2	-	Reserved

### 3.10.15 UBX-CFG-PWR (0x06 0x57)

#### 3.10.15.1 Put receiver in a defined power state

<b>Message</b>	UBX-CFG-PWR				
	Put receiver in a defined power state				
Type	Set				
Comment	☞ This message is deprecated in protocol versions greater than 17. Use <a href="#">UBX-CFG-RST</a> for GNSS start/stop and <a href="#">UBX-RXM-PMREQ</a> for software backup.				
<b>Message structure</b>					
	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x06	0x57	8
					see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	U1[3]	reserved0	-	-	Reserved
4	U4	state	-	-	Enter system state <ul style="list-style-type: none"><li>• 0x52554E20 = GNSS running</li><li>• 0x53544F50 = GNSS stopped</li><li>• 0x42434B50 = Software backup. USB interface will be disabled, other wakeup source is needed.</li></ul>

### 3.10.16 UBX-CFG-RATE (0x06 0x08)

#### 3.10.16.1 Navigation/measurement rate settings

<b>Message</b>	UBX-CFG-RATE				
	Navigation/measurement rate settings				
Type	Get/set				
Comment	This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a> , <a href="#">UBX-CFG-VALGET</a> , <a href="#">UBX-CFG-VALDEL</a> instead. See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.				

This message allows the user to alter the rate at which navigation solutions (and the measurements that they depend on) are generated by the receiver. The calculation of the navigation solution is aligned to the top of a second zero (first second of the week) of the configured reference time system.

(Navigation period is an integer multiple of the measurement period for protocol versions greater than 17.00).

- Each measurement triggers the measurements generation and, if available, raw data output.
- The navRate value defines that every nth measurement triggers a navigation epoch.
- The update rate has a direct influence on the power consumption. The more fixes that are required, the more CPU power and communication resources are required.
- For most applications a 1 Hz update rate would be sufficient.
- When using power save mode, measurement and navigation rate can differ from the values configured here.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5	0x62	0x06	0x08	6	see below
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U2	measRate	-	ms	The elapsed time between GNSS measurements, which defines the rate, e.g. 100 ms => 10 Hz, 1000 ms => 1 Hz, 10000 ms => 0.1 Hz. Measurement rate should be greater than or equal to 25 ms. (Measurement rate should be greater than or equal to 50 ms for protocol versions less than 24.00).	
2	U2	navRate	-	cycles	The ratio between the number of measurements and the number of navigation solutions, e.g. 5 means five measurements for every navigation solution. Maximum value is 127. (This parameter is ignored and the navRate is fixed to 1 for protocol versions less than 18.00).	
4	U2	timeRef	-	-	The time system to which measurements are aligned: <ul style="list-style-type: none"> <li>• 0 = UTC time</li> <li>• 1 = GPS time</li> <li>• 2 = GLONASS time (not supported for protocol versions less than 18.00)</li> <li>• 3 = BeiDou time (not supported for protocol versions less than 18.00)</li> <li>• 4 = Galileo time (not supported for protocol versions less than 18.00)</li> <li>• 5 = NavIC time (not supported for protocol versions less than 29.00)</li> </ul>	

### 3.10.17 UBX-CFG-RINV (0x06 0x34)

#### 3.10.17.1 Contents of remote inventory

Message	UBX-CFG-RINV	Contents of remote inventory				
Type	Get/set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. If N is greater than 30, the excess bytes are discarded. See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5	0x62	0x06	0x34	1 + [0..n]	see below
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	X1	flags	-	-	Flags	

bit 0	U <sub>1</sub>	dump	-	-	Dump data at startup. Does not work if flag binary is set.
bit 1	U <sub>1</sub>	binary	-	-	Data is binary.
<i>Start of repeated group (N times)</i>					
1 + n	U1	data	-	-	Data to store/stored in remote inventory.
<i>End of repeated group (N times)</i>					

### 3.10.18 UBX-CFG-RST (0x06 0x04)

#### 3.10.18.1 Reset receiver / Clear backup data structures

Message	UBX-CFG-RST				
Type	Reset receiver / Clear backup data structures				
Comment	Do not expect this message to be acknowledged by the receiver. <ul style="list-style-type: none"> <li>• Newer FW version will not acknowledge this message at all.</li> <li>• Older FW version will acknowledge this message but the acknowledgement may not be sent completely before the receiver is reset.</li> </ul>				
Message structure	Header 0xb5 0x62	Class 0x06	ID 0x04	Length (Bytes) 4	Payload <i>see below</i>
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X2	navBbrMask	-	-	BBR sections to clear. The following special sets apply: <ul style="list-style-type: none"> <li>• 0x0000 Hot start</li> <li>• 0x0001 Warm start</li> <li>• 0xFFFF Cold start</li> </ul>
bit 0	U <sub>1</sub>	eph	-	-	Ephemeris
bit 1	U <sub>1</sub>	alm	-	-	Almanac
bit 2	U <sub>1</sub>	health	-	-	Health
bit 3	U <sub>1</sub>	klob	-	-	Klobuchar parameters
bit 4	U <sub>1</sub>	pos	-	-	Position
bit 5	U <sub>1</sub>	clkd	-	-	Clock drift
bit 6	U <sub>1</sub>	osc	-	-	Oscillator parameter
bit 7	U <sub>1</sub>	utc	-	-	UTC correction + GPS leap seconds parameters
bit 8	U <sub>1</sub>	rtc	-	-	RTC
bit 11	U <sub>1</sub>	sfdr	-	-	SFDR Parameters (only available on the ADR/UDR/HPS product variant) and weak signal compensation estimates
bit 12	U <sub>1</sub>	vmon	-	-	SFDR Vehicle Monitoring Parameter (only available on the ADR/UDR/HPS product variant)
bit 13	U <sub>1</sub>	tct	-	-	TCT Parameters (only available on the ADR/UDR/HPS product variant)
bit 15	U <sub>1</sub>	aop	-	-	Autonomous orbit parameters

2	U1	resetMode	-	-	Reset Type <ul style="list-style-type: none"> <li>• 0x00 = Hardware reset (watchdog) immediately</li> <li>• 0x01 = Controlled software reset</li> <li>• 0x02 = Controlled software reset (GNSS only)</li> <li>• 0x04 = Hardware reset (watchdog) after shutdown</li> <li>• 0x08 = Controlled GNSS stop</li> <li>• 0x09 = Controlled GNSS start</li> </ul>
3	U1	reserved0	-	-	Reserved

### 3.10.19 UBX-CFG-SBAS (0x06 0x16)

#### 3.10.19.1 SBAS configuration

Message	UBX-CFG-SBAS					
Type	SBAS configuration					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
<i>Comment</i> This message is deprecated in protocol versions greater than 23.01. Use <a href="#">UBX-CFG-VALSET</a> , <a href="#">UBX-CFG-VALGET</a> , <a href="#">UBX-CFG-VALDEL</a> instead.						
					This message configures the SBAS receiver subsystem (i.e. WAAS, EGNOS, MSAS). See SBAS configuration settings description in the integration manual for a detailed description of how these settings affect receiver operation.	
Byte offset	Type	Name	Scale	Unit	Description	
0	X1	mode	-	-	SBAS mode	
	bit 0	U:1	enabled	-	SBAS enabled (1) / disabled (0) - This field is deprecated; use <a href="#">UBX-CFG-GNSS</a> to enable/disable SBAS operation	
	bit 1	U:1	test	-	SBAS testbed: Use data anyhow (1) / Ignore data when in test mode (SBAS msg 0)	
1	X1	usage	-	-	SBAS usage	
	bit 0	U:1	range	-	Use SBAS GEOs as a ranging source (for navigation)	
	bit 1	U:1	diffCorr	-	Use SBAS differential corrections	
	bit 2	U:1	integrity	-	Use SBAS integrity information. If enabled, the receiver will only use GPS satellites for which integrity information is available.	
2	U1	maxSBAS	-	-	Maximum number of SBAS prioritized tracking channels (valid range: 0 - 3) to use (obsolete and superseded by <a href="#">UBX-CFG-GNSS</a> for protocol versions 14.00 and later).	
3	X1	scanmode2	-	-	Continuation of scanmode bitmask below	
	bit 0	U:1	PRN152	-		
	bit 1	U:1	PRN153	-		
	bit 2	U:1	PRN154	-		
	bit 3	U:1	PRN155	-		
	bit 4	U:1	PRN156	-		

bit 5	U:1	PRN157	-	-	
bit 6	U:1	PRN158	-	-	
4	X4	scanmode1	-	-	Which SBAS PRN numbers to search for (bitmask). If all bits are set to zero, auto-scan (i.e. all valid PRNs) are searched. Every bit corresponds to a PRN number.
bit 0	U:1	PRN120	-	-	
bit 1	U:1	PRN121	-	-	
bit 2	U:1	PRN122	-	-	
bit 3	U:1	PRN123	-	-	
bit 4	U:1	PRN124	-	-	
bit 5	U:1	PRN125	-	-	
bit 6	U:1	PRN126	-	-	
bit 7	U:1	PRN127	-	-	
bit 8	U:1	PRN128	-	-	
bit 9	U:1	PRN129	-	-	
bit 10	U:1	PRN130	-	-	
bit 11	U:1	PRN131	-	-	
bit 12	U:1	PRN132	-	-	
bit 13	U:1	PRN133	-	-	
bit 14	U:1	PRN134	-	-	
bit 15	U:1	PRN135	-	-	
bit 16	U:1	PRN136	-	-	
bit 17	U:1	PRN137	-	-	
bit 18	U:1	PRN138	-	-	
bit 19	U:1	PRN139	-	-	
bit 20	U:1	PRN140	-	-	
bit 21	U:1	PRN141	-	-	
bit 22	U:1	PRN142	-	-	
bit 23	U:1	PRN143	-	-	
bit 24	U:1	PRN144	-	-	
bit 25	U:1	PRN145	-	-	
bit 26	U:1	PRN146	-	-	
bit 27	U:1	PRN147	-	-	
bit 28	U:1	PRN148	-	-	

bit 29	U:1	PRN149	-	-
bit 30	U:1	PRN150	-	-
bit 31	U:1	PRN151	-	-

### 3.10.20 UBX-CFG-TMODE3 (0x06 0x71)

#### 3.10.20.1 Time mode settings 3

Message	UBX-CFG-TMODE3				
Type	Time mode settings 3				
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b> See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item. Configures the receiver to be in Time Mode. The position referred to in this message is that of the Antenna Reference Point (ARP). Note that using UBX-CFG-TMODE3 to set the receiver mode to Survey In or to Fixed Mode, will set automatically the dynamic platform model ( <a href="#">CFG-NAVSPG-DYNMODEL</a> ) to Stationary. Note that using UBX-CFG-TMODE3 to set the receiver mode to Disabled, will set automatically the dynamic platform model ( <a href="#">CFG-NAVSPG-DYNMODEL</a> ) to Portable.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x06	0x71	40	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	reserved0	-	-	Reserved
2	X2	flags	-	-	Receiver mode flags
bits 7...0	U:8	mode	-	-	Receiver Mode: <ul style="list-style-type: none"> <li>• 0 Disabled</li> <li>• 1 Survey In</li> <li>• 2 Fixed Mode (true ARP position information required)</li> <li>• 3-255 Reserved</li> </ul>
bit 8	U:1	ll1a	-	-	Position is given in LAT/LON/ALT (default is ECEF)
4	I4	ecefXOrLat	-	cm_or_deg*1e-7	WGS84 ECEF X coordinate (or latitude) of the ARP position, depending on flags above
8	I4	ecefYOrLon	-	cm_or_deg*1e-7	WGS84 ECEF Y coordinate (or longitude) of the ARP position, depending on flags above
12	I4	ecefZOrAlt	-	cm	WGS84 ECEF Z coordinate (or altitude) of the ARP position, depending on flags above
16	I1	ecefXOrLatHP	-	0.1_mm_or_deg *1e-9	High-precision WGS84 ECEF X coordinate (or latitude) of the ARP position, depending on flags above. Must be in the range -99..+99. The precise WGS84 ECEF X coordinate in units of cm, or the precise WGS84 ECEF latitude in units of 1e-7 degrees, is given by ecefXOrLat + (ecefXOrLatHP * 1e-2)

17	I1	ecefYOrLonHP	-	0.1_mm_or_deg *1e-9	High-precision WGS84 ECEF Y coordinate (or longitude) of the ARP position, depending on flags above. Must be in the range -99..+99.  The precise WGS84 ECEF Y coordinate in units of cm, or the precise WGS84 ECEF longitude in units of 1e-7 degrees, is given by ecefYOrLon + (ecefYOrLonHP * 1e-2)
18	I1	ecefZOrAltHP	-	0.1_mm	High-precision WGS84 ECEF Z coordinate (or altitude) of the ARP position, depending on flags above. Must be in the range -99..+99.  The precise WGS84 ECEF Z coordinate, or altitude coordinate, in units of cm is given by ecefZOrAlt + (ecefZOrAltHP * 1e-2)
19	U1	reserved1	-	-	Reserved
20	U4	fixedPosAcc	-	0.1_mm	Fixed position 3D accuracy
24	U4	svinMinDur	-	s	Survey-in minimum duration
28	U4	svinAccLimit	-	0.1_mm	Survey-in position accuracy limit
32	U1[8]	reserved2	-	-	Reserved

### 3.10.21 UBX-CFG-TP5 (0x06 0x31)

#### 3.10.21.1 Time pulse parameters

Message	UBX-CFG-TP5				
Type	Time pulse parameters				
Comment	This message is deprecated in protocol versions greater than 27. Use <a href="#">UBX-CFG-VALSET</a> , <a href="#">UBX-CFG-VALGET</a> , <a href="#">UBX-CFG-VALDEL</a> instead. See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x06	0x31	32
<i>Payload description:</i>					Checksum
Byte offset	Type	Name	Scale	Unit	Description
0	U1	tpIdx	-	-	Time pulse selection (0 = TIMEPULSE, 1 = TIMEPULSE2)
1	U1	version	-	-	Message version (0x01 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I2	antCableDelay	-	ns	Antenna cable delay
6	I2	rfGroupDelay	-	ns	RF group delay
8	U4	freqPeriod	-	Hz_or_us	Frequency or period time, depending on setting of bit 'isFreq'
12	U4	freqPeriodLock	-	Hz_or_us	Frequency or period time when locked to GNSS time, only used if 'lockedOtherSet' is set
16	U4	pulseLenRatio	-	us_or_2^-32	Pulse length or duty cycle, depending on 'isLength'
20	U4	pulseLenRatioLock	-	us_or_2^-32	Pulse length or duty cycle when locked to GNSS time, only used if 'lockedOtherSet' is set
24	I4	userConfigDelay	-	ns	User-configurable time pulse delay

28	X4	flags	-	-	Configuration flags
bit 0	U:1	active	-	-	If set enable time pulse; if pin assigned to another function, other function takes precedence. Must be set for FTS variant.
bit 1	U:1	lockGnssFreq	-	-	If set, synchronize time pulse to GNSS as soon as GNSS time is valid. If not set, or before GNSS time is valid, use local clock. This flag is ignored by the FTS product variant; in this case the receiver always locks to the best available time/frequency reference (which is not necessarily GNSS). This flag can be unset only in Timing product variants.
bit 2	U:1	lockedOtherSet	-	-	If set the receiver switches between the timepulse settings given by 'freqPeriodLocked' & 'pulseLenLocked' and those given by 'freqPeriod' & 'pulseLen'. The 'Locked' settings are used where the receiver has an accurate sense of time. For non-FTS products, this occurs when GNSS solution with a reliable time is available, but for FTS products the setting syncMode field governs behavior. In all cases, the receiver uses only 'freqPeriod' & 'pulseLen' when the flag is unset.
bit 3	U:1	isFreq	-	-	If set 'freqPeriodLock' and 'freqPeriod' are interpreted as frequency, otherwise interpreted as period.
bit 4	U:1	isLength	-	-	If set 'pulseLenRatioLock' and 'pulseLenRatio' interpreted as pulse length, otherwise interpreted as duty cycle.
bit 5	U:1	alignToTow	-	-	Align pulse to top of second (period time must be integer fraction of 1s). Also set 'lockGnssFreq' to use this feature. This flag is ignored by the FTS product variant; it is assumed to be always set (as is lockGnssFreq). Set maxSlewRate and maxPhaseCorrRate fields of <b>UBX-CFG-SMGR</b> to 0 to disable alignment.
bit 6	U:1	polarity	-	-	Pulse polarity: <ul style="list-style-type: none"><li>• 0 = falling edge at top of second</li><li>• 1 = rising edge at top of second</li></ul>
bits 10...7	U:4	gridUtcGnss	-	-	Timegrid to use: <ul style="list-style-type: none"><li>• 0 = UTC</li><li>• 1 = GPS</li><li>• 2 = GLONASS</li><li>• 3 = BeiDou</li><li>• 4 = Galileo (not supported for protocol versions less than 18.00)</li></ul> This flag is only relevant if 'lockGnssFreq' and 'alignToTow' are set. Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix attempts to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in <b>UBX-CFG-GNSS</b> .

bits 13...11	U:3	syncMode	-	-	Sync Manager lock mode to use: <ul style="list-style-type: none"> <li>• 0 = switch to 'freqPeriodLock' and 'pulseLenRatioLock' as soon as Sync Manager has an accurate time, never switch back to 'freqPeriod' and 'pulseLenRatio'</li> <li>• 1 = switch to 'freqPeriodLock' and 'pulseLenRatioLock' as soon as Sync Manager has an accurate time, and switch back to 'freqPeriod' and 'pulseLenRatio' as soon as time gets inaccurate</li> </ul> <p>This field is only relevant for the FTS product variant. This field is only relevant if the flag 'lockedOtherSet' is set.</p>
--------------	-----	----------	---	---	---

### 3.10.22 UBX-CFG-USB (0x06 0x1b)

#### 3.10.22.1 USB configuration

Message	UBX-CFG-USB																
Type	USB configuration																
Comment	<b>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</b>																
	See the <a href="#">Legacy UBX Message Fields Reference</a> for the corresponding configuration item.																
<b>Message structure</b> <table border="1"> <thead> <tr> <th>Header</th> <th>Class</th> <th>ID</th> <th>Length (Bytes)</th> <th>Payload</th> <th>Checksum</th> </tr> </thead> <tbody> <tr> <td>0xb5 0x62</td> <td>0x06</td> <td>0x1b</td> <td>108</td> <td>see below</td> <td>CK_A CK_B</td> </tr> </tbody> </table>						Header	Class	ID	Length (Bytes)	Payload	Checksum	0xb5 0x62	0x06	0x1b	108	see below	CK_A CK_B
Header	Class	ID	Length (Bytes)	Payload	Checksum												
0xb5 0x62	0x06	0x1b	108	see below	CK_A CK_B												
<i>Payload description:</i>																	
Byte offset	Type	Name	Scale	Unit	Description												
0	U2	vendorID	-	-	Vendor ID. This field shall only be set to registered Vendor IDs. Changing this field requires special Host drivers.												
2	U2	productID	-	-	Product ID. Changing this field requires special Host drivers.												
4	U1[2]	reserved0	-	-	<a href="#">Reserved</a>												
6	U1[2]	reserved1	-	-	<a href="#">Reserved</a>												
8	U2	power Consumption	-	mA	Power consumed by the device												
10	X2	flags	-	-	various configuration flags												
bit 0	U:1	reEnum	-	-	force re-enumeration												
bit 1	U:1	powerMode	-	-	self-powered (1), bus-powered (0)												
12	CH[32]	vendorString	-	-	String containing the vendor name. 32 ASCII bytes including 0-termination.												
44	CH[32]	productString	-	-	String containing the product name. 32 ASCII bytes including 0-termination.												

76	CH[32]	serialNumber	-	-	String containing the serial number. 32 ASCII bytes including 0-termination. Changing the String fields requires special Host drivers.
----	--------	--------------	---	---	---

### 3.10.23 UBX-CFG-VALDEL (0x06 0x8c)

#### 3.10.23.1 Delete configuration item values

Message	UBX-CFG-VALDEL					
Type	Delete configuration item values					
Comment	<p>Overview:</p> <ul style="list-style-type: none"> <li>This message can be used to delete saved configuration to effectively revert the item values to defaults.</li> <li>This message can delete saved configuration from the flash configuration layer and the BBR configuration layer. The changes will not be effective until these layers are loaded into the RAM layer.</li> <li>This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64.</li> <li>This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of <a href="#">UBX-CFG-VALDEL</a> that supports transactions.</li> <li>This message does not check if the resulting configuration is valid.</li> <li>See <a href="#">Receiver configuration</a> for details.</li> </ul> <p>This message returns a UBX-ACK-NAK and no configuration is applied:</p> <ul style="list-style-type: none"> <li>if any key is unknown to the receiver FW</li> <li>if the layer's bitfield does not specify a layer to delete a value from.</li> </ul> <p>Notes:</p> <ul style="list-style-type: none"> <li>If a key is sent multiple times within the same message, the value is effectively deleted only once.</li> <li>Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request.</li> <li>The provided keys can be complete key values (group and item specifiers) or wild-card specifications. A complete key value constitutes a deletion request for one key-value pair. A key value with a valid group specifier and 0xffff in the item part of the key value (bits 0-15) constitutes a deletion request for all items in the specified group. A key with a value of 0xffff in the group part of the key value (bits 16-27) is a deletion request for all items known to the receiver in all groups.</li> </ul>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x06	0x8c	4 + [0..n]·4	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x00 for this version)	
1	X1	layers	-	-	The layers where the configuration should be deleted from	
	bit 1	U1	bbr	-	Delete configuration from the BBR layer	
	bit 2	U1	flash	-	Delete configuration from the Flash layer	
2	U1[2]	reserved0	-	-	Reserved	
<i>Start of repeated group (N times)</i>						
4 + n·4	U4	keys	-	-	Configuration key IDs of the configuration items to be deleted	
<i>End of repeated group (N times)</i>						

### 3.10.23.2 Delete configuration item values (with transaction)

Message	UBX-CFG-VALDEL												
Type	Set												
Comment	<p>Overview:</p> <ul style="list-style-type: none"> <li>This message can be used to delete saved configuration to effectively revert them to defaults.</li> <li>This message can delete saved configuration from the flash configuration layer and the BBR configuration layer. The changes will not be effective until these layers are loaded into the RAM layer.</li> <li>This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64.</li> <li>This message can be used multiple times with the result being managed within a transaction.</li> <li>This message does not check if the resulting configuration is valid.</li> <li>See <a href="#">Receiver configuration</a> for details.</li> <li>See version 0 of <a href="#">UBX-CFG-VALDEL</a> for simplified version of this message.</li> </ul> <p>This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied:</p> <ul style="list-style-type: none"> <li>if any key within a transaction is unknown to the receiver FW</li> <li>if an invalid transaction state transition is requested</li> <li>if the layer's bitfield changes within a transaction</li> <li>if the layer's bitfield does not specify a layer to delete a value from.</li> </ul> <p>Notes:</p> <ul style="list-style-type: none"> <li>Any request for another UBX-CFG- message type (including UBX-CFG-VALSET and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied.</li> <li>This message can be sent with no keys to delete for the purposes of managing the transaction state transition.</li> <li>If a key is sent multiple times within the same message or within the same transaction, the value is effectively deleted only once.</li> <li>Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request.</li> <li>The provided keys can be complete key values (group and item specifiers) or wild-card specifications. A complete key value constitutes a deletion request for one key-value pair. A key value with a valid group specifier and 0xffff in the item part of the key value (bits 0-15) constitutes a deletion request for all items in the specified group. A key with a value of 0xffff in the group part of the key value (bits 16-27) is a deletion request for all items known to the receiver in all groups.</li> </ul>												
Message structure	<table border="1"> <thead> <tr> <th>Header</th> <th>Class</th> <th>ID</th> <th>Length (Bytes)</th> <th>Payload</th> <th>Checksum</th> </tr> </thead> <tbody> <tr> <td>0xb5 0x62</td> <td>0x06</td> <td>0x8c</td> <td>4 + [0..n]·4</td> <td>see below</td> <td>CK_A CK_B</td> </tr> </tbody> </table>	Header	Class	ID	Length (Bytes)	Payload	Checksum	0xb5 0x62	0x06	0x8c	4 + [0..n]·4	see below	CK_A CK_B
Header	Class	ID	Length (Bytes)	Payload	Checksum								
0xb5 0x62	0x06	0x8c	4 + [0..n]·4	see below	CK_A CK_B								

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	X1	layers	-	-	The layers where the configuration should be deleted from
	bit 1	U <sub>1</sub> . <sub>bbr</sub>	-	-	Delete configuration from the BBR layer
	bit 2	U <sub>1</sub> . <sub>flash</sub>	-	-	Delete configuration from the Flash layer
2	X1	transaction	-	-	Transaction action to be applied:
	bits 1...0	U <sub>2</sub> . <sub>action</sub>	-	-	Transaction action to be applied: <ul style="list-style-type: none"> <li>0 = Transactionless UBX-CFG-VALDEL: In the next UBX-CFG-VALDEL, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied. If a transaction has already been started, cancels any started transaction and the incoming configuration is applied.</li> <li>1 = (Re)Start deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or</li> </ul>

3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALDEL messages.

- 2 = Deletion transaction ongoing: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or 3.
- 3 = Apply and end a deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0 or 1.

3	U1	reserved0	-	-	Reserved
<i>Start of repeated group (N times)</i>					
4 + n·4	U4	keys	-	-	Configuration key IDs of the configuration items to be deleted
<i>End of repeated group (N times)</i>					

### 3.10.24 UBX-CFG-VALGET (0x06 0x8b)

#### 3.10.24.1 Get configuration items

<b>Message</b>	UBX-CFG-VALGET				
<b>Get configuration items</b>					
<b>Type</b>	Poll request				
<b>Comment</b>	<p>Overview:</p> <ul style="list-style-type: none"> <li>• This message is used to get configuration values by providing a list of configuration key IDs, which identify the configuration items to retrieve.</li> <li>• This message can specify the configuration layer where the values of the specified configuration items are retrieved from.</li> <li>• This message is limited to containing a maximum of 64 key IDs.</li> <li>• See <a href="#">Receiver configuration</a> for details.</li> </ul> <p>This message returns a UBX-ACK-NAK:</p> <ul style="list-style-type: none"> <li>• if any key is unknown to the receiver FW</li> <li>• if the layer field specifies an invalid layer to get the value from</li> <li>• if the keys array specifies more than 64 key IDs.</li> </ul> <p>Notes:</p> <ul style="list-style-type: none"> <li>• If a value is requested multiple times within the same poll request, then the reply will contain it multiple times.</li> <li>• The provided keys can be complete key values (group and item specifiers) or wild-card specifications. A complete key value will constitute a request for one key-value pair. A key value that has a valid group specifier and 0xffff in the item part of the key value (bits 0-15) constitutes a request for all items in the specified group. A key with a value of 0xffff in the group part of the key value (bits 16-27) is a request for all items known to the receiver in all groups.</li> <li>• The response message is limited to containing a maximum of 64 key-value pairs. If there are wild-card specifications then there may be more than 64 possible responses. In order to handle this, the 'position' field can specify that the response message should skip this number of key-value pairs before it starts constructing the message. This allows a large set of values to be retrieved 64 at a time. If the response contains less than 64 key-value pairs then all values have been reported, otherwise there may be more to read.</li> <li>• It is not possible to retrieve configuration values for the same configuration item from multiple configuration layers. Separate poll requests must be made for each desired layer.</li> </ul>				

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x06	0x8b	4 + [0..n]·4	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x00 for this version)	

1	U1	layer	-	-	The layer from which the configuration items should be retrieved: <ul style="list-style-type: none"><li>• 0 - RAM layer</li><li>• 1 - BBR layer</li><li>• 2 - Flash layer</li><li>• 7 - Default layer</li></ul>
2	U2	position	-	-	Skip this many key values before constructing output message
<i>Start of repeated group (N times)</i>					
4 + n·4	U4	keys	-	-	Configuration key IDs of the configuration items to be retrieved
<i>End of repeated group (N times)</i>					

### 3.10.24.2 Configuration items

Message	UBX-CFG-VALGET				
	Configuration items				
Type	Polled				
Comment	This message is output by the receiver to return requested configuration data (key and value pairs). See <a href="#">Receiver configuration</a> for details.				
<i>Message structure</i>					
Header	Class	ID	Length (Bytes)	Payload	Checksum
0xb5 0x62	0x06	0x8b	4 + [0..n]	see below	CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	U1	layer	-	-	The layer from which the configuration item was retrieved: <ul style="list-style-type: none"><li>• 0 - RAM layer</li><li>• 1 - BBR</li><li>• 2 - Flash</li><li>• 7 - Default</li></ul>
2	U2	position	-	-	Number of configuration items skipped in the result set before constructing this message (mirrors the equivalent field in the request message)
<i>Start of repeated group (N times)</i>					
4 + n	U1	cfgData	-	-	Configuration data (key and value pairs)
<i>End of repeated group (N times)</i>					

## 3.10.25 UBX-CFG-VALSET (0x06 0x8a)

### 3.10.25.1 Set configuration item values

Message	UBX-CFG-VALSET				
	Set configuration item values				
Type	Set				
Comment	Overview: <ul style="list-style-type: none"><li>• This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration items to change, and their new values.</li><li>• This message is limited to containing a maximum of 64 key-value pairs.</li><li>• This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of <a href="#">UBX-CFG-VALSET</a> that supports transactions.</li></ul>				
<i>Start of repeated group (N times)</i>					

- See [Receiver configuration](#) for details.

This message returns a UBX-ACK-NAK and no configuration is applied:

- if any key is unknown to the receiver FW
- if the layer's bitfield does not specify a layer to save a value to
- if the requested configuration is not valid. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer.

Notes:

- If a key is sent multiple times within the same message, then the value eventually being applied is the last sent.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x06	0x8a	4 + [0..n]	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x00 for this version)	
1	X1	layers	-	-	The layers where the configuration should be applied	
bit 0	U:1	ram	-	-	Update configuration in the RAM layer	
bit 1	U:1	bbr	-	-	Update configuration in the BBR layer	
bit 2	U:1	flash	-	-	Update configuration in the Flash layer	
2	U1[2]	reserved0	-	-	Reserved	
<i>Start of repeated group (N times)</i>						
4 + n	U1	cfgData	-	-	Configuration data (key and value pairs)	
<i>End of repeated group (N times)</i>						

### 3.10.25.2 Set configuration item values (with transaction)

<b>Message</b>	UBX-CFG-VALSET
<b>Set configuration item values (with transaction)</b>	
Type	Set
Comment	<p>Overview:</p> <ul style="list-style-type: none"> <li>• This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration items to change, and their new values.</li> <li>• This message is limited to containing a maximum of 64 key-value pairs.</li> <li>• This message can be used multiple times with the result being managed within a transaction. Within a transaction there is no limit on the number key-value pairs; a transaction is effectively limited to the number of known keys.</li> <li>• See <a href="#">Receiver configuration</a> for details.</li> <li>• See version 0 of <a href="#">UBX-CFG-VALSET</a> for simplified version of this message.</li> </ul> <p>This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied:</p> <ul style="list-style-type: none"> <li>• if any key within a transaction is unknown to the receiver FW</li> <li>• if an invalid transaction state transition is requested</li> <li>• if the layer's bitfield changes within a transaction</li> <li>• if the layer's bitfield does not specify a layer to save a value to</li> </ul> <p>This message returns a UBX-ACK-NAK, and no configuration is applied:</p> <ul style="list-style-type: none"> <li>• if the requested configuration is not valid. While in a transaction context, only the last message that requests to apply the transaction returns a UBX-ACK-NAK. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer. This also applies to a transactionless request.</li> </ul> <p>Notes:</p> <ul style="list-style-type: none"> <li>• Any request for another UBX-CFG-message type (including UBX-CFG-VALDEL and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied.</li> <li>• This message can be sent with no key/values to set for the purposes of managing the transaction state transition.</li> </ul>

- If a key is sent multiple times within the same message or within the same transaction, then the value eventually being applied is the last sent.

<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>		<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x06	0x8a	4 + [0..n]		see below	CK_A CK_B
<i>Payload description:</i>							
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>		<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	version		-	-	Message version (0x01 for this version)	
1	X1	layers		-	-	The layers where the configuration should be applied	
	bit 0	U <sub>1</sub> .ram		-	-	Update configuration in the RAM layer	
	bit 1	U <sub>1</sub> .bbR		-	-	Update configuration in the BBR layer	
	bit 2	U <sub>1</sub> .flash		-	-	Update configuration in the Flash layer	
2	U1	transaction		-	-	Transaction action to be applied	
	bits 1...0	U <sub>2</sub> .action		-	-	Transaction action to be applied:	
		<ul style="list-style-type: none"> <li>0 = Transactionless UBX-CFG-VALSET: In the next UBX-CFG-VALSET, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied (if valid). If a transaction has already been started, cancels any started transaction and the incoming configuration is applied (if valid).</li> <li>1 = (Re)Start set transaction: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALSET messages.</li> <li>2 = Set transaction ongoing: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3.</li> <li>3 = Apply and end a set transaction: In the next UBX-CFG-VALSET, it can be either 0 or 1.</li> </ul>					
3	U1	reserved0		-	-	Reserved	
<i>Start of repeated group (N times)</i>							
4 + n	U1	cfgData		-	-	Configuration data (key and value pairs)	
<i>End of repeated group (N times)</i>							

## 3.11 UBX-INF (0x04)

Messages in the UBX-INF class are used to output strings from the firmware or application code. All messages have an associated type to indicate the nature or priority of the message.

### 3.11.1 UBX-INF-DEBUG (0x04 0x04)

### 3.11.1.1 ASCII output with debug contents

Message UBX-INF-DEBUG						
ASCII output with debug contents						
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x04	0x04	[0..n]	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
<i>Start of repeated group (N times)</i>						
0 + n	CH	str	-	-	ASCII Character	
<i>End of repeated group (N times)</i>						

### 3.11.2 UBX-INF-ERROR (0x04 0x00)

#### 3.11.2.1 ASCII output with error contents

Message UBX-INF-ERROR						
ASCII output with error contents						
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x04	0x00	[0..n]	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
<i>Start of repeated group (N times)</i>						
0 + n	CH	str	-	-	ASCII Character	
<i>End of repeated group (N times)</i>						

### 3.11.3 UBX-INF-NOTICE (0x04 0x02)

#### 3.11.3.1 ASCII output with informational contents

Message UBX-INF-NOTICE						
ASCII output with informational contents						
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x04	0x02	[0..n]	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
<i>Start of repeated group (N times)</i>						
0 + n	CH	str	-	-	ASCII Character	
<i>End of repeated group (N times)</i>						

### 3.11.4 UBX-INF-TEST (0x04 0x03)

### 3.11.4.1 ASCII output with test contents

Message UBX-INF-TEST					
ASCII output with test contents					
Type	Output				
Comment	This message has a variable length payload, representing an ASCII string.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x04	0x03	[0..n]	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
<i>Start of repeated group (N times)</i>					
0 + n	CH	str	-	-	ASCII Character
<i>End of repeated group (N times)</i>					

### 3.11.5 UBX-INF-WARNING (0x04 0x01)

#### 3.11.5.1 ASCII output with warning contents

Message UBX-INF-WARNING					
ASCII output with warning contents					
Type	Output				
Comment	This message has a variable length payload, representing an ASCII string.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x04	0x01	[0..n]	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
<i>Start of repeated group (N times)</i>					
0 + n	CH	str	-	-	ASCII Character
<i>End of repeated group (N times)</i>					

## 3.12 UBX-LOG (0x21)

The messages in the UBX-LOG class are used to configure and report status information of the logging and data batching features.

### 3.12.1 UBX-LOG-CREATE (0x21 0x07)

#### 3.12.1.1 Create log file

Message UBX-LOG-CREATE					
Create log file					
Type	Command				
Comment	This message is used to create an initial logging file and activate the logging subsystem. UBX-ACK-ACK or UBX-ACK-NAK are returned to indicate success or failure. This message does not handle activation of recording or filtering of log entries (see <a href="#">UBX-CFG-LOGFILTER</a> ).				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x21	0x07	8	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description

0	U1	version	-	-	Message version (0x00 for this version)
1	X1	logCfg	-	-	Config flags
bit 0	U1	circular	-	-	Log is circular (new entries overwrite old ones in a full log) if this bit set
2	U1	reserved0	-	-	Reserved
3	U1	logSize	-	-	Indicates the size of the log: <ul style="list-style-type: none"> <li>• 0 (maximum safe size) = Ensures that logging will not be interrupted and enough space will be left available for all other uses of the filestore</li> <li>• 1 (minimum size) =</li> <li>• 2 (user-defined) = See 'userDefinedSize' below</li> </ul>
4	U4	userDefinedSize	-	bytes	Sets the maximum amount of space in the filestore that can be used by the logging task. This field is only applicable if logSize is set to user-defined.

### 3.12.2 UBX-LOG-ERASE (0x21 0x03)

#### 3.12.2.1 Erase logged data

<b>Message</b>	UBX-LOG-ERASE				
<b>Erase logged data</b>					
Type	Command				
Comment	This message deactivates the logging system and erases all logged data. <a href="#">UBX-ACK-ACK</a> or <a href="#">UBX-ACK-NAK</a> are returned to indicate success or failure.				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	<b>Payload</b>
	0xb5	0x62	0x21	0x03	0
<b>Payload</b>	This message has no payload.				<b>Checksum</b>
					CK_A CK_B

### 3.12.3 UBX-LOG-FINDTIME (0x21 0x0e)

#### 3.12.3.1 Find index of a log entry based on a given time

<b>Message</b>	UBX-LOG-FINDTIME				
<b>Find index of a log entry based on a given time</b>					
Type	Input				
Comment	This message can be used for a time-based search of a log. It can find the index of the first log entry with time equal to the given time, otherwise the index of the most recent entry with time less than the given time. This index can then be used with the <a href="#">UBX-LOG-RETRIEVE</a> message to provide time-based retrieval of log entries. Searching a log is effective for a given time later than the base date (January 1st, 2004). Searching a log for a given time earlier than the base date will result in an 'entry not found' response. (Searching a log for a given time earlier than the base date will result in a UBX-ACK-NAK message for protocol versions less than 18.00). Searching a log for a given time greater than the last recorded entry's time will return the index of the last recorded entry. (If the logging has stopped due to lack of file space, such a search will result in a UBX-ACK-NAK message for protocol versions less than 18.00).				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	<b>Payload</b>
	0xb5	0x62	0x21	0x0e	10
				<b>see below</b>	<b>Checksum</b>
				CK_A CK_B	
<i>Payload description:</i>					
<b>Byte offset</b>	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	type	-	-	Message type, 0 for request

2	U2	year	-	-	Year (1-65635) of UTC time
4	U1	month	-	-	Month (1-12) of UTC time
5	U1	day	-	-	Day (1-31) of UTC time
6	U1	hour	-	-	Hour (0-23) of UTC time
7	U1	minute	-	-	Minute (0-59) of UTC time
8	U1	second	-	-	Second (0-60) of UTC time
9	U1	reserved0	-	-	Reserved

### 3.12.3.2 Response to FINDTIME request

Message	UBX-LOG-FINDTIME				
Type	Response to FINDTIME request				
Comment					
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x21	0x0e	8	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	U1	type	-	-	Message type, 1 for response
2	U1[2]	reserved0	-	-	Reserved
4	U4	entryNumber	-	-	Index of the first log entry with time = given time, otherwise index of the most recent entry with time < given time. If 0xFFFFFFFF, no log entry found with time <= given time. The indexing of log entries is zero-based.

## 3.12.4 UBX-LOG-INFO (0x21 0x08)

### 3.12.4.1 Poll for log information

Message	UBX-LOG-INFO				
Type	Poll for log information				
Comment	Upon sending of this message, the receiver returns UBX-LOG-INFO as defined below.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x21	0x08	0	see below
<i>Payload</i>					
	This message has no payload.				

### 3.12.4.2 Log information

Message	UBX-LOG-INFO									
Type	Log information									
Comment	This message is used to report information about the logging subsystem.									
<i>Note:</i>										
<ul style="list-style-type: none"> <li>• The reported maximum log size will be smaller than that originally specified in LOG-CREATE due to logging and filestore implementation overheads.</li> <li>• Log entries are compressed in a variable length fashion, so it may be difficult to predict log space usage with any precision.</li> </ul>										

- There may be times when the receiver does not have an accurate time (e.g. if the week number is not yet known), in which case some entries will not have a timestamp. This may result in the oldest/newest entry time values not taking account of these entries.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5	0x62	0x21	0x08	48	see below
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x01 for this version)	
1	U1[3]	reserved0	-	-	Reserved	
4	U4	filestore Capacity	-	bytes	The capacity of the filestore	
8	U1[8]	reserved1	-	-	Reserved	
16	U4	currentMaxLog Size	-	bytes	The maximum size the current log is allowed to grow to	
20	U4	currentLogSize	-	bytes	Approximate amount of space in log currently occupied	
24	U4	entryCount	-	-	Number of entries in the log. Note: for circular logs this value will decrease when a group of entries is deleted to make space for new ones.	
28	U2	oldestYear	-	-	Oldest entry UTC year (1-65635) or zero if there are no entries with known time	
30	U1	oldestMonth	-	-	Oldest month (1-12)	
31	U1	oldestDay	-	-	Oldest day (1-31)	
32	U1	oldestHour	-	-	Oldest hour (0-23)	
33	U1	oldestMinute	-	-	Oldest minute (0-59)	
34	U1	oldestSecond	-	-	Oldest second (0-60)	
35	U1	reserved2	-	-	Reserved	
36	U2	newestYear	-	-	Newest year (1-65635) or zero if there are no entries with known time	
38	U1	newestMonth	-	-	Newest month (1-12)	
39	U1	newestDay	-	-	Newest day (1-31)	
40	U1	newestHour	-	-	Newest hour (0-23)	
41	U1	newestMinute	-	-	Newest minute (0-59)	
42	U1	newestSecond	-	-	Newest second (0-60)	
43	U1	reserved3	-	-	Reserved	
44	X1	status	-	-	Log status flags	
bit 3	U:1	recording	-	-	Log entry recording is currently turned on	
bit 4	U:1	inactive	-	-	Logging system not active - no log present	
bit 5	U:1	circular	-	-	The current log is circular	
45	U1[3]	reserved4	-	-	Reserved	

### 3.12.5 UBX-LOG-RETRIEVE (0x21 0x09)

### 3.12.5.1 Request log data

Message	UBX-LOG-RETRIEVE				
Type	Request log data				
Comment	<p>This message is used to request logged data (log recording must first be disabled, see <a href="#">UBX-CFG-LOGFILTER</a>). Log entries are returned in chronological order, using the messages <a href="#">UBX-LOG-RETRIEVEPOS</a> and <a href="#">UBX-LOG-RETRIEVESTRING</a>. If the odometer was enabled at the time a position was logged, then message <a href="#">UBX-LOG-RETRIEVEPOSEXTRA</a> will also be used. The maximum number of entries that can be returned in response to a single UBX-LOG-RETRIEVE message is 256. If more entries than this are required the message will need to be sent multiple times with different startNumbers. The retrieve will be stopped if any UBX-LOG message is received. The speed of transfer can be maximized by using a high data rate and temporarily stopping the GPS processing (see <a href="#">UBX-CFG-RST</a>).</p>				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x21	0x09	12	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	startNumber	-	-	Index of first log entry to be transferred. If it is larger than the index of the last available log entry, then the first log entry to be transferred is the last available log entry. The indexing of log entries is zero-based.
4	U4	entryCount	-	-	Number of log entries to transfer in total including the first entry to be transferred. If it is larger than the log entries available starting from the first entry to be transferred, then only the available log entries are transferred followed by a <a href="#">UBX-ACK-NAK</a> . The maximum is 256.
8	U1	version	-	-	Message version (0x00 for this version)
9	U1[3]	reserved0	-	-	Reserved

### 3.12.6 UBX-LOG-RETRIEVEPOS (0x21 0x0b)

#### 3.12.6.1 Position fix log entry

Message	UBX-LOG-RETRIEVEPOS				
Type	Position fix log entry				
Comment	This message is used to report a position fix log entry				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x21	0x0b	40	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	entryIndex	-	-	The index of this log entry
4	I4	lon	1e-7	deg	Longitude
8	I4	lat	1e-7	deg	Latitude
12	I4	hMSL	-	mm	Height above mean sea level
16	U4	hAcc	-	mm	Horizontal accuracy estimate
20	U4	gSpeed	-	mm/s	Ground speed (2-D)
24	U4	heading	1e-5	deg	Heading
28	U1	version	-	-	Message version (0x00 for this version)

29	U1	fixType	-	-	Fix type: <ul style="list-style-type: none"> <li>• 0x01 = Dead Reckoning only</li> <li>• 0x02 = 2D-Fix</li> <li>• 0x03 = 3D-Fix</li> <li>• 0x04 = GNSS + Dead Reckoning combined</li> </ul>
30	U2	year	-	-	Year (1-65635) of UTC time
32	U1	month	-	-	Month (1-12) of UTC time
33	U1	day	-	-	Day (1-31) of UTC time
34	U1	hour	-	-	Hour (0-23) of UTC time
35	U1	minute	-	-	Minute (0-59) of UTC time
36	U1	second	-	-	Second (0-60) of UTC time
37	U1	reserved0	-	-	Reserved
38	U1	numSV	-	-	Number of satellites used in the position fix
39	U1	reserved1	-	-	Reserved

### 3.12.7 UBX-LOG-RETRIEVEPOSEXTRA (0x21 0x0f)

#### 3.12.7.1 Odometer log entry

Message	UBX-LOG-RETRIEVEPOSEXTRA				
Odometer log entry					
Type	Output				
Comment	This message is used to report an odometer log entry				
<i>Message structure</i>					
	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x21	0x0f	32	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	entryIndex	-	-	The index of this log entry
4	U1	version	-	-	Message version (0x00 for this version)
5	U1	reserved0	-	-	Reserved
6	U2	year	-	-	Year (1-65635) of UTC time. Will be zero if time not known
8	U1	month	-	-	Month (1-12) of UTC time
9	U1	day	-	-	Day (1-31) of UTC time
10	U1	hour	-	-	Hour (0-23) of UTC time
11	U1	minute	-	-	Minute (0-59) of UTC time
12	U1	second	-	-	Second (0-60) of UTC time
13	U1[3]	reserved1	-	-	Reserved
16	U4	distance	-	-	Odometer distance traveled since the last time the odometer was reset by a <a href="#">UBX-NAV-RESETODO</a>
20	U1[12]	reserved2	-	-	Reserved

### 3.12.8 UBX-LOG-RETRIEVESTRING (0x21 0x0d)

### 3.12.8.1 Byte string log entry

<b>Message</b>	UBX-LOG-RETRIEVESTRING				
<b>Byte string log entry</b>					
Type	Output				
<i>Comment</i>	This message is used to report a byte string log entry				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x21	0x0d	16 + byteCount	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	entryIndex	-	-	The index of this log entry
4	U1	version	-	-	Message version (0x00 for this version)
5	U1	reserved0	-	-	Reserved
6	U2	year	-	-	Year (1-65635) of UTC time. Will be zero if time not known
8	U1	month	-	-	Month (1-12) of UTC time
9	U1	day	-	-	Day (1-31) of UTC time
10	U1	hour	-	-	Hour (0-23) of UTC time
11	U1	minute	-	-	Minute (0-59) of UTC time
12	U1	second	-	-	Second (0-60) of UTC time
13	U1	reserved1	-	-	Reserved
14	U2	byteCount	-	-	Size of string in bytes
<i>Start of repeated group (byteCount times)</i>					
16 + n	U1	bytes	-	-	The bytes of the string
<i>End of repeated group (byteCount times)</i>					

### 3.12.9 UBX-LOG-STRING (0x21 0x04)

#### 3.12.9.1 Store arbitrary string in on-board flash

<b>Message</b>	UBX-LOG-STRING				
<b>Store arbitrary string in on-board flash</b>					
Type	Command				
<i>Comment</i>	This message can be used to store an arbitrary byte string in the on-board flash memory. The maximum length that can be stored is 256 bytes.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x21	0x04	[0..n]	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
<i>Start of repeated group (N times)</i>					
0 + n	U1	bytes	-	-	The string of bytes to be logged (maximum 256)
<i>End of repeated group (N times)</i>					

## 3.13 UBX-MGA (0x13)

The messages in the UBX-MGA class are used for sending GNSS assistance (A-GNSS, aiding) information to the receiver as well as backing up the navigation database from the receiver to a host.

### 3.13.1 UBX-MGA-ACK (0x13 0x60)

#### 3.13.1.1 Multiple GNSS acknowledge message

Message	UBX-MGA-ACK-DATA0					
Type	Output					
Comment	This message is sent by a u-blox receiver to acknowledge the receipt of an assistance message. Acknowledgments are enabled by setting the <a href="#">CFG-NAVSPG-ACKAIDING</a> item. See section Flow control in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
<i>Header</i> 0xb5 0x62 <i>Class</i> 0x13 <i>ID</i> 0x60 <i>Length (Bytes)</i> 8						
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Type of acknowledgment:	
					<ul style="list-style-type: none"> <li>• 0 = The message was not used by the receiver (see infoCode field for an indication of why)</li> <li>• 1 = The message was accepted for use by the receiver (the infoCode field will be 0)</li> </ul>	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	infoCode	-	-	Provides greater information on what the receiver chose to do with the message contents:	
					<ul style="list-style-type: none"> <li>• 0 = The receiver accepted the data</li> <li>• 1 = The receiver does not know the time so it cannot use the data (To resolve this a <a href="#">UBX-MGA-INI-TIME_UTC</a> message should be supplied first)</li> <li>• 2 = The message version is not supported by the receiver</li> <li>• 3 = The message size does not match the message version</li> <li>• 4 = The message data could not be stored to the database</li> <li>• 5 = The receiver is not ready to use the message data</li> <li>• 6 = The message type is unknown</li> </ul>	
3	U1	msgId	-	-	UBX message ID of the acknowledged message	
4	U1[4]	msgPayload Start	-	-	The first 4 bytes of the acknowledged message's payload	

### 3.13.2 UBX-MGA-BDS (0x13 0x03)

#### 3.13.2.1 BeiDou ephemeris assistance for satellites svId 1..37

Message	UBX-MGA-BDS-EPH					
Type	Input					
Comment	This message allows the delivery of BeiDou D1/D2 ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.					

Message structure	Header	Class	ID	Length (Bytes)		Payload	Checksum
	0xb5	0x62	0x13	0x03	88	see below	CK_A CK_B
<i>Payload description:</i>							
Byte offset	Type	Name		Scale	Unit	Description	
0	U1	type		-	-	Message type (0x01 for this type)	
1	U1	version		-	-	Message version (0x00 for this version)	
2	U1	svId		-	-	BeiDou satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	reserved0		-	-	<a href="#">Reserved</a>	
4	U1	SatH1		-	-	Autonomous satellite Health flag	
5	U1	IODC		-	-	Issue of Data, Clock	
6	I2	a2		2^-66	s/s^2	Time polynomial coefficient 2	
8	I4	a1		2^-50	s/s	Time polynomial coefficient 1	
12	I4	a0		2^-33	s	Time polynomial coefficient 0	
16	U4	toc		2^3	s	Clock data reference time	
20	I2	TGD1		0.1	ns	Equipment Group Delay Differential	
22	U1	URAI		-	-	User Range Accuracy Index	
23	U1	IODE		-	-	Issue of Data, Ephemeris	
24	U4	toe		2^3	s	Ephemeris reference time	
28	U4	sqrtA		2^-19	m^0.5	Square root of semi-major axis	
32	U4	e		2^-33	-	Eccentricity	
36	I4	omega		2^-31	semi-circles	Argument of perigee	
40	I2	Deltan		2^-43	semi-circles/s	Mean motion difference from computed value	
42	I2	IDOT		2^-43	semi-circles/s	Rate of inclination angle	
44	I4	M0		2^-31	semi-circles	Mean anomaly at reference time	
48	I4	Omega0		2^-31	semi-circles	Longitude of ascending node of orbital of plane computed according to reference time	
52	I4	OmegaDot		2^-43	semi-circles/s	Rate of right ascension	
56	I4	i0		2^-31	semi-circles	Inclination angle at reference time	
60	I4	Cuc		2^-31	radians	Amplitude of cosine harmonic correction term to the argument of latitude	
64	I4	Cus		2^-31	radians	Amplitude of sine harmonic correction term to the argument of latitude	
68	I4	Crc		2^-6	m	Amplitude of cosine harmonic correction term to the orbit radius	
72	I4	Crs		2^-6	m	Amplitude of sine harmonic correction term to the orbit radius	
76	I4	Cic		2^-31	radians	Amplitude of cosine harmonic correction term to the angle of inclination	
80	I4	Cis		2^-31	radians	Amplitude of sine harmonic correction term to the angle of inclination	
84	U1[4]	reserved1		-	-	<a href="#">Reserved</a>	

### 3.13.2.2 BeiDou almanac assistance

Message	UBX-MGA-BDS-ALM BeiDou almanac assistance				
Type	Input				
Comment	This message allows the delivery of BeiDou almanac assistance to a receiver. See section AssistNow online in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x03	40	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x02 for this version)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	BeiDou satellite identifier (see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	<a href="#">Reserved</a>
4	U1	Wna	-	week	Almanac Week Number
5	U1	toa	2^12	s	Almanac reference time
6	I2	deltaI	2^-19	semi-circles	Almanac correction of orbit reference inclination at reference time
8	U4	sqrtA	2^-11	m^0.5	Almanac square root of semi-major axis
12	U4	e	2^-21	-	Almanac eccentricity
16	I4	omega	2^-23	semi-circles	Almanac argument of perigee
20	I4	M0	2^-23	semi-circles	Almanac mean anomaly at reference time
24	I4	Omega0	2^-23	semi-circles	Almanac longitude of ascending node of orbit plane at computed according to reference time
28	I4	omegaDot	2^-38	semi-circles/s	Almanac rate of right ascension
32	I2	a0	2^-20	s	Almanac satellite clock bias
34	I2	a1	2^-38	s/s	Almanac satellite clock rate
36	U1[4]	reserved1	-	-	<a href="#">Reserved</a>

### 3.13.2.3 BeiDou health assistance

Message	UBX-MGA-BDS-HEALTH BeiDou health assistance				
Type	Input				
Comment	This message allows the delivery of BeiDou health assistance from D1/D2 ephemeris to a receiver. See section AssistNow online in the integration manual for details. This message allows the delivery of health assistance data for all satellites with svld 1 to 30.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x03	68	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x04 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	<a href="#">Reserved</a>

4	U2[30]	healthCode	-	-	Each two-byte value represents a BeiDou SV (1-30). The 9 LSBs of each byte contain the 9 bit health code from subframe 5 pages 7,8 of the D1 message, and from subframe 5 pages 35,36 of the D2 message.
64	U1[4]	reserved1	-	-	Reserved

### 3.13.2.4 BeiDou UTC assistance

<b>Message</b>		UBX-MGA-BDS-UTC							
		BeiDou UTC assistance							
Type	Input								
<i>Comment</i> This message allows the delivery of BeiDou UTC assistance to a receiver. See section AssistNow online in the integration manual for details.									
Message structure	Header	Class	ID	Length (Bytes)	Payload				
	0xb5 0x62	0x13	0x03	20	see below				
<i>Payload description:</i>									
Byte offset	Type	Name	Scale	Unit	Description				
0	U1	type	-	-	Message type (0x05 for this type)				
1	U1	version	-	-	Message version (0x00 for this version)				
2	U1[2]	reserved0	-	-	Reserved				
4	I4	a0UTC	2^-30	s	BDT clock bias relative to UTC				
8	I4	a1UTC	2^-50	s/s	BDT clock rate relative to UTC				
12	I1	dtLS	-	s	Delta time due to leap seconds before the new leap second effective				
13	U1	reserved1	-	-	Reserved				
14	U1	wnRec	-	week	BeiDou week number of reception of this UTC parameter set (8-bit truncated)				
15	U1	wnLSF	-	week	Week number of the new leap second				
16	U1	dN	-	day	Day number of the new leap second				
17	I1	dtLSF	-	s	Delta time due to leap seconds after the new leap second effective				
18	U1[2]	reserved2	-	-	Reserved				

### 3.13.2.5 BeiDou ionosphere assistance

<b>Message</b>		UBX-MGA-BDS-IONO							
		BeiDou ionosphere assistance							
Type	Input								
<i>Comment</i> This message allows the delivery of BeiDou ionospheric assistance to a receiver. See section AssistNow online in the integration manual for details.									
Message structure	Header	Class	ID	Length (Bytes)	Payload				
	0xb5 0x62	0x13	0x03	16	see below				
<i>Payload description:</i>									
Byte offset	Type	Name	Scale	Unit	Description				
0	U1	type	-	-	Message type (0x06 for this type)				
1	U1	version	-	-	Message version (0x00 for this version)				
2	U1[2]	reserved0	-	-	Reserved				
4	I1	alpha0	2^-30	s	Ionospheric parameter alpha0				

5	I1	alpha1	2^-27	s/pi	Ionospheric parameter alpha1
6	I1	alpha2	2^-24	s/pi^2	Ionospheric parameter alpha2
7	I1	alpha3	2^-24	s/pi^3	Ionospheric parameter alpha3
8	I1	beta0	2^11	s	Ionospheric parameter beta0
9	I1	beta1	2^14	s/pi	Ionospheric parameter beta1
10	I1	beta2	2^16	s/pi^2	Ionospheric parameter beta2
11	I1	beta3	2^16	s/pi^3	Ionospheric parameter beta3
12	U1[4]	reserved1	-	-	Reserved

### 3.13.3 UBX-MGA-DBD (0x13 0x80)

#### 3.13.3.1 Poll the navigation database

<b>Message</b>	UBX-MGA-DBD				
<b>Poll the navigation database</b>					
<b>Type</b>	Poll request				
<b>Comment</b>	Poll the whole navigation data base. The receiver will send all available data from its internal database. The receiver will indicate the finish of the transmission with a <a href="#">UBX-MGA-ACK</a> . The msgPayloadStart field of the UBX-MGA-ACK message will contain a U4 representing the number of UBX-MGA-DBD-DATA* messages sent.				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	<b>Payload</b>
	0xb5	0x62	0x13	0x80	0
<b>Payload</b>	This message has no payload.				

#### 3.13.3.2 Navigation database dump entry

<b>Message</b>	UBX-MGA-DBD				
<b>Navigation database dump entry</b>					
<b>Type</b>	Input/output				
<b>Comment</b>	Navigation database entry. The data fields are firmware-specific. Transmission of this type of message will be acknowledged by <a href="#">UBX-MGA-ACK</a> messages, if acknowledgment has been enabled.  See section AssistNow online in the integration manual for details.  The maximum payload size for firmware 2.01 onwards is 164 bytes (which makes the maximum message size 172 bytes).  ☞ UBX-MGA-DBD messages are only intended to be sent back to the same receiver that generated them.				
<b>Message structure</b>					
	Header	Class	ID	Length (Bytes)	<b>Payload</b>
	0xb5	0x62	0x13	0x80	12 + [0..n]
<b>Payload description:</b>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	U1[12]	reserved0	-	-	Reserved
<b>Start of repeated group (N times)</b>					
12 + n	U1	data	-	-	firmware-specific data
<b>End of repeated group (N times)</b>					

### 3.13.4 UBX-MGA-GAL (0x13 0x02)

### 3.13.4.1 Galileo ephemeris assistance

Message	UBX-MGA-GAL-EPH Galileo ephemeris assistance				
Type	Input				
Comment	This message allows the delivery of Galileo ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x02	76	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x01 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	Galileo Satellite identifier (see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	<a href="#">Reserved</a>
4	U2	iodNav	-	-	Ephemeris and clock correction Issue of Data
6	I2	deltaN	2^-43	semi-circles/s	Mean motion difference from computed value
8	I4	m0	2^-31	semi-circles	Mean anomaly at reference time
12	U4	e	2^-33	-	Eccentricity
16	U4	sqrtA	2^-19	m^0.5	Square root of the semi-major axis
20	I4	omega0	2^-31	semi-circles	Longitude of ascending node of orbital plane at weekly epoch
24	I4	i0	2^-31	semi-circles	Inclination angle at reference time
28	I4	omega	2^-31	semi-circles	Argument of perigee
32	I4	omegaDot	2^-43	semi-circles/s	Rate of change of right ascension
36	I2	iDot	2^-43	semi-circles/s	Rate of change of inclination angle
38	I2	cuc	2^-29	radians	Amplitude of the cosine harmonic correction term to the argument of latitude
40	I2	cus	2^-29	radians	Amplitude of the sine harmonic correction term to the argument of latitude
42	I2	crc	2^-5	radians	Amplitude of the cosine harmonic correction term to the orbit radius
44	I2	crs	2^-5	radians	Amplitude of the sine harmonic correction term to the orbit radius
46	I2	cic	2^-29	radians	Amplitude of the cosine harmonic correction term to the angle of inclination
48	I2	cis	2^-29	radians	Amplitude of the sine harmonic correction term to the angle of inclination
50	U2	toe	60	s	Ephemeris reference time
52	I4	af0	2^-34	s	SV clock bias correction coefficient
56	I4	af1	2^-46	s/s	SV clock drift correction coefficient
60	I1	af2	2^-59	s/s squared	SV clock drift rate correction coefficient

61	U1	sisaIndexE1 E5b	-	-	Signal-In-Space Accuracy index for dual frequency E1-E5b
62	U2	toc	60	s	Clock correction data reference Time of Week
64	I2	bgdE1E5b	2^-32	s	E1-E5b Broadcast Group Delay
66	U1[2]	reserved1	-	-	Reserved
68	U1	healthE1B	-	-	E1-B Signal Health Status
69	U1	dataValidityE1 B	-	-	E1-B Data Validity Status
70	U1	healthE5b	-	-	E5b Signal Health Status
71	U1	dataValidity E5b	-	-	E5b Data Validity Status
72	U1[4]	reserved2	-	-	Reserved

### 3.13.4.2 Galileo almanac assistance

Message	UBX-MGA-GAL-ALM Galileo almanac assistance				
Type	Input				
Comment	This message allows the delivery of Galileo almanac assistance to a receiver. See section AssistNow online in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x13	0x02	32
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	Galileo Satellite identifier (see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	Reserved
4	U1	ioda	-	-	Almanac Issue of Data
5	U1	almWNa	-	week	Almanac reference week number
6	U2	toa	600	s	Almanac reference time
8	I2	deltaSqrtA	2^-9	m^0.5	Difference with respect to the square root of the nominal semi-major axis (29 600 km)
10	U2	e	2^-16	-	Eccentricity
12	I2	deltaI	2^-14	semi-circles	Inclination at reference time relative to i0 = 56 degree
14	I2	omega0	2^-15	semi-circles	Longitude of ascending node of orbital plane at weekly epoch
16	I2	omegaDot	2^-33	semi-circles/s	Rate of change of right ascension
18	I2	omega	2^-15	semi-circles	Argument of perigee
20	I2	m0	2^-15	semi-circles	Satellite mean anomaly at reference time
22	I2	af0	2^-19	s	Satellite clock correction bias 'truncated'
24	I2	af1	2^-38	s/s	Satellite clock correction linear 'truncated'
26	U1	healthE1B	-	-	Satellite E1-B signal health status

27	U1	healthE5b	-	-	Satellite E5b signal health status
28	U1[4]	reserved1	-	-	Reserved

### 3.13.4.3 Galileo GPS time offset assistance

<b>Message</b> UBX-MGA-GAL-TIMEOFFSET					
<b>Galileo GPS time offset assistance</b>					
Type	Input				
<b>Comment</b>	This message allows the delivery of Galileo time to GPS time offset. See section AssistNow online in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x02	12	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x03 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I2	a0G	2^-35	s	Constant term of the polynomial describing the offset
6	I2	a1G	2^-51	s/s	Rate of change of the offset
8	U1	t0G	3600	s	Reference time for GGTO data
9	U1	wn0G	-	weeks	Week Number of GGTO reference
10	U1[2]	reserved1	-	-	Reserved

### 3.13.4.4 Galileo UTC assistance

<b>Message</b> UBX-MGA-GAL-UTC					
<b>Galileo UTC assistance</b>					
Type	Input				
<b>Comment</b>	This message allows the delivery of Galileo UTC assistance to a receiver. See section AssistNow online in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x02	20	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x05 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	a0	2^-30	s	First parameter of UTC polynomial
8	I4	a1	2^-50	s/s	Second parameter of UTC polynomial
12	I1	dtLS	-	s	Delta time due to current leap seconds
13	U1	tot	3600	s	UTC parameters reference time of week (Galileo time)
14	U1	wnt	-	weeks	UTC parameters reference week number (the 8-bit WNT field)
15	U1	wnLSF	-	weeks	Week number at the end of which the future leap second becomes effective (the 8-bit WNLSF field)
16	U1	dN	-	days	Day number at the end of which the future leap second becomes effective

17	I1	dTLSF	-	s	Delta time due to future leap seconds
18	U1[2]	reserved1	-	-	Reserved

### 3.13.5 UBX-MGA-GLO (0x13 0x06)

#### 3.13.5.1 GLONASS ephemeris assistance

Message	UBX-MGA-GLO-EPH					
Type	Input					
Comment	This message allows the delivery of GLONASS ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	Header 0xb5 0x62	Class 0x13	ID 0x06	Length (Bytes) 48	Payload	Checksum
<i>Payload description:</i>					<i>see below</i>	CK_A CK_B
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x01 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1	svId	-	-	GLONASS Satellite identifier (see <a href="#">Satellite Numbering</a> )	
3	U1	reserved0	-	-	Reserved	
4	U1	FT	-	-	User range accuracy	
5	U1	B	-	-	Health flag from string 2	
6	U1	M	-	-	Type of GLONASS satellite (1 indicates GLONASS-M)	
7	I1	H	-	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6), -128 for unknown	
8	I4	x	2^-11	km	X component of the SV position in PZ-90.02 coordinate System	
12	I4	y	2^-11	km	Y component of the SV position in PZ-90.02 coordinate System	
16	I4	z	2^-11	km	Z component of the SV position in PZ-90.02 coordinate System	
20	I4	dx	2^-20	km/s	X component of the SV velocity in PZ-90.02 coordinate System	
24	I4	dy	2^-20	km/s	Y component of the SV velocity in PZ-90.02 coordinate System	
28	I4	dz	2^-20	km/s	Z component of the SV velocity in PZ-90.02 coordinate System	
32	I1	ddx	2^-30	km/s^2	X component of the SV acceleration in PZ-90.02 coordinate System	
33	I1	ddy	2^-30	km/s^2	Y component of the SV acceleration in PZ-90.02 coordinate System	
34	I1	ddz	2^-30	km/s^2	Z component of the SV acceleration in PZ-90.02 coordinate System	
35	U1	tb	15	minutes	Index of a time interval within current day according to UTC(SU)	
36	I2	gamma	2^-40	-	Relative carrier frequency deviation	
38	U1	E	-	days	Ephemeris data age indicator	

39	I1	deltaTau	2^-30	s	Time difference between L2 and L1 band
40	I4	tau	2^-30	s	SV clock bias
44	U1[4]	reserved1	-	-	Reserved

### 3.13.5.2 GLONASS almanac assistance

<b>Message</b> UBX-MGA-GLO-ALM					
GLONASS almanac assistance					
Type	Input				
Comment	This message allows the delivery of GLONASS almanac assistance to a receiver. See section AssistNow online in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x06	36	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	GLONASS Satellite identifier (see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	Reserved
4	U2	N	-	days	Reference calendar day number of almanac within the four-year period (from string 5)
6	U1	M	-	-	Type of GLONASS satellite (1 indicates GLONASS-M)
7	U1	C	-	-	Unhealthy flag at instant of almanac upload (1 indicates operability of satellite)
8	I2	tau	2^-18	s	Coarse time correction to GLONASS time
10	U2	epsilon	2^-20	-	Eccentricity
12	I4	lambda	2^-20	semi-circles	Longitude of the first (within the N-day) ascending node of satellite orbit in PC-90.02 coordinate system
16	I4	deltaI	2^-20	semi-circles	Correction to the mean value of inclination
20	U4	tLambda	2^-5	s	Time of the first ascending node passage
24	I4	deltaT	2^-9	s/orbital-period	Correction to the mean value of Draconian period
28	I1	deltaDT	2^-14	s/orbital-period^2	Rate of change of Draconian period
29	I1	H	-	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6)
30	I2	omega	-	-	Argument of perigee
32	U1[4]	reserved1	-	-	Reserved

### 3.13.5.3 GLONASS auxiliary time offset assistance

<b>Message</b> UBX-MGA-GLO-TIMEOFFSET					
GLONASS auxiliary time offset assistance					
Type	Input				
Comment	This message allows the delivery of auxiliary GLONASS assistance (including the GLONASS time offsets to other GNSS systems) to a receiver. See section AssistNow online in the integration manual for details.				

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x06	20	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x03 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U2	N	-	days	Reference calendar day number within the four-year period of almanac (from string 5)	
4	I4	tauC	$2^{-27}$	s	Time scale correction to UTC(SU) time	
8	I4	tauGps	$2^{-31}$	s	Correction to GPS time relative to GLONASS time	
12	I2	B1	$2^{-10}$	s	Coefficient to determine delta UT1	
14	I2	B2	$2^{-16}$	s/msd	Rate of change of delta UT1	
16	U1[4]	reserved0	-	-	Reserved	

### 3.13.6 UBX-MGA-GPS (0x13 0x00)

#### 3.13.6.1 GPS ephemeris assistance

Message	UBX-MGA-GPS-EPH				
	GPS ephemeris assistance				
Type	Input				
Comment	This message allows the delivery of GPS ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x01 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	GPS Satellite identifier (see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	Reserved
4	U1	fitInterval	-	-	Fit interval flag
5	U1	uraIndex	-	-	URA index
6	U1	svHealth	-	-	SV health
7	I1	tgd	$2^{-31}$	s	Group delay differential
8	U2	iodc	-	-	IODC
10	U2	toc	$2^4$	s	Clock data reference time
12	U1	reserved1	-	-	Reserved
13	I1	af2	$2^{-55}$	s/s squared	Time polynomial coefficient 2
14	I2	af1	$2^{-43}$	s/s	Time polynomial coefficient 1
16	I4	af0	$2^{-31}$	s	Time polynomial coefficient 0
20	I2	crs	$2^{-5}$	m	Crs
22	I2	deltaN	$2^{-43}$	semi-circles/s	Mean motion difference from computed value

24	I4	m0	2^-31	semi-circles	Mean anomaly at reference time
28	I2	cuc	2^-29	radians	Amplitude of cosine harmonic correction term to argument of latitude
30	I2	cus	2^-29	radians	Amplitude of sine harmonic correction term to argument of latitude
32	U4	e	2^-33	-	Eccentricity
36	U4	sqrtA	2^-19	$m^{0.5}$	Square root of the semi-major axis
40	U2	toe	2^4	s	Reference time of ephemeris
42	I2	cic	2^-29	radians	Amplitude of cos harmonic correction term to angle of inclination
44	I4	omega0	2^-31	semi-circles	Longitude of ascending node of orbit plane at weekly epoch
48	I2	cis	2^-29	radians	Amplitude of sine harmonic correction term to angle of inclination
50	I2	crc	2^-5	m	Amplitude of cosine harmonic correction term to orbit radius
52	I4	i0	2^-31	semi-circles	Inclination angle at reference time
56	I4	omega	2^-31	semi-circles	Argument of perigee
60	I4	omegaDot	2^-43	semi-circles/s	Rate of right ascension
64	I2	idot	2^-43	semi-circles/s	Rate of inclination angle
66	U1[2]	reserved2	-	-	Reserved

### 3.13.6.2 GPS almanac assistance

Message	UBX-MGA-GPS-ALM GPS almanac assistance				
Type	Input				
Comment	This message allows the delivery of GPS almanac assistance to a receiver. See section AssistNow online in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x00	36	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	GPS Satellite identifier (see <a href="#">Satellite Numbering</a> )
3	U1	svHealth	-	-	SV health information
4	U2	e	2^-21	-	Eccentricity
6	U1	almWNa	-	week	Reference week number of almanac (the 8-bit WNa field)
7	U1	toa	2^12	s	Reference time of almanac
8	I2	deltaI	2^-19	semi-circles	Delta inclination angle at reference time

10	I2	omegaDot	$2^{-38}$	semi-circles/s	Rate of right ascension
12	U4	sqrtA	$2^{-11}$	$m^{0.5}$	Square root of the semi-major axis
16	I4	omega0	$2^{-23}$	semi-circles	Longitude of ascending node of orbit plane
20	I4	omega	$2^{-23}$	semi-circles	Argument of perigee
24	I4	m0	$2^{-23}$	semi-circles	Mean anomaly at reference time
28	I2	af0	$2^{-20}$	s	Time polynomial coefficient 0 (8 MSBs)
30	I2	af1	$2^{-38}$	s/s	Time polynomial coefficient 1
32	U1[4]	reserved0	-	-	Reserved

### 3.13.6.3 GPS health assistance

**Message** UBX-MGA-GPS-HEALTH

**GPS health assistance**

Type	Input				
Comment	This message allows the delivery of GPS health assistance to a receiver. See section AssistNow online in the integration manual for details.				
<i>Message structure</i>					
Header	Class	ID	Length (Bytes)	Payload	
0xb5 0x62	0x13	0x00	40	see below	
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x04 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	U1[32]	healthCode	-	-	Each byte represents a GPS SV (1-32). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5 page 25.
36	U1[4]	reserved1	-	-	Reserved

### 3.13.6.4 GPS UTC assistance

**Message** UBX-MGA-GPS-UTC

**GPS UTC assistance**

Type	Input				
Comment	This message allows the delivery of GPS UTC assistance to a receiver. See section AssistNow online in the integration manual for details.				
<i>Message structure</i>					
Header	Class	ID	Length (Bytes)	Payload	
0xb5 0x62	0x13	0x00	20	see below	
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x05 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	utca0	$2^{-30}$	s	First parameter of UTC polynomial
8	I4	utca1	$2^{-50}$	s/s	Second parameter of UTC polynomial

12	I1	utcDtLS	-	s	Delta time due to current leap seconds
13	U1	utcTot	2^12	s	UTC parameters reference time of week (GPS time)
14	U1	utcWNt	-	weeks	UTC parameters reference week number (the 8-bit WNt field)
15	U1	utcWNlsf	-	weeks	Week number at the end of which the future leap second becomes effective (the 8-bit WNLSF field)
16	U1	utcDn	-	days	Day number at the end of which the future leap second becomes effective
17	I1	utcDtLSF	-	s	Delta time due to future leap seconds
18	U1[2]	reserved1	-	-	Reserved

### 3.13.6.5 GPS ionosphere assistance

<b>Message</b>	UBX-MGA-GPS-IONO				
	GPS ionosphere assistance				
<b>Type</b>	Input				
<b>Comment</b>	This message allows the delivery of GPS ionospheric assistance to a receiver. See section AssistNow online in the integration manual for details.				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x00	16	see below
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	U1	type	-	-	Message type (0x06 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I1	ionoAlpha0	2^-30	s	Ionospheric parameter alpha0 [s]
5	I1	ionoAlpha1	2^-27	s/semi-circle	Ionospheric parameter alpha1 [s/semi-circle]
6	I1	ionoAlpha2	2^-24	s/(semi-circle^2)	Ionospheric parameter alpha2 [s/semi-circle^2]
7	I1	ionoAlpha3	2^-24	s/(semi-circle^3)	Ionospheric parameter alpha3 [s/semi-circle^3]
8	I1	ionoBeta0	2^11	s	Ionospheric parameter beta0 [s]
9	I1	ionoBeta1	2^14	s/semi-circle	Ionospheric parameter beta1 [s/semi-circle]
10	I1	ionoBeta2	2^16	s/(semi-circle^2)	Ionospheric parameter beta2 [s/semi-circle^2]
11	I1	ionoBeta3	2^16	s/(semi-circle^3)	Ionospheric parameter beta3 [s/semi-circle^3]
12	U1[4]	reserved1	-	-	Reserved

### 3.13.7 UBX-MGA-INI (0x13 0x40)

#### 3.13.7.1 Initial position assistance

<b>Message</b>	UBX-MGA-INI-POS_XYZ				
	Initial position assistance				
<b>Type</b>	Input				
<b>Comment</b>	This message allows the delivery of initial position assistance to a receiver in cartesian ECEF coordinates. This message is equivalent to the <a href="#">UBX-MGA-INI-POS_LLH</a> message, except for the coordinate system.				

See section AssistNow Online in the integration manual for details.

 Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5	0x62	0x13	0x40	20	see below

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x00 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	ecefX	-	cm	WGS84 ECEF X coordinate
8	I4	ecefY	-	cm	WGS84 ECEF Y coordinate
12	I4	ecefZ	-	cm	WGS84 ECEF Z coordinate
16	U4	posAcc	-	cm	Position accuracy (stddev)

### 3.13.7.2 Initial position assistance

Message	UBX-MGA-INI-POS_LLH					
	Initial position assistance					
Type	Input					
Comment	This message allows the delivery of initial position assistance to a receiver in WGS84 lat/long/alt coordinates. This message is equivalent to the <a href="#">UBX-MGA-INI-POS_XYZ</a> message, except for the coordinate system. See section AssistNow online in the integration manual for details.					
	 Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5	0x62	0x13	0x40	20	see below

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x01 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	lat	1e-7	deg	WGS84 Latitude
8	I4	lon	1e-7	deg	WGS84 Longitude
12	I4	alt	-	cm	WGS84 Altitude
16	U4	posAcc	-	cm	Position accuracy (stddev)

### 3.13.7.3 Initial time assistance

Message	UBX-MGA-INI-TIME_UTC					
	Initial time assistance					
Type	Input					
Comment	This message allows the delivery of UTC time assistance to a receiver. This message is equivalent to the <a href="#">UBX-MGA-INI-TIME_GNSS</a> message, except for the time base. See section AssistNow online in the integration manual for details.					
	 Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5	0x62	0x13	0x40	24	see below

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x10 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	X1	ref	-	-	Reference to be used to set time
bits 3...0	U <sub>4</sub>	source	-	-	<ul style="list-style-type: none"> <li>• 0 = none, i.e. on receipt of message (will be inaccurate!)</li> <li>• 1 = relative to pulse sent to EXTINT0</li> <li>• 2 = relative to pulse sent to EXTINT1</li> <li>• 3-15 = reserved</li> </ul>
bit 4	U <sub>1</sub>	fall	-	-	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT
bit 5	U <sub>1</sub>	last	-	-	use last EXTINT pulse (default next pulse) - only if source is EXTINT
3	I1	leapSecs	-	s	Number of leap seconds since 1980 (or 0x80 = -128 if unknown)
4	U2	year	-	-	Year
6	U1	month	-	-	Month, starting at 1
7	U1	day	-	-	Day, starting at 1
8	U1	hour	-	-	Hour, from 0 to 23
9	U1	minute	-	-	Minute, from 0 to 59
10	U1	second	-	s	Seconds, from 0 to 59
11	X1	bitfield0	-	-	bitfield:
bit 0	U <sub>1</sub>	trustedSource	-	-	Time is provided from a trusted source. Potentially usable for replay attack detection <ul style="list-style-type: none"> <li>• 0: Unknown</li> <li>• 1: Time source can be trusted for spoofing detection</li> </ul>
12	U4	ns	-	ns	Nanoseconds, from 0 to 999,999,999
16	U2	tAccS	-	s	Seconds part of time accuracy
18	U1[2]	reserved0	-	-	Reserved
20	U4	tAccNs	-	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999

### 3.13.7.4 Initial time assistance

Message	UBX-MGA-INI-TIME_GNSS			
	Initial time assistance			
Type	Input			
Comment	This message allows the delivery of time assistance to a receiver in a chosen GNSS timebase. This message is equivalent to the <a href="#">UBX-MGA-INI-TIME_UTC</a> message, except for the time base. See section AssistNow online in the integration manual for details. Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.			
Message structure	Header	Class	ID	Length (Bytes)
	0xb5	0x62	0x13	0x40 24
Payload description:	Payload	Checksum		
	see below	CK_A CK_B		

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x11 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	X1	ref	-	-	Reference to be used to set time
bits 3...0	U4	source	-	-	<ul style="list-style-type: none"> <li>• 0 = none, i.e. on receipt of message (will be inaccurate!)</li> <li>• 1 = relative to pulse sent to EXTINT0</li> <li>• 2 = relative to pulse sent to EXTINT1</li> <li>• 3-15 = reserved</li> </ul>
bit 4	U1	fall	-	-	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT
bit 5	U1	last	-	-	use last EXTINT pulse (default next pulse) - only if source is EXTINT
3	U1	gnssId	-	-	Source of time information. Currently supported: <ul style="list-style-type: none"> <li>• 0 = GPS time</li> <li>• 2 = Galileo time</li> <li>• 3 = BeiDou time</li> <li>• 6 = GLONASS time</li> <li>• 7 = NavIC time</li> </ul>
4	X1	bitfield0	-	-	bitfield:
bit 0	U1	trustedSource	-	-	Time is provided from a trusted source. Potentially usable for replay attack detection <ul style="list-style-type: none"> <li>• 0: Unknown</li> <li>• 1: Time source can be trusted for spoofing detection</li> </ul>
5	U1	reserved0	-	-	Reserved
6	U2	week	-	-	GNSS week number
8	U4	tow	-	s	GNSS time of week
12	U4	ns	-	ns	GNSS time of week, nanosecond part from 0 to 999,999,999
16	U2	tAccS	-	s	Seconds part of time accuracy
18	U1[2]	reserved1	-	-	Reserved
20	U4	tAccNs	-	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999

### 3.13.7.5 Initial clock drift assistance

<b>Message</b>	UBX-MGA-INI-CLKD				
<b>Initial clock drift assistance</b>					
<b>Type</b>	Input				
<b>Comment</b>	<p>This message allows the delivery of clock drift assistance to a receiver.</p> <p>See section AssistNow online in the integration manual for details.</p> <p>☞ Supplying clock drift assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance.</p>				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x13	0x40	see below
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description

0	U1	type	-	-	Message type (0x20 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	clkD	-	ns/s	Clock drift
8	U4	clkDAcc	-	ns/s	Clock drift accuracy

### 3.13.7.6 Initial frequency assistance

Message	UBX-MGA-INI-FREQ				
Type	Initial frequency assistance				
Comment	<p>This message allows the delivery of external frequency assistance to a receiver.</p> <p>See section AssistNow online in the integration manual for details.</p> <p>☞ Supplying external frequency assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance.</p>				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x40	12	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x21 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	reserved0	-	-	Reserved
3	X1	flags	-	-	Frequency reference
bits 3...0	U4	source	-	-	<ul style="list-style-type: none"> <li>• 0 = frequency available on EXTINT0</li> <li>• 1 = frequency available on EXTINT1</li> <li>• 2-15 = reserved</li> </ul>
bit 4	U1	fall	-	-	use falling edge of EXTINT pulse (default rising)
4	I4	freq	1e-2	Hz	Frequency
8	U4	freqAcc	-	ppb	Frequency accuracy

### 3.13.8 UBX-MGA-QZSS (0x13 0x05)

#### 3.13.8.1 QZSS ephemeris assistance

Message	UBX-MGA-QZSS-EPH				
Type	QZSS ephemeris assistance				
Comment	<p>This message allows the delivery of QZSS ephemeris assistance to a receiver.</p> <p>See section AssistNow Online in the integration manual for details.</p>				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x13	0x05	68	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x01 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	QZSS Satellite identifier (see <a href="#">Satellite Numbering</a> ), Range 1-5

3	U1	reserved0	-	-	Reserved
4	U1	fitInterval	-	-	Fit interval flag
5	U1	uraIndex	-	-	URA index
6	U1	svHealth	-	-	SV health
7	I1	tgd	$2^{-31}$	s	Group delay differential
8	U2	iodc	-	-	IODC
10	U2	toc	$2^4$	s	Clock data reference time
12	U1	reserved1	-	-	Reserved
13	I1	af2	$2^{-55}$	s/s squared	Time polynomial coefficient 2
14	I2	af1	$2^{-43}$	s/s	Time polynomial coefficient 1
16	I4	af0	$2^{-31}$	s	Time polynomial coefficient 0
20	I2	crs	$2^{-5}$	m	Crs
22	I2	deltaN	$2^{-43}$	semi-circles/s	Mean motion difference from computed value
24	I4	m0	$2^{-31}$	semi-circles	Mean anomaly at reference time
28	I2	cuc	$2^{-29}$	radians	Amp of cosine harmonic corr term to arg of lat
30	I2	cus	$2^{-29}$	radians	Amp of sine harmonic corr term to arg of lat
32	U4	e	$2^{-33}$	-	eccentricity
36	U4	sqrtA	$2^{-19}$	$m^{0.5}$	Square root of the semi-major axis A
40	U2	toe	$2^4$	s	Reference time of ephemeris
42	I2	cic	$2^{-29}$	radians	Amp of cos harmonic corr term to angle of inclination
44	I4	omega0	$2^{-31}$	semi-circles	Long of asc node of orbit plane at weekly epoch
48	I2	cis	$2^{-29}$	radians	Amp of sine harmonic corr term to angle of inclination
50	I2	crc	$2^{-5}$	m	Amp of cosine harmonic corr term to orbit radius
52	I4	i0	$2^{-31}$	semi-circles	Inclination angle at reference time
56	I4	omega	$2^{-31}$	semi-circles	Argument of perigee
60	I4	omegaDot	$2^{-43}$	semi-circles/s	Rate of right ascension
64	I2	idot	$2^{-43}$	semi-circles/s	Rate of inclination angle
66	U1[2]	reserved2	-	-	Reserved

### 3.13.8.2 QZSS almanac assistance

Message	UBX-MGA-QZSS-ALM QZSS almanac assistance					
Type	Input					
Comment	This message allows the delivery of QZSS almanac assistance to a receiver. See section AssistNow Online in the integration manual for details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload <i>see below</i>	Checksum
	0xb5	0x62	0x13	0x05	36	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	QZSS Satellite identifier (see <a href="#">Satellite Numbering</a> ), Range 1-5
3	U1	svHealth	-	-	Almanac SV health information
4	U2	e	2^-21	-	Almanac eccentricity
6	U1	almWNa	-	week	Reference week number of almanac (the 8-bit WNa field)
7	U1	toa	2^12	s	Reference time of almanac
8	I2	deltaI	2^-19	semi-circles	Delta inclination angle at reference time
10	I2	omegaDot	2^-38	semi-circles/s	Almanac rate of right ascension
12	U4	sqrtA	2^-11	m^0.5	Almanac square root of the semi-major axis A
16	I4	omega0	2^-23	semi-circles	Almanac long of asc node of orbit plane at weekly
20	I4	omega	2^-23	semi-circles	Almanac argument of perigee
24	I4	m0	2^-23	semi-circles	Almanac mean anomaly at reference time
28	I2	af0	2^-20	s	Almanac time polynomial coefficient 0 (8 MSBs)
30	I2	af1	2^-38	s/s	Almanac time polynomial coefficient 1
32	U1[4]	reserved0	-	-	Reserved

### 3.13.8.3 QZSS health assistance

**Message** UBX-MGA-QZSS-HEALTH  
**QZSS health assistance**

Type	Input				Payload	Checksum
Comment	This message allows the delivery of QZSS health assistance to a receiver. See section AssistNow Online in the integration manual for details.					
<b>Message structure</b>						
Header	Class	ID	Length (Bytes)		Payload	
0xb5 0x62	0x13	0x05	12		see below	CK_A CK_B
<b>Payload description:</b>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	type	-	-	Message type (0x04 for this type)	
1	U1	version	-	-	Message version (0x00 for this version)	
2	U1[2]	reserved0	-	-	Reserved	
4	U1[5]	healthCode	-	-	Each byte represents a QZSS SV (1-5). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5, data ID = 3, SV ID = 51	
9	U1[3]	reserved1	-	-	Reserved	

## 3.14 UBX-MON (0x0a)

The messages in the UBX-MON class are used to report the receiver status, such as hardware status or I/O subsystem statistics.

### 3.14.1 UBX-MON-COMMS (0x0a 0x36)

#### 3.14.1.1 Communication port information

Message	UBX-MON-COMMS					
	Communication port information					
Type	Periodic/polled					
Comment	Consolidated communications information for all ports. The size of the message is determined by the number of ports that are in use on the receiver. A port is only included if communication, either send or receive, has been initiated on that port.					
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1	nPorts	-	-	Number of ports included	
2	X1	txErrors	-	-	TX error bitmask	
bit 0	U <sub>1</sub>	mem	-	-	Memory Allocation error	
bit 1	U <sub>1</sub>	alloc	-	-	Allocation error (TX buffer full)	
bits 4...2	U <sub>3</sub>	outputPort	-	-	Output port: Reports the port from which this message was output from.	
					<ul style="list-style-type: none"> <li>• 0 = N/A</li> <li>• 1 = I2C</li> <li>• 2 = UART1</li> <li>• 3 = UART2</li> <li>• 4 = USB</li> <li>• 5 = SPI</li> </ul>	
3	U1	reserved0	-	-	Reserved	
4	U1[4]	protIds	-		The identifiers of the protocols reported in the msgs array. 0: UBX, 1: NMEA, 2: RTCM2, 5: RTCM3, 6: SPARTN, 0xFF: No protocol reported.	
<i>Start of repeated group (nPorts times)</i>						
8 + n·40	U2	portId	-	-	Unique identifier for the port. See section Communications ports in the integration manual for details.	
10 + n·40	U2	txPending	-	bytes	Number of bytes pending in transmitter buffer	
12 + n·40	U4	txBytes	-	bytes	Number of bytes ever sent	
16 + n·40	U1	txUsage	-	%	Maximum usage transmitter buffer during the last sysmon period	
17 + n·40	U1	txPeakUsage	-	%	Maximum usage transmitter buffer	
18 + n·40	U2	rxPending	-	bytes	Number of bytes in receiver buffer	
20 + n·40	U4	rxBytes	-	bytes	Number of bytes ever received	

24 + n·40	U1	rxUsage	-	%	Maximum usage receiver buffer during the last sysmon period
25 + n·40	U1	rxPeakUsage	-	%	Maximum usage receiver buffer
26 + n·40	U2	overrunErrs	-	-	Number of 100 ms timeslots with overrun errors
28 + n·40	U2[4]	msgs	-	msg	Number of successfully parsed messages for each protocol. The reported protocols are identified through the protIds field.
36 + n·40	U1[8]	reserved1	-	-	Reserved
44 + n·40	U4	skipped	-	bytes	Number of skipped bytes

*End of repeated group (nPorts times)*

### 3.14.2 UBX-MON-GNSS (0x0a 0x28)

#### 3.14.2.1 Information message major GNSS selection

Message	UBX-MON-GNSS					
Type	Information message major GNSS selection					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
<i>Header</i> 0xb5 0x62 <i>Class</i> 0x0a <i>ID</i> 0x28 <i>Length (Bytes)</i> 8						
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x00 for this version)	
1	X1	supported	-	-	A bit mask showing the major GNSS that can be supported by this receiver	
	bit 0	U <sub>1</sub> .1	GPSSup	-	GPS is supported	
	bit 1	U <sub>1</sub> .1	GlonassSup	-	GLONASS is supported	
	bit 2	U <sub>1</sub> .1	BeidouSup	-	BeiDou is supported	
	bit 3	U <sub>1</sub> .1	GalileoSup	-	Galileo is supported	
2	X1	defaultGnss	-	-	A bit mask showing the default major GNSS selection. If the default major GNSS selection is currently configured in the OTP memory for this receiver, it takes precedence over the default major GNSS selection configured in the executing firmware of this receiver.	
	bit 0	U <sub>1</sub> .1	GPSDef	-	GPS is default-enabled	
	bit 1	U <sub>1</sub> .1	GlonassDef	-	GLONASS is default-enabled	
	bit 2	U <sub>1</sub> .1	BeidouDef	-	BeiDou is default-enabled	
	bit 3	U <sub>1</sub> .1	GalileoDef	-	Galileo is default-enabled	
3	X1	enabled	-	-	A bit mask showing the current major GNSS selection enabled for this receiver	
	bit 0	U <sub>1</sub> .1	GPSEna	-	GPS is enabled	
	bit 1	U <sub>1</sub> .1	GlonassEna	-	GLONASS is enabled	

bit 2	U:1	BeiDouEna	-	-	BeiDou is enabled
bit 3	U:1	GalileoEna	-	-	Galileo is enabled
4	U1	simultaneous	-	-	Maximum number of concurrent major GNSS that can be supported by this receiver
5	U1[3]	reserved0	-	-	Reserved

### 3.14.3 UBX-MON-HW (0x0a 0x09)

#### 3.14.3.1 Hardware status

Message	UBX-MON-HW				
Type	Hardware status				
Comment	<b>This message is deprecated in this protocol version. Use UBX-MON-HW3 and UBX-MON-RF instead.</b> Status of different aspects of the hardware, such as antenna, PIO/peripheral pins, noise level, automatic gain control (AGC)				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x0a	0x09	60	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X4	pinSel	-	-	Mask of pins set as peripheral/PIO
4	X4	pinBank	-	-	Mask of pins set as bank A/B
8	X4	pinDir	-	-	Mask of pins set as input/output
12	X4	pinVal	-	-	Mask of pins value low/high
16	U2	noisePerMS	-	-	Noise level as measured by the GPS core
18	U2	agcCnt	-	-	AGC Monitor, as percentage of maximum gain, range 0 to 8191 (100%)
20	U1	aStatus	-	-	Status of the antenna supervisor state machine (0=INIT, 1=DONTKNOW, 2=OK, 3=SHORT, 4=OPEN)
21	U1	aPower	-	-	Current power status of antenna (0=OFF, 1=ON, 2=DONTKNOW)
22	X1	flags	-	-	Flags
bit 0	U:1	rtcCalib	-	-	RTC is calibrated
bit 1	U:1	safeBoot	-	-	Safeboot mode (0 = inactive, 1 = active)
bits 3...2	U:2	jammingState	-	-	Output from jamming/interference monitor (0 = unknown or feature disabled or flag unavailable, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix). This flag is deprecated in protocol versions that support UBX-SEC-SIG (version 0x02) and always reported as 0; instead jammingState in UBX-SEC-SIG should be monitored.
bit 4	U:1	xtalAbsent	-	-	RTC xtal has been determined to be absent (not supported for protocol versions less than 18.00)
23	U1	reserved0	-	-	Reserved
24	X4	usedMask	-	-	Mask of pins that are used by the virtual pin manager
28	U1[17]	VP	-	-	Array of pin mappings for each of the 17 physical pins

45	U1	cwSuppression	-	-	CW interference suppression level, scaled (0 = no CW jamming, 255 = strong CW jamming)
46	U1[2]	reserved1	-	-	Reserved
48	X4	pinIrq	-	-	Mask of pins value using the PIO Irq
52	X4	pullH	-	-	Mask of pins value using the PIO pull high resistor
56	X4	pullL	-	-	Mask of pins value using the PIO pull low resistor

### 3.14.4 UBX-MON-HW2 (0x0a 0x0b)

#### 3.14.4.1 Extended hardware status

Message	UBX-MON-HW2				
Type	Extended hardware status				
Comment	<p><b>This message is deprecated in this protocol version. Use UBX-MON-HW3 and UBX-MON-RF instead.</b></p> <p>Status of different aspects of the hardware such as Imbalance, Low-Level Configuration and POST Results.</p> <p>The first four parameters of this message represent the complex signal from the RF front end. The following rules of thumb apply:</p> <ul style="list-style-type: none"> <li>• The smaller the absolute value of the variable <code>ofsI</code> and <code>ofsQ</code>, the better.</li> <li>• Ideally, the magnitude of the I-part (<code>magI</code>) and the Q-part (<code>magQ</code>) of the complex signal should be the same.</li> </ul>				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x0a	0x0b	28	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	I1	ofsI	-	-	Imbalance of I-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
1	U1	magI	-	-	Magnitude of I-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)
2	I1	ofsQ	-	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
3	U1	magQ	-	-	Magnitude of Q-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)
4	U1	cfgSource	-	-	Source of low-level configuration (114 = ROM, 111 = OTP, 112 = config pins, 102 = flash image)
5	U1[3]	reserved0	-	-	Reserved
8	U4	lowLevCfg	-	-	Low-level configuration (obsolete for protocol versions greater than 15.00)
12	U1[8]	reserved1	-	-	Reserved
20	U4	postStatus	-	-	POST status word
24	U1[4]	reserved2	-	-	Reserved

### 3.14.5 UBX-MON-HW3 (0x0a 0x37)

### 3.14.5.1 I/O pin status

Message	UBX-MON-HW3				
Type	Periodic/polled				
Comment	This message contains information specific to each HW I/O pin, for example whether the pin is set as Input or Output. For the antenna supervisor status and other RF status information, see the <a href="#">UBX-MON-RF</a> message.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
<i>Header</i> 0xb5 0x62 0xa 0x37 22 + nPins·6					
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	nPins	-	-	The number of I/O pins included
2	X1	flags	-	-	Flags
bit 0	U <sub>1</sub>	rtcCalib	-	-	RTC is calibrated
bit 1	U <sub>1</sub>	safeBoot	-	-	Safeboot mode (0 = inactive, 1 = active)
bit 2	U <sub>1</sub>	xtalAbsent	-	-	RTC xtal has been determined to be absent
3	CH[10]	hwVersion	-	-	Zero-terminated hardware version string (same as that returned in the <a href="#">UBX-MON-VER</a> message)
13	U1[9]	reserved0	-	-	Reserved
<i>Start of repeated group (nPins times)</i>					
22 + n·6	U1	reserved1	-	-	Reserved
23 + n·6	U1	pinId	-	-	Identifier for the pin, including both external and internal pins
24 + n·6	X2	pinMask	-	-	Pin mask
bit 0	U <sub>1</sub>	periphPIO	-	-	Pin is set to peripheral or PIO? 0=Peripheral 1=PIO
bits 3...1	U <sub>3</sub>	pinBank	-	-	Bank the pin belongs to, where 0=A 1=B 2=C 3=D 4=E 5=F 6=G 7=H
bit 4	U <sub>1</sub>	direction	-	-	Pin direction? 0=Input 1=Output
bit 5	U <sub>1</sub>	value	-	-	Pin value? 0=Low 1=High
bit 6	U <sub>1</sub>	vpManager	-	-	Used by virtual pin manager? 0=No 1=Yes
bit 7	U <sub>1</sub>	pioIrq	-	-	Interrupt enabled? 0=No 1=Yes
bit 8	U <sub>1</sub>	pioPullHigh	-	-	Using pull high resistor? 0=No 1=Yes
bit 9	U <sub>1</sub>	pioPullLow	-	-	Using pull low resistor 0=No 1=Yes
26 + n·6	U1	VP	-	-	Virtual pin mapping
27 + n·6	U1	reserved2	-	-	Reserved
<i>End of repeated group (nPins times)</i>					

### 3.14.6 UBX-MON-IO (0x0a 0x02)

### 3.14.6.1 I/O system status

<b>Message</b>	UBX-MON-IO				
<b>I/O system status</b>					
<b>Type</b>	Periodic/polled				
<b>Comment</b>	<b>This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.</b>				
The size of the message is determined by the number of ports 'N' the receiver supports, i.e. on u-blox 5 the number of ports is 6.					
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x0a	0x02	[0..n]·20	see below
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
<i>Start of repeated group (N times)</i>					
0 + n·20	U4	rxBytes	-	bytes	Number of bytes ever received
4 + n·20	U4	txBytes	-	bytes	Number of bytes ever sent
8 + n·20	U2	parityErrs	-	-	Number of 100 ms timeslots with parity errors
10 + n·20	U2	framingErrs	-	-	Number of 100 ms timeslots with framing errors
12 + n·20	U2	overrunErrs	-	-	Number of 100 ms timeslots with overrun errors
14 + n·20	U2	breakCond	-	-	Number of 100 ms timeslots with break conditions
16 + n·20	U1[4]	reserved0	-	-	Reserved
<i>End of repeated group (N times)</i>					

### 3.14.7 UBX-MON-MSGPP (0x0a 0x06)

#### 3.14.7.1 Message parse and process status

<b>Message</b>	UBX-MON-MSGPP				
<b>Message parse and process status</b>					
<b>Type</b>	Periodic/polled				
<b>Comment</b>	<b>This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.</b>				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x0a	0x06	120	see below
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	U2[8]	msg1	-	msgs	Number of successfully parsed messages for each protocol on port0
16	U2[8]	msg2	-	msgs	Number of successfully parsed messages for each protocol on port1
32	U2[8]	msg3	-	msgs	Number of successfully parsed messages for each protocol on port2
48	U2[8]	msg4	-	msgs	Number of successfully parsed messages for each protocol on port3
64	U2[8]	msg5	-	msgs	Number of successfully parsed messages for each protocol on port4
80	U2[8]	msg6	-	msgs	Number of successfully parsed messages for each protocol on port5

96	U4[6]	skipped	-	bytes	Number skipped bytes for each port
----	-------	---------	---	-------	------------------------------------

### 3.14.8 UBX-MON-PATCH (0x0a 0x27)

#### 3.14.8.1 Installed patches

Message	UBX-MON-PATCH				
Type	Installed patches				
Comment	This message reports information about patches installed and currently enabled on the receiver. It does not report on patches installed and then disabled. An enabled patch is considered active when the receiver executes from the code space where the patch resides on. For example, a ROM patch is reported active only when the system runs from ROM.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x0a	0x27	4 + nEntries·16	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U2	version	-	-	Message version (0x0001 for this version)
2	U2	nEntries	-	-	Total number of reported patches
<i>Start of repeated group (nEntries times)</i>					
4 + n·16	X4	patchInfo	-	-	Status information about the reported patch
bit 0	U:1	activated	-	-	1: the patch is active, 0: otherwise
bits 2...1	U:2	location	-	-	Indicates where the patch is stored. 0: OTP, 1: ROM, 2: BBR, 3: file system
8 + n·16	U4	comparator Number	-	-	The number of the comparator
12 + n·16	U4	patchAddress	-	-	The address that is targeted by the patch
16 + n·16	U4	patchData	-	-	The data that is inserted at the patchAddress
<i>End of repeated group (nEntries times)</i>					

### 3.14.9 UBX-MON-RF (0x0a 0x38)

#### 3.14.9.1 RF information

Message	UBX-MON-RF				
Type	RF information				
Comment	Information for each RF block. There are as many RF blocks reported as bands supported by this receiver.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x0a	0x38	4 + nBlocks·24	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	nBlocks	-	-	The number of RF blocks included
2	U1[2]	reserved0	-	-	Reserved
<i>Start of repeated group (nBlocks times)</i>					
4 + n·24	U1	blockId	-	-	RF block ID (0 = L1 band, 1 = L2 or L5 band depending on product configuration)

5 + n·24	X1	flags	-	-	Flags
bits 1...0	U <sub>2</sub>	jammingState	-	-	Output from jamming/interference monitor (0 = unknown or feature disabled or flag unavailable, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix). This flag is deprecated in protocol versions that support UBX-SEC-SIG (version 0x02) and always reported as 0; instead jammingState in UBX-SEC-SIG should be monitored.
6 + n·24	U1	antStatus	-	-	Status of the antenna supervisor state machine (0x00=INIT, 0x01=DONTKNOW, 0x02=OK, 0x03=SHORT, 0x04=OPEN)
7 + n·24	U1	antPower	-	-	Current power status of antenna (0x00=OFF, 0x01=ON, 0x02=DONTKNOW)
8 + n·24	U4	postStatus	-	-	POST status word
12 + n·24	U1[4]	reserved1	-	-	Reserved
16 + n·24	U2	noisePerMS	-	-	Noise level as measured by the GPS core
18 + n·24	U2	agcCnt	-	-	AGC Monitor, as percentage of maximum gain, range 0 to 8191 (100%)
20 + n·24	U1	cwSuppression	-	-	CW interference suppression level, scaled (0=no CW jamming, 255 = strong CW jamming)
21 + n·24	I1	ofsI	-	-	Imbalance of I-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
22 + n·24	U1	magI	-	-	Magnitude of I-part of complex signal, scaled (0 = no signal, 255 = max.magnitude)
23 + n·24	I1	ofsQ	-	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
24 + n·24	U1	magQ	-	-	Magnitude of Q-part of complex signal, scaled (0 = no signal, 255 = max.magnitude)
25 + n·24	U1[3]	reserved2	-	-	Reserved
<i>End of repeated group (nBlocks times)</i>					

### 3.14.10 UBX-MON-RXBUF (0x0a 0x07)

#### 3.14.10.1 Receiver buffer status

Message	UBX-MON-RXBUF																
Type	Receiver buffer status																
Type	Periodic/pollled																
Comment	<b>This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.</b>																
<b>Message structure</b> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>Header</th> <th>Class</th> <th>ID</th> <th>Length (Bytes)</th> <th>Payload</th> <th>Checksum</th> </tr> <tr> <td>0xb5 0x62</td> <td>0x0a</td> <td>0x07</td> <td>24</td> <td>see below</td> <td>CK_A CK_B</td> </tr> </table>						Header	Class	ID	Length (Bytes)	Payload	Checksum	0xb5 0x62	0x0a	0x07	24	see below	CK_A CK_B
Header	Class	ID	Length (Bytes)	Payload	Checksum												
0xb5 0x62	0x0a	0x07	24	see below	CK_A CK_B												
<i>Payload description:</i>																	
Byte offset	Type	Name	Scale	Unit	Description												
0	U2[6]	pending	-	bytes	Number of bytes pending in receiver buffer for each target												
12	U1[6]	usage	-	%	Maximum usage receiver buffer during the last sysmon period for each target												

18	U1[6]	peakUsage	-	%	Maximum usage receiver buffer for each target
----	-------	-----------	---	---	---

### 3.14.11 UBX-MON-RXR (0x0a 0x21)

#### 3.14.11.1 Receiver status information

Message	UBX-MON-RXR				
Type	Receiver status information				
Comment	The receiver ready message is sent when the receiver changes from or to backup mode.				
Message structure	Header	Class	ID	Length (Bytes)	Payload Checksum
	0xb5 0x62	0x0a	0x21	1	see below CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	flags	-	-	Receiver status flags
bit 0	U:1	awake	-	-	not in backup mode

### 3.14.12 UBX-MON-SPAN (0x0a 0x31)

#### 3.14.12.1 Signal characteristics

Message	UBX-MON-SPAN				
Type	Signal characteristics				
Comment	This message is to be used as a basic spectrum analyzer, where it displays one spectrum for each of the receiver's existing RF paths. The spectrum is conveyed with the following parameters: The frequency span in Hz, the frequency bin resolution in Hz, the center frequency in Hz, and 256 bins with amplitude data. Additionally, in order to give further insight on the signal captured by the receiver, the current gain of the internal programmable gain amplifier (PGA) is provided.  <b>This message gives information for comparative analysis rather than absolute and precise spectrum overview. Users should not expect highly accurate spectrum amplitude.</b>  Note that the PGA gain is not included in the spectrum data but is available as a separate field. Neither the spectrum, nor the PGA gain considers the internal fixed LNA gain or an external third-party LNA.  The center frequency at each bin, assuming a zero-based bin count, can be computed as $f(i) = \text{center} + \text{span} * (i - 127) / 256$				
Message structure	Header	Class	ID	Length (Bytes)	Payload Checksum
	0xb5 0x62	0x0a	0x31	4 + numRfBlocks*272	see below CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	numRfBlocks	-	-	Number of RF blocks included
2	U1[2]	reserved0	-	-	Reserved
<i>Start of repeated group (numRfBlocks times)</i>					
4 + n·272	U1[256]	spectrum	2^-2	dB	Spectrum data (number of points = span/res) [Uuu.fff dB]
260 + n·272	U4	span	-	Hz	Spectrum span
264 + n·272	U4	res	-	Hz	Resolution of the spectrum
268 + n·272	U4	center	-	Hz	Center of spectrum span
272 + n·272	U1	pga	-	dB	Programmable gain amplifier

273 + n·272	U1[3]	reserved1	-	-	Reserved
-------------	-------	-----------	---	---	----------

*End of repeated group (numRfBlocks times)*

### 3.14.13 UBX-MON-SYS (0x0a 0x39)

#### 3.14.13.1 Current system performance information

Message	UBX-MON-SYS				Payload	Checksum				
Type	Current system performance information				see below	CK_A CK_B				
<i>Message structure:</i>										
<i>Header</i> <i>Class</i> <i>ID</i> <i>Length (Bytes)</i>										
0xb5 0x62    0x0a    0x39    24										
<i>Payload description:</i>										
Byte offset	Type	Name	Scale	Unit	Description					
0	U1	msgVer	-	-	Message Version (0x01)					
1	U1	bootType	-	-	Boot type of master chip 0-Unknown 1-Cold Start 2-Watchdog 3-Hardware reset 4-Hardware backup 5-Software backup 6-Software reset 7-VIO fail 8-VDD_X fail 9-VDD_RF fail 10-V_CORE_HIGH fail 11-System reset					
2	U1	cpuLoad	-	-	Highest actual load of realtime tasks of all CPUs in %					
3	U1	cpuLoadMax	-	-	Maximal CPU load value in % seen since last restart					
4	U1	memUsage	-	-	Highest actual dynamic memory usage of all CPUs in %					
5	U1	memUsageMax	-	-	Maximal dynamic memory usage in % seen since last restart					
6	U1	ioUsage	-	-	Highest actual IO bandwidth usage of all rx/tx interfaces in %					
7	U1	ioUsageMax	-	-	Maximal bandwidth usage of all rx/tx interfaces in % seen since last restart					
8	U4	runTime	-	sec	Time since last restart					
12	U2	noticeCount	-	-	Number of notices occurred since last restart					
14	U2	warnCount	-	-	Number of warnings occurred since last restart					
16	U2	errorCount	-	-	Number of errors occurred since last restart					
18	I1	tempValue	-	-	Temperature value [C]					

19	U1[5]	reserved0	-	-	Reserved
----	-------	-----------	---	---	----------

### 3.14.14 UBX-MON-TXBUF (0x0a 0x08)

#### 3.14.14.1 Transmitter buffer status

Message	UBX-MON-TXBUF				Payload	Checksum
Type	Transmitter buffer status					
Type	Periodic/polled					
Comment	<b>This message is deprecated in this protocol version. Use <a href="#">UBX-MON-COMMS</a> instead.</b>					
<i>Message structure</i>						
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x08	28	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U2[6]	pending	-	bytes	Number of bytes pending in transmitter buffer for each target	
12	U1[6]	usage	-	%	Maximum usage transmitter buffer during the last sysmon period for each target	
18	U1[6]	peakUsage	-	%	Maximum usage transmitter buffer for each target	
24	U1	tUsage	-	%	Maximum usage of transmitter buffer during the last sysmon period for all targets	
25	U1	tPeakusage	-	%	Maximum usage of transmitter buffer for all targets	
26	X1	errors	-	-	Error bitmask	
bits 5...0	U <sub>6</sub>	limit	-	-	Buffer limit of corresponding target reached	
	bit 6 U <sub>1</sub>	mem	-	-	Memory Allocation error	
	bit 7 U <sub>1</sub>	alloc	-	-	Allocation error (TX buffer full)	
27	U1	reserved0	-	-	Reserved	

### 3.14.15 UBX-MON-VER (0x0a 0x04)

#### 3.14.15.1 Poll receiver and software version

Message	UBX-MON-VER				Payload	Checksum
Type	Poll receiver and software version					
Type	Poll request					
Comment						
Message structure	Header Class ID Length (Bytes)				Payload	Checksum
Message structure	0xb5 0x62	0x0a	0x04	0	see below	CK_A CK_B
Payload	This message has no payload.					

#### 3.14.15.2 Receiver and software version

Message	UBX-MON-VER				Payload	Checksum
Type	Receiver and software version					
Type	Polled					
Comment						
Message structure	Header Class ID Length (Bytes)				Payload	Checksum
Message structure	0xb5 0x62	0x0a	0x04	40 + [0..n]·30	see below	CK_A CK_B

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	CH[30]	swVersion	-	-	Nul-terminated software version string.
30	CH[10]	hwVersion	-	-	Nul-terminated hardware version string

**Start of repeated group (N times)**

40 + n·30	CH[30]	extension	-	-	<p>Extended software information strings. A series of nul-terminated strings. Each extension field is 30 characters long and contains varying software information. Not all extension fields may appear. Examples of reported information: the software version string of the underlying ROM (when the receiver's firmware is running from flash), the firmware version, the supported <a href="#">protocol version</a>, the module identifier, the flash information structure (FIS) file information, the supported major GNSS, the supported augmentation systems.</p> <p>See <a href="#">Firmware and protocol versions</a> for details.</p>
-----------	--------	-----------	---	---	--

**End of repeated group (N times)**

## 3.15 UBX-NAV (0x01)

The messages in the UBX-NAV class are used to output navigation results and data, such as position, altitude and velocity in a number of formats, and status flags and accuracy estimate figures, or satellite and signal information. The messages are generated with the configured navigation rate.

### 3.15.1 UBX-NAV-CLOCK (0x01 0x22)

#### 3.15.1.1 Clock solution

<b>Message</b>	UBX-NAV-CLOCK				
<b>Clock solution</b>					
<b>Type</b>	Periodic/pollled				
<b>Comment</b>					
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	<b>Payload</b>
	0xb5 0x62	0x01	0x22	20	see below
<b>Checksum</b>					
					CK_A CK_B

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section Navigation epochs in the integration manual for details.  See section iTOW timestamps in the integration manual for details.
4	I4	clkB	-	ns	Clock bias
8	I4	clkD	-	ns/s	Clock drift
12	U4	tAcc	-	ns	Time accuracy estimate
16	U4	fAcc	-	ps/s	Frequency accuracy estimate

### 3.15.2 UBX-NAV-COV (0x01 0x36)

### 3.15.2.1 Covariance matrices

Message UBX-NAV-COV					
Covariance matrices					
Type	Periodic/polled				
Comment	This message outputs the covariance matrices for the position and velocity solutions in the topocentric coordinate system defined as the local-level North (N), East (E), Down (D) frame. As the covariance matrices are symmetric, only the upper triangular part is output.				
Message structure					
Message structure	Header 0xb5 0x62	Class 0x01	ID 0x36	Length (Bytes) 64	Payload see below
Checksum CK_A CK_B					
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x00 for this version)
5	U1	posCovValid	-	-	Position covariance matrix validity flag
6	U1	velCovValid	-	-	Velocity covariance matrix validity flag
7	U1[9]	reserved0	-	-	Reserved
16	R4	posCovNN	-	m^2	Position covariance matrix value p_NN
20	R4	posCovNE	-	m^2	Position covariance matrix value p_NE
24	R4	posCovND	-	m^2	Position covariance matrix value p_ND
28	R4	posCovEE	-	m^2	Position covariance matrix value p_EE
32	R4	posCovED	-	m^2	Position covariance matrix value p_ED
36	R4	posCovDD	-	m^2	Position covariance matrix value p_DD
40	R4	velCovNN	-	m^2/s^2	Velocity covariance matrix value v_NN
44	R4	velCovNE	-	m^2/s^2	Velocity covariance matrix value v_NE
48	R4	velCovND	-	m^2/s^2	Velocity covariance matrix value v_ND
52	R4	velCovEE	-	m^2/s^2	Velocity covariance matrix value v_EE
56	R4	velCovED	-	m^2/s^2	Velocity covariance matrix value v_ED
60	R4	velCovDD	-	m^2/s^2	Velocity covariance matrix value v_DD

### 3.15.3 UBX-NAV-DOP (0x01 0x04)

#### 3.15.3.1 Dilution of precision

Message UBX-NAV-DOP					
Dilution of precision					
Type	Periodic/polled				
Comment	<ul style="list-style-type: none"> <li>DOP values are dimensionless.</li> <li>All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, the DOP value is 1.56.</li> </ul>				
Message structure					
Message structure	Header 0xb5 0x62	Class 0x01	ID 0x04	Length (Bytes) 18	Payload see below
Checksum CK_A CK_B					
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description

0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U2	gDOP	0.01	-	Geometric DOP
6	U2	pDOP	0.01	-	Position DOP
8	U2	tDOP	0.01	-	Time DOP
10	U2	vDOP	0.01	-	Vertical DOP
12	U2	hDOP	0.01	-	Horizontal DOP
14	U2	nDOP	0.01	-	Northing DOP
16	U2	eDOP	0.01	-	Easting DOP

### 3.15.4 UBX-NAV-EOE (0x01 0x61)

#### 3.15.4.1 End of epoch

Message	UBX-NAV-EOE					
	End of epoch					
Type	Periodic					
Comment	This message is intended to be used as a marker to collect all navigation messages of an epoch. It is output after all enabled NAV class messages (except UBX-NAV-HNR) and after all enabled NMEA messages.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x61	4	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	

### 3.15.5 UBX-NAV-GEOFENCE (0x01 0x39)

#### 3.15.5.1 Geofencing status

Message	UBX-NAV-GEOFENCE					
	Geofencing status					
Type	Periodic/polled					
Comment	This message outputs the evaluated states of all configured geofences for the current epoch's position. See section Geofencing in the integration manual for feature details.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x39	8 + numFences·2	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U1	version	-	-	Message version (0x00 for this version)	
5	U1	status	-	-	Geofencing status • 0 - Geofencing not available or not reliable • 1 - Geofencing active	
6	U1	numFences	-	-	Number of geofences	

7	U1	combState	-	-	Combined (logical OR) state of all geofences <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - Inside</li> <li>• 2 - Outside</li> </ul>
---	----	-----------	---	---	---

*Start of repeated group (numFences times)*

8 + n·2	U1	state	-	-	Geofence state <ul style="list-style-type: none"> <li>• 0 - Unknown</li> <li>• 1 - Inside</li> <li>• 2 - Outside</li> </ul>
---------	----	-------	---	---	---

9 + n·2	U1	id	-	-	Geofence ID (0 = not available)
---------	----	----	---	---	---------------------------------

*End of repeated group (numFences times)*

### 3.15.6 UBX-NAV-HPOSECEF (0x01 0x13)

#### 3.15.6.1 High precision position solution in ECEF

Message	UBX-NAV-HPOSECEF					
Type	High precision position solution in ECEF					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x13	28	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1[3]	reserved0	-	-	Reserved
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
8	I4	ecefX	-	cm	ECEF X coordinate
12	I4	ecefY	-	cm	ECEF Y coordinate
16	I4	ecefZ	-	cm	ECEF Z coordinate
20	I1	ecefXHp	0.1	mm	High precision component of ECEF X coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefX + (ecefXHp * 1e-2).
21	I1	ecefYHp	0.1	mm	High precision component of ECEF Y coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefY + (ecefYHp * 1e-2).
22	I1	ecefZHp	0.1	mm	High precision component of ECEF Z coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefZ + (ecefZHp * 1e-2).
23	X1	flags	-	-	Additional flags
bit 0	U1	invalidEcef	-	-	1 = Invalid ecefX, ecefY, ecefZ, ecefXHp, ecefYHp and ecefZHp
24	U4	pAcc	0.1	mm	Position Accuracy Estimate

### 3.15.7 UBX-NAV-HPOSLLH (0x01 0x14)

### 3.15.7.1 High precision geodetic position solution

Message	UBX-NAV-HPPOSLLH High precision geodetic position solution				
Type	Periodic/polled				
Comment	<p>See important comments concerning validity of position given in section Navigation output filters in the integration manual.</p> <p>This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message <a href="#">CFG-NAVSPG-USE_USRDATA</a>.</p>				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1[2]	reserved0	-	-	<a href="#">Reserved</a>
3	X1	flags	-	-	Additional flags
	bit 0	U1	invalidLlh	-	1 = Invalid lon, lat, height, hMSL, lonHp, latHp, heightHp and hMSLHp
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
8	I4	lon	1e-7	deg	Longitude
12	I4	lat	1e-7	deg	Latitude
16	I4	height	-	mm	Height above ellipsoid.
20	I4	hMSL	-	mm	Height above mean sea level
24	I1	lonHp	1e-9	deg	High precision component of longitude. Must be in the range -99..+99. Precise longitude in deg * 1e-7 = lon + (lonHp * 1e-2).
25	I1	latHp	1e-9	deg	High precision component of latitude. Must be in the range -99..+99. Precise latitude in deg * 1e-7 = lat + (latHp * 1e-2).
26	I1	heightHp	0.1	mm	High precision component of height above ellipsoid. Must be in the range -9..+9. Precise height in mm = height + (heightHp * 0.1).
27	I1	hMSLHp	0.1	mm	High precision component of height above mean sea level. Must be in range -9..+9. Precise height in mm = hMSL + (hMSLHp * 0.1)
28	U4	hAcc	0.1	mm	Horizontal accuracy estimate
32	U4	vAcc	0.1	mm	Vertical accuracy estimate

### 3.15.8 UBX-NAV-ODO (0x01 0x09)

#### 3.15.8.1 Odometer solution

Message	UBX-NAV-ODO Odometer solution				
Type	Periodic/polled				
Comment	<p>This message outputs the traveled distance since last reset (see <a href="#">UBX-NAV-RESETODO</a>) together with an associated estimated accuracy and the total cumulated ground distance (can only be reset by a cold start of the receiver).</p>				

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x09	20	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1[3]	reserved0	-	-	Reserved	
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
8	U4	distance	-	m	Ground distance since last reset	
12	U4	totalDistance	-	m	Total cumulative ground distance	
16	U4	distanceStd	-	m	Ground distance accuracy (1-sigma)	

### 3.15.9 UBX-NAV-ORB (0x01 0x34)

#### 3.15.9.1 GNSS orbit database info

Message	UBX-NAV-ORB				
	GNSS orbit database info				
Type	Periodic/pollled				
Comment	Status of the GNSS orbit database knowledge.				
<i>Message structure:</i>					
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x01	0x34	8 + numSv·6	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x01 for this version)
5	U1	numSv	-	-	Number of SVs in the database
6	U1[2]	reserved0	-	-	Reserved
<i>Start of repeated group (numSv times)</i>					
8 + n·6	U1	gnssId	-	-	GNSS ID
9 + n·6	U1	svId	-	-	Satellite ID
10 + n·6	X1	svFlag	-	-	Information Flags
bits 1...0	U:2	health	-	-	SV health: <ul style="list-style-type: none"><li>• 0 = unknown</li><li>• 1 = healthy</li><li>• 2 = not healthy</li></ul>
bits 3...2	U:2	visibility	-	-	SV health: <ul style="list-style-type: none"><li>• 0 = unknown</li><li>• 1 = below horizon</li><li>• 2 = above horizon</li><li>• 3 = above elevation mask</li></ul>

11 + n·6	X1	eph	-	-	Ephemeris data  In products supporting L5 signals, the receiver may store multiple ephemeris data sets per satellite. ephUsability and ephSource fields show information on one of the data sets. It is not possible to choose which data set's status is shown.
bits 4...0	U <sub>5</sub>	ephUsability	-	-	How long the receiver will be able to use the stored ephemeris data from now on: <ul style="list-style-type: none"><li>• 31 = The usability period is unknown</li><li>• 30 = The usability period is more than 450 minutes</li><li>• 30 &gt; n &gt; 0 = The usability period is between (n-1)*15 and n*15 minutes</li><li>• 0 = Ephemeris can no longer be used</li></ul>
bits 7...5	U <sub>3</sub>	ephSource	-	-	<ul style="list-style-type: none"><li>• 0 = not available</li><li>• 1 = GNSS transmission</li><li>• 2 = external aiding</li><li>• 3-7 = other</li></ul>
12 + n·6	X1	alm	-	-	Almanac data
bits 4...0	U <sub>5</sub>	almUsability	-	-	How long the receiver will be able to use the stored almanac data from now on: <ul style="list-style-type: none"><li>• 31 = The usability period is unknown</li><li>• 30 = The usability period is more than 30 days</li><li>• 30 &gt; n &gt; 0 = The usability period is between n-1 and n days</li><li>• 0 = Almanac can no longer be used</li></ul>
bits 7...5	U <sub>3</sub>	almSource	-	-	<ul style="list-style-type: none"><li>• 0 = not available</li><li>• 1 = GNSS transmission</li><li>• 2 = external aiding</li><li>• 3-7 = other</li></ul>
13 + n·6	X1	otherOrb	-	-	Other orbit data available
bits 4...0	U <sub>5</sub>	anoAop Usability	-	-	How long the receiver will be able to use the orbit data from now on: <ul style="list-style-type: none"><li>• 31 = The usability period is unknown</li><li>• 30 = The usability period is more than 30 days</li><li>• 30 &gt; n &gt; 0 = The usability period is between n-1 and n days</li><li>• 0 = Data can no longer be used</li></ul>
bits 7...5	U <sub>3</sub>	type	-	-	Type of orbit data: <ul style="list-style-type: none"><li>• 0 = No orbit data available</li><li>• 1 = AssistNow Offline data</li><li>• 2 = AssistNow Autonomous data</li><li>• 3-7 = Other orbit data</li></ul>

*End of repeated group (numSv times)*

### 3.15.10 UBX-NAV-PL (0x01 0x62)

### 3.15.10.1 Protection level information

Message		UBX-NAV-PL				
		Protection level information				
Type	Periodic					
Comment	<p>This message provides protection level (PL) values per protection level state (e.g. position ECEF X/Y/Z) and w.r.t. the given target misleading information risk (TMIR) per coordinate axis.</p> <p>Target misleading information risk is expressed as X [%MI/epoch] (read: X% probability of having an MI per epoch). Misleading information (MI) occurs when the Protection Level value is smaller than the true position error.</p>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x62	52	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	msgVersion	-	-	Message version (0x01 for this version)	
1	U1	tmirCoeff	-	-	Target misleading information risk (TMIR) [%MI/epoch], coefficient integer number of base 10 scientific notation (see e.g. plPos field)	
2	I1	tmirExp	-	-	Target misleading information risk (TMIR) [%MI/epoch], exponent integer number of base 10 scientific notation (see e.g. plPos field)	
3	U1	plPosValid	-	-	Position protection level validity <ul style="list-style-type: none"> <li>0: Invalid (Protection level should not be used)</li> <li>1: Protection level is valid</li> </ul>	
4	U1	plPosFrame	-	-	Position protection level frame: <ul style="list-style-type: none"> <li>0: Invalid (not possible to calculate frame conversion)</li> <li>1: North-East-Down</li> <li>2: Longitudinal-Lateral-Vertical</li> <li>3: HorizSemiMajorAxis-HorizSemiMinorAxis-Vertical</li> </ul>	
5	U1	plVelValid	-	-	Velocity protection level validity <ul style="list-style-type: none"> <li>0: Invalid (Protection level should not be used)</li> <li>1: Protection level is valid</li> </ul>	
6	U1	plVelFrame	-	-	Velocity protection level frame: <ul style="list-style-type: none"> <li>0: Invalid (not possible to calculate frame conversion)</li> <li>1: North-East-Down</li> <li>2: Longitudinal-Lateral-Vertical</li> <li>3: HorizSemiMajorAxis-HorizSemiMinorAxis-Vertical</li> </ul>	
7	U1	plTimeValid	-	-	Time protection level validity <ul style="list-style-type: none"> <li>0: Invalid (Protection level should not be used)</li> <li>1: Protection level is valid</li> </ul>	
8	U1	plPos Invalidity Reason	-	-	Position protection level invalidity reason <ul style="list-style-type: none"> <li>0: Not available</li> <li>1-29: Solution not trustworthy</li> <li>30-100: PL not verified for this receiver configuration</li> </ul>	
9	U1	plVel Invalidity Reason	-	-	Velocity protection level invalidity reason <ul style="list-style-type: none"> <li>0: Not available</li> <li>1-29: Solution not trustworthy</li> <li>30-100: PL not verified for this receiver configuration</li> </ul>	

10	U1	plTime Invalidity Reason	-	-	Time protection level invalidity reason <ul style="list-style-type: none"> <li>• 0: Not available</li> <li>• 1- 29: Solution not trustworthy</li> <li>• 30-100: PL not verified for this receiver configuration</li> </ul>
11	U1	reserved0	-	-	Reserved
12	U4	iTow	-	ms	GPS time of week
16	U4	plPos1	-	mm	First axis of position protection level value, given in coordinate frame of plPosFrame (see plPosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
20	U4	plPos2	-	mm	Second axis of position protection level value, given in coordinate frame of plPosFrame (see plPosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
24	U4	plPos3	-	mm	Third axis of position protection level value, given in coordinate frame of plPosFrame (see plPosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
28	U4	plVel1	-	mm/s	First axis of velocity protection level value, given in coordinate frame of plVelFrame (see plVelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
32	U4	plVel2	-	mm/s	Second axis of velocity protection level value, given in coordinate frame of plVelFrame (see plVelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
36	U4	plVel3	-	mm/s	Third axis of velocity protection level value, given in coordinate frame of plVelFrame (see plVelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
40	U2	plPosHoriz Orient	1e-2	deg	Orientation of HorizSemiMajorAxis (see plPosFrame) of horizontal ellipse position protection level (clockwise degrees from true North), if plPosFrame==3; zero otherwise.
42	U2	plVelHoriz Orient	1e-2	deg	Orientation of HorizSemiMajorAxis (see plVelFrame) of horizontal ellipse velocity protection level (clockwise degrees from true North), if plVelFrame==3; zero otherwise.
44	U4	plTime	-	ns	Time protection level value, w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
48	U1[4]	reserved1	-	-	Reserved

### 3.15.11 UBX-NAV-POSECEF (0x01 0x01)

#### 3.15.11.1 Position solution in ECEF

Message	UBX-NAV-POSECEF
	Position solution in ECEF
Type	Periodic/polled
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x01	20	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	I4	ecefX	-	cm	ECEF X coordinate	
8	I4	ecefY	-	cm	ECEF Y coordinate	
12	I4	ecefZ	-	cm	ECEF Z coordinate	
16	U4	pAcc	-	cm	Position Accuracy Estimate	

### 3.15.12 UBX-NAV-POSLH (0x01 0x02)

#### 3.15.12.1 Geodetic position solution

Message	UBX-NAV-POSLH					
	Geodetic position solution					
Type	Periodic/polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.  This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message <a href="#">CFG-NAVSPG-USE_USRDATA</a> .					
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	I4	lon	1e-7	deg	Longitude	
8	I4	lat	1e-7	deg	Latitude	
12	I4	height	-	mm	Height above ellipsoid	
16	I4	hMSL	-	mm	Height above mean sea level	
20	U4	hAcc	-	mm	Horizontal accuracy estimate	
24	U4	vAcc	-	mm	Vertical accuracy estimate	

### 3.15.13 UBX-NAV-PVT (0x01 0x07)

#### 3.15.13.1 Navigation position velocity time solution

Message	UBX-NAV-PVT					
	Navigation position velocity time solution					
Type	Periodic/polled					
Comment	This message combines position, velocity and time solution, including accuracy figures. Note that during a leap second there may be more or less than 60 seconds in a minute. See description of leap seconds in the integration manual for details.					

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x01	0x07	92	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U2	year	-	y	Year (UTC)	
6	U1	month	-	month	Month, range 1..12 (UTC)	
7	U1	day	-	d	Day of month, range 1..31 (UTC)	
8	U1	hour	-	h	Hour of day, range 0..23 (UTC)	
9	U1	min	-	min	Minute of hour, range 0..59 (UTC)	
10	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)	
11	X1	valid	-	-	Validity flags	
bit 0	U:1	validDate	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)	
bit 1	U:1	validTime	-	-	1 = valid UTC time of day (see section Time validity in the integration manual for details)	
bit 2	U:1	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.	
bit 3	U:1	validMag	-	-	1 = valid magnetic declination	
12	U4	tAcc	-	ns	Time accuracy estimate (UTC)	
16	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)	
20	U1	fixType	-	-	GNSSfix Type: <ul style="list-style-type: none"><li>• 0 = no fix</li><li>• 1 = dead reckoning only</li><li>• 2 = 2D-fix</li><li>• 3 = 3D-fix</li><li>• 4 = GNSS + dead reckoning combined</li><li>• 5 = time only fix</li></ul>	
21	X1	flags	-	-	Fix status flags	
bit 0	U:1	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)	
bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied	
bits 4..2	U:3	psmState	-	-	Power save mode state (see Power management section in the integration manual for details. <ul style="list-style-type: none"><li>• 0 = PSM is not active</li><li>• 1 = Enabled (an intermediate state before Acquisition state</li><li>• 2 = Acquisition</li><li>• 3 = Tracking</li><li>• 4 = Power Optimized Tracking</li><li>• 5 = Inactive</li></ul>	
bit 5	U:1	headVehValid	-	-	1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode	
bits 7..6	U:2	carrSoln	-	-	Carrier phase range solution status:	

					<ul style="list-style-type: none"> <li>• 0 = no carrier phase range solution</li> <li>• 1 = carrier phase range solution with floating ambiguities</li> <li>• 2 = carrier phase range solution with fixed ambiguities</li> </ul> <p>(not supported for protocol versions less than 20.00)</p>
22	X1	flags2	-	-	Additional flags
	bit 5	U:1	confirmedAvai	-	<p>1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details)</p> <p>This flag is only supported in <a href="#">Protocol Versions 19.00, 19.10, 20.10, 20.20, 20.30, 22.00, 23.00, 23.01, 27 and 28.</a></p>
	bit 6	U:1	confirmedDate	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
	bit 7	U:1	confirmedTime	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
23	U1	numSV	-	-	Number of satellites used in Nav Solution
24	I4	lon	1e-7	deg	Longitude
28	I4	lat	1e-7	deg	Latitude
32	I4	height	-	mm	Height above ellipsoid
36	I4	hMSL	-	mm	Height above mean sea level
40	U4	hAcc	-	mm	Horizontal accuracy estimate
44	U4	vAcc	-	mm	Vertical accuracy estimate
48	I4	velN	-	mm/s	NED north velocity
52	I4	velE	-	mm/s	NED east velocity
56	I4	velD	-	mm/s	NED down velocity
60	I4	gSpeed	-	mm/s	Ground Speed (2-D)
64	I4	headMot	1e-5	deg	Heading of motion (2-D)
68	U4	sAcc	-	mm/s	Speed accuracy estimate
72	U4	headAcc	1e-5	deg	Heading accuracy estimate (both motion and vehicle)
76	U2	pDOP	0.01	-	Position DOP
78	X2	flags3	-	-	Additional flags
	bit 0	U:1	invalidLlh	-	1 = Invalid lon, lat, height and hMSL (applicable to heading products only)
	bits 4...1	U:4	lastCorrection	-	<p>Age of the most recently received differential correction:</p> <ul style="list-style-type: none"> <li>• 0 = Not available</li> <li>• 1 = Age between 0 and 1 second</li> <li>• 2 = Age between 1 (inclusive) and 2 seconds</li> <li>• 3 = Age between 2 (inclusive) and 5 seconds</li> <li>• 4 = Age between 5 (inclusive) and 10 seconds</li> <li>• 5 = Age between 10 (inclusive) and 15 seconds</li> <li>• 6 = Age between 15 (inclusive) and 20 seconds</li> <li>• 7 = Age between 20 (inclusive) and 30 seconds</li> <li>• 8 = Age between 30 (inclusive) and 45 seconds</li> </ul>

					<ul style="list-style-type: none"> <li>• 9 = Age between 45 (inclusive) and 60 seconds</li> <li>• 10 = Age between 60 (inclusive) and 90 seconds</li> <li>• 11 = Age between 90 (inclusive) and 120 seconds</li> <li>• &gt;=12 = Age greater or equal than 120 seconds</li> </ul>
bit 13	U.1	authTime	-	-	<p>Flag that indicates if the output time has been validated against an external trusted time source</p> <ul style="list-style-type: none"> <li>• 0 = Time is not authenticated</li> <li>• 1 = Time is authenticated</li> </ul>
bit 14	U.1	nmaFixStatus	-	-	<p>Flag assigned to a fix that has been computed mixing satellites with data authenticated through Navigation Message Authentication (NMA) methods and satellites using unauthenticated data. The fix is flagged as Verified when internal cross-checks validates the unauthenticated signals against the authenticated ones. Note that Not Verified status does not imply directly spoofing attacks, to identify spoofing alerts refer to <a href="#">UBX-SEC-SIG</a>.</p> <ul style="list-style-type: none"> <li>• 0 = Not Verified: The mixed solution does not agree with the NMA authenticated data or the comparison could not be performed, e.g., not enough authenticated SVs to extrapolate the result or cryptographic data not decoded yet</li> <li>• 1 = Verified: The mixed solution agrees with the NMA authenticated data</li> </ul> <p>Currently, the only existing NMA method is Galileo Open Service Navigation Message Authentication (OSNMA) protocol.</p>
80	U1[4]	reserved0	-	-	Reserved
84	I4	headVeh	1e-5	deg	Heading of vehicle (2-D), this is only valid when headVehValid is set, otherwise the output is set to the heading of motion
88	I2	magDec	1e-2	deg	Magnetic declination. Only supported in ADR 4.10 and later.
90	U2	magAcc	1e-2	deg	Magnetic declination accuracy. Only supported in ADR 4.10 and later.

### 3.15.14 UBX-NAV-RELPOSNED (0x01 0x3c)

#### 3.15.14.1 Relative positioning information in NED frame

<b>Message</b>	UBX-NAV-RELPOSNED						
Relative positioning information in NED frame							
<b>Type</b>	Periodic/pollled						
<b>Comment</b>	<p>This message contains the relative position vector from the reference station to the rover, including accuracy figures, in the local topological system defined at the reference station.</p> <p>The NED frame is defined as the local topological system at the reference station. The relative position vector components in this message, along with their associated accuracies, are given in that local topological system.</p>						
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	<b>Payload</b>	<b>Checksum</b>	
	0xb5	0x62	0x01	0x3c	64	see below	CK_A CK_B

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	U1	reserved0	-	-	Reserved
2	U2	refStationId	-	-	Reference station ID. Must be in the range 0..4095.
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
8	I4	relPosN	-	cm	North component of relative position vector
12	I4	relPosE	-	cm	East component of relative position vector
16	I4	relPosD	-	cm	Down component of relative position vector
20	I4	relPosLength	-	cm	Length of the relative position vector
24	I4	relPosHeading	1e-5	deg	Heading of the relative position vector
28	U1[4]	reserved1	-	-	Reserved
32	I1	relPosHPN	0.1	mm	High-precision North component of relative position vector. Must be in the range -99 to +99. The full North component of the relative position vector, in units of cm, is given by $\text{relPosN} + (\text{relPosHPN} * 1\text{e}-2)$
33	I1	relPosHPE	0.1	mm	High-precision East component of relative position vector. Must be in the range -99 to +99. The full East component of the relative position vector, in units of cm, is given by $\text{relPosE} + (\text{relPosHPE} * 1\text{e}-2)$
34	I1	relPosHPD	0.1	mm	High-precision Down component of relative position vector. Must be in the range -99 to +99. The full Down component of the relative position vector, in units of cm, is given by $\text{relPosD} + (\text{relPosHPD} * 1\text{e}-2)$
35	I1	relPosHP Length	0.1	mm	High-precision component of the length of the relative position vector. Must be in the range -99 to +99. The full length of the relative position vector, in units of cm, is given by $\text{relPosLength} + (\text{relPosHPLength} * 1\text{e}-2)$
36	U4	accN	0.1	mm	Accuracy of relative position North component
40	U4	accE	0.1	mm	Accuracy of relative position East component
44	U4	accD	0.1	mm	Accuracy of relative position Down component
48	U4	accLength	0.1	mm	Accuracy of length of the relative position vector
52	U4	accHeading	1e-5	deg	Accuracy of heading of the relative position vector
56	U1[4]	reserved2	-	-	Reserved
60	X4	flags	-	-	Flags
bit 0	U <sub>1</sub>	gnssFixOK	-	-	A valid fix (i.e within DOP & accuracy masks)
bit 1	U <sub>1</sub>	diffSoln	-	-	1 if differential corrections were applied

bit 2	U <sub>1</sub>	relPosValid	-	-	1 if relative position components and accuracies are valid and, in moving base mode only, if baseline is valid
bits 4...3	U <sub>2</sub>	carrSoln	-	-	Carrier phase range solution status: <ul style="list-style-type: none"> <li>• 0 = no carrier phase range solution</li> <li>• 1 = carrier phase range solution with floating ambiguities</li> <li>• 2 = carrier phase range solution with fixed ambiguities</li> </ul>
bit 5	U <sub>1</sub>	isMoving	-	-	1 if the receiver is operating in moving base mode
bit 6	U <sub>1</sub>	refPosMiss	-	-	1 if extrapolated reference position was used to compute moving base solution this epoch. (Flag set for protocol versions 27.10, and 27.11, and 31.11)
bit 7	U <sub>1</sub>	refObsMiss	-	-	1 if extrapolated reference observations were used to compute moving base solution this epoch. (Flag set for protocol versions 27.10, and 27.11, and 31.11)
bit 8	U <sub>1</sub>	relPosHeading	-	-	1 if relPosHeading is valid  Valid
bit 9	U <sub>1</sub>	relPos	-	-	1 if the components of the relative position vector (including the high-precision parts) are normalized  Normalized

### 3.15.15 UBX-NAV-RESETODO (0x01 0x10)

#### 3.15.15.1 Reset odometer

<b>Message</b>	UBX-NAV-RESETODO						
<b>Reset odometer</b>							
<b>Type</b>	Command						
<b>Comment</b>	This message resets the traveled distance computed by the odometer (see <a href="#">UBX-NAV-ODO</a> ). <a href="#">UBX-ACK-ACK</a> or <a href="#">UBX-ACK-NAK</a> are returned to indicate success or failure.						
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	Payload	Checksum	
	0xb5	0x62	0x01	0x10	0	see below	CK_A CK_B
<b>Payload</b>	This message has no payload.						

### 3.15.16 UBX-NAV-SAT (0x01 0x35)

#### 3.15.16.1 Satellite information

<b>Message</b>	UBX-NAV-SAT						
<b>Satellite information</b>							
<b>Type</b>	Periodic/polled						
<b>Comment</b>	This message displays information about SVs that are either known to be visible or currently tracked by the receiver. All signal related information corresponds to the subset of signals specified in <a href="#">Signal Identifiers</a> .						
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	Payload	Checksum	
	0xb5	0x62	0x01	0x35	8 + numSvs·12	see below	CK_A CK_B
<b>Payload description:</b>							
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>		
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.		

4	U1	version	-	-	Message version (0x01 for this version)
5	U1	numSvs	-	-	Number of satellites
6	U1[2]	reserved0	-	-	Reserved
<i>Start of repeated group (numSvs times)</i>					
8 + n·12	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> ) for assignment
9 + n·12	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> ) for assignment
10 + n·12	U1	cno	-	dBHz	Carrier to noise ratio (signal strength)
11 + n·12	I1	elev	-	deg	Elevation (range: +/-90), unknown if out of range
12 + n·12	I2	azim	-	deg	Azimuth (range 0-360), unknown if elevation is out of range
14 + n·12	I2	prRes	0.1	m	Pseudorange residual
16 + n·12	X4	flags	-	-	Bitmask
bits 2...0	U:3	qualityInd	-	-	Signal quality indicator: <ul style="list-style-type: none"><li>• 0 = no signal</li><li>• 1 = searching signal</li><li>• 2 = signal acquired</li><li>• 3 = signal detected but unusable</li><li>• 4 = code locked and time synchronized</li><li>• 5, 6, 7 = code and carrier locked and time synchronized</li></ul>
bit 3	U:1	svUsed	-	-	1 = Signal in the subset specified in <a href="#">Signal Identifiers</a> is currently being used for navigation
bits 5...4	U:2	health	-	-	Signal health flag: <ul style="list-style-type: none"><li>• 0 = unknown</li><li>• 1 = healthy</li><li>• 2 = unhealthy</li></ul>
bit 6	U:1	diffCorr	-	-	1 = differential correction data is available for this SV
bit 7	U:1	smoothed	-	-	1 = carrier smoothed pseudorange used
bits 10...8	U:3	orbitSource	-	-	Orbit source: <ul style="list-style-type: none"><li>• 0 = no orbit information is available for this SV</li><li>• 1 = ephemeris is used</li><li>• 2 = almanac is used</li><li>• 3 = AssistNow Offline orbit is used</li><li>• 4 = AssistNow Autonomous orbit is used</li><li>• 5, 6, 7 = other orbit information is used</li></ul>
bit 11	U:1	ephAvail	-	-	1 = ephemeris is available for this SV
bit 12	U:1	almAvail	-	-	1 = almanac is available for this SV
bit 13	U:1	anoAvail	-	-	1 = AssistNow Offline data is available for this SV
bit 14	U:1	aopAvail	-	-	1 = AssistNow Autonomous data is available for this SV
bit 16	U:1	sbasCorrUsed	-	-	1 = SBAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>

bit 17	U:1	rtcmCorrUsed	-	-	1 = RTCM corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 18	U:1	slasCorrUsed	-	-	1 = QZSS SLAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 19	U:1	spartnCorrUsed	-	-	1 = SPARTN corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 20	U:1	prCorrUsed	-	-	1 = Pseudorange corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 21	U:1	crCorrUsed	-	-	1 = Carrier range corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 22	U:1	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 23	U:1	clasCorrUsed	-	-	1 = CLAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>

*End of repeated group (numSvs times)*

### 3.15.17 UBX-NAV-SBAS (0x01 0x32)

#### 3.15.17.1 SBAS status data

Message	UBX-NAV-SBAS SBAS status data				
Type	Periodic/pollled				
Comment	This message outputs the status of the SBAS sub system				
Message structure	Header	Class	ID	Length (Bytes)	Payload      Checksum
<i>Header</i> 0xb5 0x62 <i>Class</i> 0x01 <i>ID</i> 0x32 <i>Length (Bytes)</i> 12 + cnt·12 <i>Payload</i> see below <i>Checksum</i> CK_A CK_B					
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.
4	U1	geo	-	-	PRN Number of the GEO where correction and integrity data is used from
5	U1	mode	-	-	SBAS Mode <ul style="list-style-type: none"><li>• 0 Disabled</li><li>• 1 Enabled integrity</li><li>• 3 Enabled test mode</li></ul>
6	I1	sys	-	-	SBAS System (WAAS/EGNOS/...) <ul style="list-style-type: none"><li>• -1 Unknown</li><li>• 0 WAAS</li><li>• 1 EGNOS</li><li>• 2 MSAS</li><li>• 3 GAGAN</li><li>• 16 GPS</li></ul>
7	X1	service	-	-	SBAS Services available
bit 0	U:1	Ranging	-	-	GEO may be used as ranging source
bit 1	U:1	Corrections	-	-	GEO is providing correction data
bit 2	U:1	Integrity	-	-	GEO is providing integrity
bit 3	U:1	Testmode	-	-	GEO is in test mode

	bit 4	U <sub>1</sub>	Bad	-	-	Problem with signal or broadcast data indicated
8		U <sub>1</sub>	cnt	-	-	Number of SV data following
9		X <sub>1</sub>	statusFlags	-	-	SBAS status flags
	bits 1...0	U <sub>2</sub>	integrityUsed	-	-	SBAS integrity used <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Integrity information is not available or SBAS integrity is not enabled</li> <li>• 2 = Receiver uses only GPS satellites for which integrity information is available</li> </ul>
10		U <sub>1[2]</sub>	reserved0	-	-	Reserved
<i>Start of repeated group (cnt times)</i>						
12 + n·12		U <sub>1</sub>	svid	-	-	SV ID
13 + n·12		U <sub>1</sub>	reserved1	-	-	Reserved
14 + n·12		U <sub>1</sub>	udre	-	-	Monitoring status
15 + n·12		U <sub>1</sub>	svSys	-	-	System (WAAS/EGNOS/...) same as SYS
16 + n·12		U <sub>1</sub>	svService	-	-	Services available same as SERVICE
17 + n·12		U <sub>1</sub>	reserved2	-	-	Reserved
18 + n·12		I <sub>2</sub>	prc	-	cm	Pseudo Range correction in [cm]
20 + n·12		U <sub>1[2]</sub>	reserved3	-	-	Reserved
22 + n·12		I <sub>2</sub>	ic	-	cm	Ionosphere correction in [cm]
<i>End of repeated group (cnt times)</i>						

### 3.15.18 UBX-NAV-SIG (0x01 0x43)

#### 3.15.18.1 Signal information

Message	UBX-NAV-SIG				
	Signal information				
Type	Periodic/pollied				
Comment	This message displays information about signals currently tracked or searched by the receiver. On the F9 platform the maximum number of signals is 120.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x01	0x43	8 + numSigs·16	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x00 for this version)
5	U1	numSigs	-	-	Number of signals
6	U <sub>1[2]</sub>	reserved0	-	-	Reserved
<i>Start of repeated group (numSigs times)</i>					

8 + n·16	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> ) for assignment
9 + n·16	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> ) for assignment
10 + n·16	U1	sigId	-	-	New style signal identifier (see <a href="#">Signal Identifiers</a> )
11 + n·16	U1	freqId	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
12 + n·16	I2	prRes	0.1	m	Pseudorange residual
14 + n·16	U1	cno	-	dBHz	Carrier-to-noise density ratio (signal strength)
15 + n·16	U1	qualityInd	-	-	Signal quality indicator: <ul style="list-style-type: none"> <li>• 0 = no signal</li> <li>• 1 = searching signal</li> <li>• 2 = signal acquired</li> <li>• 3 = signal detected but unusable</li> <li>• 4 = code locked and time synchronized</li> <li>• 5, 6, 7 = code and carrier locked and time synchronized</li> </ul>
16 + n·16	U1	corrSource	-	-	Correction source: <ul style="list-style-type: none"> <li>• 0 = no corrections</li> <li>• 1 = SBAS corrections</li> <li>• 2 = BeiDou corrections</li> <li>• 3 = RTCM2 corrections</li> <li>• 4 = RTCM3 OSR corrections</li> <li>• 5 = RTCM3 SSR corrections</li> <li>• 6 = QZSS SLAS corrections</li> <li>• 7 = SPARTN corrections</li> <li>• 8 = CLAS corrections</li> </ul>
17 + n·16	U1	ionoModel	-	-	Ionoospheric model used: <ul style="list-style-type: none"> <li>• 0 = no model</li> <li>• 1 = Klobuchar model transmitted by GPS</li> <li>• 2 = SBAS model</li> <li>• 3 = Klobuchar model transmitted by BeiDou</li> <li>• 8 = Iono delay derived from dual frequency observations</li> </ul>
18 + n·16	X2	sigFlags	-	-	Signal related flags
bits 1...0	U <sub>2</sub>	health	-	-	Signal health flag: <ul style="list-style-type: none"> <li>• 0 = unknown</li> <li>• 1 = healthy</li> <li>• 2 = unhealthy</li> </ul>
bit 2	U <sub>1</sub>	prSmoothed	-	-	1 = Pseudorange has been smoothed
bit 3	U <sub>1</sub>	prUsed	-	-	1 = Pseudorange has been used for this signal
bit 4	U <sub>1</sub>	crUsed	-	-	1 = Carrier range has been used for this signal
bit 5	U <sub>1</sub>	doUsed	-	-	1 = Range rate (Doppler) has been used for this signal
bit 6	U <sub>1</sub>	prCorrUsed	-	-	1 = Pseudorange corrections have been used for this signal
bit 7	U <sub>1</sub>	crCorrUsed	-	-	1 = Carrier range corrections have been used for this signal
bit 8	U <sub>1</sub>	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for this signal

bit 9	U <sub>1</sub>	authStatus	-	-	Authentication status of the navigation data used to compute the satellite's position in current navigation epoch. If the authentication fails, the navigation data is not used so the authentication status in this message can take only two values: <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Authenticated</li></ul> Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message.
20 + n·16	U1[4]	reserved1	-	-	Reserved
<i>End of repeated group (numSigs times)</i>					

### 3.15.19 UBX-NAV-SLAS (0x01 0x42)

#### 3.15.19.1 QZSS L1S SLAS status data

Message	UBX-NAV-SLAS				
	QZSS L1S SLAS status data				
Type	Periodic/pollled				
Comment	This message outputs the status of the QZSS L1S SLAS sub system				
<b>Message structure</b>					
	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x01	0x42	20 + cnt·8	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.
4	U1	version	-	-	Message version (0x00 for this version)
5	U1[3]	reserved0	-	-	Reserved
8	I4	gmsLon	1e-3	deg	Longitude of the used ground monitoring station
12	I4	gmsLat	1e-3	deg	Latitude of the used ground monitoring station
16	U1	gmsCode	-	-	Code of the used ground monitoring station according to the QZSS SLAS Interface Specification, available from <a href="http://qzss.go.jp/en/">qzss.go.jp/en/</a>
17	U1	qzssSvId	-	-	Satellite identifier of the QZS/GEO whose correction data is used (see <a href="#">Satellite Numbering</a> )
18	X1	serviceFlags	-	-	Flags regarding SLAS service
bit 0	U <sub>1</sub>	gmsAvailable	-	-	1 = Ground monitoring station available
bit 1	U <sub>1</sub>	qzssSvAvailable	-	-	1 = Correction providing QZSS SV available
bit 2	U <sub>1</sub>	testMode	-	-	1 = Currently used QZSS SV in test mode
19	U1	cnt	-	-	Number of pseudorange corrections following
<i>Start of repeated group (cnt times)</i>					
20 + n·8	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> )
21 + n·8	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )
22 + n·8	U1	reserved1	-	-	Reserved

23 + n·8	U1[3]	reserved2	-	-	Reserved
26 + n·8	I2	prc	-	cm	Pseudorange correction
<i>End of repeated group (cnt times)</i>					

### 3.15.20 UBX-NAV-STATUS (0x01 0x03)

#### 3.15.20.1 Receiver navigation status

Message	UBX-NAV-STATUS				
Type	Receiver navigation status				
Comment	See important comments concerning the validity of the position given in section Navigation output filters in the Integration manual.				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. For details, see section iTOW timestamps in the integration manual.
4	U1	gpsFix	-	-	GPSfix Type, this value does <b>not</b> qualify a fix as valid and within the limits. See note on flag gpsFixOk below. <ul style="list-style-type: none"> <li>• 0x00 = no fix</li> <li>• 0x01 = dead reckoning only</li> <li>• 0x02 = 2D-fix</li> <li>• 0x03 = 3D-fix</li> <li>• 0x04 = GPS + dead reckoning combined</li> <li>• 0x05 = Time only fix</li> <li>• 0x06..0xff = reserved</li> </ul>
5	X1	flags	-	-	Navigation Status Flags
bit 0	U:1	gpsFixOk	-	-	1 = position and velocity valid and within DOP and ACC Masks.
bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied
bit 2	U:1	wknSet	-	-	1 = Week Number valid (for details, see section Time validity in the Integration manual)
bit 3	U:1	towSet	-	-	1 = Time of Week valid (for details, see section Time validity in the integration manual)
6	X1	fixStat	-	-	Fix Status Information
bit 0	U:1	diffCorr	-	-	1 = differential corrections available
bit 1	U:1	carrSolnValid	-	-	1 = valid carrSoln
bits 7...6	U:2	mapMatching	-	-	map matching status: <ul style="list-style-type: none"> <li>• 00: none</li> <li>• 01: valid but not used, i.e. map matching data was received, but was too old</li> <li>• 10: valid and used, map matching data was applied</li> <li>• 11: valid and used, map matching data was applied. In case of sensor unavailability map</li> </ul>

					matching data enables dead reckoning. This requires map matched latitude/longitude or heading data.
7	X1	flags2	-	-	further information about navigation output
bits 1...0	U <sub>2</sub>	psmState	-	-	<p>power save mode state (not supported for protocol versions less than 13.01)</p> <ul style="list-style-type: none"> <li>• 0 = ACQUISITION [or when psm disabled]</li> <li>• 1 = TRACKING</li> <li>• 2 = POWER OPTIMIZED TRACKING</li> <li>• 3 = INACTIVE</li> </ul>
bits 4...3	U <sub>2</sub>	spoofDetState	-	-	<p>Spoofing detection state (not supported for protocol versions less than 18.00)</p> <ul style="list-style-type: none"> <li>• 0: Unknown or deactivated</li> <li>• 1: No spoofing indicated</li> <li>• 2: Spoofing indicated</li> <li>• 3: Multiple spoofing indications</li> </ul> <p>Note that the spoofing state value only reflects the detector state for the current navigation epoch. As spoofing can be detected most easily at the transition from real signal to spoofing signal, this is also where the detector is triggered the most. I.e. a value of 1 - <i>No spoofing indicated</i> does not mean that the receiver is not spoofed, it simply states that the detector was not triggered in this epoch.</p>
bits 7..6	U <sub>2</sub>	carrSoln	-	-	Carrier phase range solution status:
8	U4	ttff	-	ms	Time to first fix (millisecond time tag)
12	U4	msss	-	ms	Milliseconds since startup / reset

### 3.15.21 UBX-NAV-SVIN (0x01 0x3b)

#### 3.15.21.1 Survey-in data

Message	UBX-NAV-SVIN																
Type	Survey-in data																
Comment	This message contains information about survey-in parameters.																
Message structure	<table border="1"> <tr> <th>Header</th> <th>Class</th> <th>ID</th> <th>Length (Bytes)</th> </tr> <tr> <td>0xb5 0x62</td> <td>0x01</td> <td>0x3b</td> <td>40</td> </tr> </table>				Header	Class	ID	Length (Bytes)	0xb5 0x62	0x01	0x3b	40	<table border="1"> <tr> <th>Payload</th> <th>Checksum</th> </tr> <tr> <td>see below</td> <td>CK_A CK_B</td> </tr> </table>	Payload	Checksum	see below	CK_A CK_B
Header	Class	ID	Length (Bytes)														
0xb5 0x62	0x01	0x3b	40														
Payload	Checksum																
see below	CK_A CK_B																
<i>Payload description:</i>																	
Byte offset	Type	Name	Scale	Unit	Description												
0	U1	version	-	-	Message version (0x00 for this version)												
1	U1[3]	reserved0	-	-	Reserved												

4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.
8	U4	dur	-	s	Passed survey-in observation time
12	I4	meanX	-	cm	Current survey-in mean position ECEF X coordinate
16	I4	meanY	-	cm	Current survey-in mean position ECEF Y coordinate
20	I4	meanZ	-	cm	Current survey-in mean position ECEF Z coordinate
24	I1	meanXHP	-	0.1_mm	Current high-precision survey-in mean position ECEF X coordinate. Must be in the range -99..+99.  The current survey-in mean position ECEF X coordinate, in units of cm, is given by meanX + (0.01 * meanXHP)
25	I1	meanYHP	-	0.1_mm	Current high-precision survey-in mean position ECEF Y coordinate. Must be in the range -99..+99.  The current survey-in mean position ECEF Y coordinate, in units of cm, is given by meanY + (0.01 * meanYHP)
26	I1	meanZHP	-	0.1_mm	Current high-precision survey-in mean position ECEF Z coordinate. Must be in the range -99..+99.  The current survey-in mean position ECEF Z coordinate, in units of cm, is given by meanZ + (0.01 * meanZHP)
27	U1	reserved1	-	-	Reserved
28	U4	meanAcc	-	0.1_mm	Current survey-in mean position accuracy
32	U4	obs	-	-	Number of position observations used during survey-in
36	U1	valid	-	-	Survey-in position validity flag, 1 = valid, otherwise 0
37	U1	active	-	-	Survey-in in progress flag, 1 = in-progress, otherwise 0
38	U1[2]	reserved2	-	-	Reserved

### 3.15.22 UBX-NAV-TIMEBDS (0x01 0x24)

#### 3.15.22.1 BeiDou time solution

Message	UBX-NAV-TIMEBDS				
BeiDou time solution					
Type	Periodic/polled				
Comment	This message reports the precise BDS time of the most recent navigation solution including validity flags and an accuracy estimate.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x01	0x24	20	see below
Checksum					
Payload description:					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	SOW	-	s	BDS time of week (rounded to seconds)
8	I4	fSOW	-	ns	Fractional part of SOW (range: +/-500000000). The precise BDS time of week in seconds is: SOW + fSOW * 1e-9

12	I2	week	-	-	BDS week number of the navigation epoch
14	I1	leaps	-	s	BDS leap seconds (BDS-UTC)
15	X1	valid	-	-	Validity Flags
	bit 0	U <sub>1</sub>	sowValid	-	1 = Valid SOW and fSOW (see section Time validity in the integration manual for details)
	bit 1	U <sub>1</sub>	weekValid	-	1 = Valid week (see section Time validity in the integration manual for details)
	bit 2	U <sub>1</sub>	leapSValid	-	1 = Valid leap second
16	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.15.23 UBX-NAV-TIMEGAL (0x01 0x25)

#### 3.15.23.1 Galileo time solution

Message	UBX-NAV-TIMEGAL				
Type	Galileo time solution				
Comment	This message reports the precise Galileo time of the most recent navigation solution including validity flags and an accuracy estimate.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x01	0x25	20	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	galTow	-	s	Galileo time of week (rounded to seconds)
8	I4	fGalTow	-	ns	Fractional part of the Galileo time of week (range: +/-500000000). The precise Galileo time of week in seconds is: galTow + fGalTow * 1e-9
12	I2	galWno	-	-	Galileo week number
14	I1	leaps	-	s	Galileo leap seconds (Galileo-UTC)
15	X1	valid	-	-	Validity Flags
	bit 0	U <sub>1</sub>	galTowValid	-	1 = Valid galTow and fGalTow (see section Time validity in the integration manual for details)
	bit 1	U <sub>1</sub>	galWnoValid	-	1 = Valid galWno (see section Time validity in the integration manual for details)
	bit 2	U <sub>1</sub>	leapSValid	-	1 = Valid leapS
16	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.15.24 UBX-NAV-TIMEGLO (0x01 0x23)

#### 3.15.24.1 GLONASS time solution

Message	UBX-NAV-TIMEGLO				
Type	GLONASS time solution				
Comment	This message reports the precise GLONASS time of the most recent navigation solution including validity flags and an accuracy estimate.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x01	0x23	20	see below
	<i>Payload description:</i>				
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	glonassTow	-	s	GLONASS time of week (rounded to seconds)
8	I4	fGlonassTow	-	ns	Fractional part of the GLONASS time of week (range: +/-500000000). The precise GLONASS time of week in seconds is: glonassTow + fGlonassTow * 1e-9
12	I2	glonassWno	-	-	GLONASS week number
14	I1	leaps	-	s	GLONASS leap seconds (GLONASS-UTC)
15	X1	valid	-	-	Validity Flags
	bit 0	U <sub>1</sub>	glonassTowValid	-	1 = Valid glonassTow and fGlonassTow (see section Time validity in the integration manual for details)
	bit 1	U <sub>1</sub>	glonassWnoValid	-	1 = Valid glonassWno (see section Time validity in the integration manual for details)
	bit 2	U <sub>1</sub>	leapSValid	-	1 = Valid leapS
16	U4	tAcc	-	ns	Time Accuracy Estimate

<b>Comment</b>	This message reports the precise GLO time of the most recent navigation solution including validity flags and an accuracy estimate.				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5	0x62	0x01	0x23	20
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	TOD	-	s	GLONASS time of day (rounded to integer seconds)
8	I4	fTOD	-	ns	Fractional part of TOD (range: +/-500000000). The precise GLONASS time of day in seconds is: TOD + fTOD * 1e-9
12	U2	Nt	-	days	Current date (range: 1-1461), starting at 1 from the 1st Jan of the year indicated by N4 and ending at 1461 at the 31st Dec of the third year after that indicated by N4
14	U1	N4	-	-	Four-year interval number starting from 1996 (1=1996, 2=2000, 3=2004...)
15	X1	valid	-	-	Validity flags
bit 0	U1	todValid	-	-	1 = Valid TOD and fTOD (see section Time validity in the integration manual for details)
bit 1	U1	dateValid	-	-	1 = Valid N4 and Nt (see section Time validity in the integration manual for details)
16	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.15.25 UBX-NAV-TIMEGPS (0x01 0x20)

#### 3.15.25.1 GPS time solution

<b>Message</b>	UBX-NAV-TIMEGPS				
<b>GPS time solution</b>					
<b>Type</b>	Periodic/polled				
<b>Comment</b>	This message reports the precise GPS time of the most recent navigation solution including validity flags and an accuracy estimate.				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5	0x62	0x01	0x20	16
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	fTOW	-	ns	Fractional part of iTOW (range: +/-500000). The precise GPS time of week in seconds is: (iTOW * 1e-3) + (fTOW * 1e-9)
8	I2	week	-	-	GPS week number of the navigation epoch
10	I1	leaps	-	s	GPS leap seconds (GPS-UTC)
11	X1	valid	-	-	Validity Flags

bit 0	U <sub>1</sub>	towValid	-	-	1 = Valid GPS time of week (iTOW & fTOW, (see section Time validity in the integration manual for details)
bit 1	U <sub>1</sub>	weekValid	-	-	1 = Valid GPS week number (see section Time validity in the integration manual for details)
bit 2	U <sub>1</sub>	leapSValid	-	-	1 = Valid GPS leap seconds
12	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.15.26 UBX-NAV-TIMELS (0x01 0x26)

#### 3.15.26.1 Leap second event information

Message		UBX-NAV-TIMELS				Leap second event information	
Type	Comment	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message structure	Information about the upcoming leap second event if one is scheduled.	0xb5	0x62	0x01	0x26	24	see below CK_A CK_B
<i>Payload description:</i>							
Byte offset	Type	Name	Scale	Unit	Description		
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.		
4	U1	version	-	-	Message version (0x00 for this version)		
5	U1[3]	reserved0	-	-	Reserved		
8	U1	srcOfCurrLs	-	-	Information source for the current number of leap seconds. <ul style="list-style-type: none"> <li>• 0 = Default (hardcoded in the firmware, can be outdated)</li> <li>• 1 = Derived from time difference between GPS and GLONASS time</li> <li>• 2 = GPS</li> <li>• 3 = SBAS</li> <li>• 4 = BeiDou</li> <li>• 5 = Galileo</li> <li>• 6 = Aided data</li> <li>• 7 = Configured</li> <li>• 8 = NavIC</li> <li>• 255 = Unknown</li> </ul>		
9	I1	currLs	-	s	Current number of leap seconds since start of GPS time (Jan 6, 1980). It reflects how much GPS time is ahead of UTC time. Galileo number of leap seconds is the same as GPS. BeiDou number of leap seconds is 14 less than GPS. GLONASS follows UTC time, so no leap seconds.		
10	U1	srcOfLsChange	-	-	Information source for the future leap second event. <ul style="list-style-type: none"> <li>• 0 = No source</li> <li>• 2 = GPS</li> <li>• 3 = SBAS</li> <li>• 4 = BeiDou</li> <li>• 5 = Galileo</li> <li>• 6 = GLONASS</li> <li>• 7 = NavIC</li> </ul>		

11	I1	lsChange	-	s	Future leap second change if one is scheduled. +1 = positive leap second, -1 = negative leap second, 0 = no future leap second event scheduled or no information available. If the value is 0, then the amount of leap seconds did not change and the event should be ignored.
12	I4	timeToLsEvent	-	s	Number of seconds until the next leap second event, or from the last leap second event if no future event scheduled. If > 0 event is in the future, = 0 event is now, < 0 event is in the past. Valid only if validTimeToLsEvent = 1.
16	U2	dateOfLsGps Wn	-	-	GPS week number (WN) of the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1.
18	U2	dateOfLsGps Dn	-	-	GPS day of week number (DN) for the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1. (GPS and Galileo DN: from 1 = Sun to 7 = Sat. BeiDou DN: from 0 = Sun to 6 = Sat.)
20	U1[3]	reserved1	-	-	Reserved
23	X1	valid	-	-	Validity flags
bit 0	U <sub>1</sub>	validCurrLs	-	-	1 = Valid current number of leap seconds value.
bit 1	U <sub>1</sub>	validTimeToLs Event	-	-	1 = Valid time to next leap second event or from the last leap second event if no future event scheduled.

### 3.15.27 UBX-NAV-TIMEQZSS (0x01 0x27)

#### 3.15.27.1 QZSS time solution

Message	UBX-NAV-TIMEQZSS				
	QZSS time solution				
Type	Periodic/pollled				
Comment	This message reports the precise QZSS time of the most recent navigation solution including validity flags and an accuracy estimate. See the Clocks and time section in the integration manual for details.				
<b>Message structure:</b>					
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x01	0x27	20	see below
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch.
4	U4	qzssTow	-	s	QZSS time of week (rounded to seconds)
8	I4	fQzssTow	-	ns	Fractional part of QZSS time of week (range: +/-5000000000). The precise QZSS time of week in seconds is: $qzssTow + (fQzssTow * 1e-9)$
12	I2	qzssWno	-	-	QZSS week number of the navigation epoch
14	I1	leapS	-	s	QZSS leap seconds (QZSS-UTC)
15	X1	valid	-	-	Validity Flags
bit 0	U <sub>1</sub>	qzssTowValid	-	-	1 = Valid QZSS time of week (qzssTow and fQzssTow)

bit 1	U <sub>1</sub>	qzssWnoValid	-	-	1 = Valid QZSS week number
bit 2	U <sub>1</sub>	leapSValid	-	-	1 = Valid QZSS leap seconds
16	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.15.28 UBX-NAV-TIMEUTC (0x01 0x21)

#### 3.15.28.1 UTC time solution

Message	UBX-NAV-TIMEUTC				Payload	Checksum
Type	UTC time solution					
Message structure	Header 0xb5 0x62 Class 0x01 ID 0x21 Length (Bytes) 20				see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.	
4	U4	tAcc	-	ns	Time accuracy estimate (UTC)	
8	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)	
12	U2	year	-	y	Year, range 1999..2099 (UTC)	
14	U1	month	-	month	Month, range 1..12 (UTC)	
15	U1	day	-	d	Day of month, range 1..31 (UTC)	
16	U1	hour	-	h	Hour of day, range 0..23 (UTC)	
17	U1	min	-	min	Minute of hour, range 0..59 (UTC)	
18	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)	
19	X1	valid	-	-	Validity Flags	
bit 0	U <sub>1</sub>	validTOW	-	-	1 = Valid Time of Week (see section Time validity in the integration manual for details)	
bit 1	U <sub>1</sub>	validWKN	-	-	1 = Valid Week Number (see section Time validity in the integration manual for details)	
bit 2	U <sub>1</sub>	validUTC	-	-	1 = Valid UTC Time	
bit 3	U <sub>1</sub>	authStatus	-	-	Indicates if the parameters used to convert GNSS time into UTC time have been authenticated. <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Authenticated</li> </ul> Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message which means that data can only be authenticated for EU UTC standard.	
bits 7..4	U <sub>4</sub>	utcStandard	-	-	UTC standard identifier. (Not supported for protocol versions less than 15.00) <ul style="list-style-type: none"> <li>• 0 = Information not available</li> </ul>	

- 1 = Communications Research Laboratory (CRL), Tokyo, Japan
- 2 = National Institute of Standards and Technology (NIST)
- 3 = U.S. Naval Observatory (USNO)
- 4 = International Bureau of Weights and Measures (BIPM)
- 5 = European laboratories
- 6 = Former Soviet Union (SU)
- 7 = National Time Service Center (NTSC), China
- 8 = National Physics Laboratory India (NPLI)
- 15 = Unknown

### 3.15.29 UBX-NAV-VELECEF (0x01 0x11)

#### 3.15.29.1 Velocity solution in ECEF

<b>Message</b>	UBX-NAV-VELECEF				
<b>Velocity solution in ECEF</b>					
<b>Type</b>	Periodic/polled				
<b>Comment</b>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.				
<i>Message structure</i>					
Header	Class	ID	Length (Bytes)	<i>Payload</i>	<i>Checksum</i>
0xb5 0x62	0x01	0x11	20	see below	CK_A CK_B
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	ecefVX	-	cm/s	ECEF X velocity
8	I4	ecefVY	-	cm/s	ECEF Y velocity
12	I4	ecefVZ	-	cm/s	ECEF Z velocity
16	U4	sAcc	-	cm/s	Speed accuracy estimate

### 3.15.30 UBX-NAV-VELNED (0x01 0x12)

#### 3.15.30.1 Velocity solution in NED frame

<b>Message</b>	UBX-NAV-VELNED				
<b>Velocity solution in NED frame</b>					
<b>Type</b>	Periodic/polled				
<b>Comment</b>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.				
<i>Message structure</i>					
Header	Class	ID	Length (Bytes)	<i>Payload</i>	<i>Checksum</i>
0xb5 0x62	0x01	0x12	36	see below	CK_A CK_B
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>

0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	vElN	-	cm/s	North velocity component
8	I4	vElE	-	cm/s	East velocity component
12	I4	vElD	-	cm/s	Down velocity component
16	U4	speed	-	cm/s	Speed (3-D)
20	U4	gSpeed	-	cm/s	Ground speed (2-D)
24	I4	heading	1e-5	deg	Heading of motion 2-D
28	U4	sAcc	-	cm/s	Speed accuracy Estimate
32	U4	cAcc	1e-5	deg	Course / Heading accuracy estimate

## 3.16 UBX-NAV2 (0x29)

The messages in the UBX-NAV2 class are used to output navigation results and data, such as position, altitude and velocity in a number of formats, and status flags and accuracy estimate figures, or satellite and signal information. The messages are generated with the configured navigation rate.

### 3.16.1 UBX-NAV2-CLOCK (0x29 0x22)

#### 3.16.1.1 Clock solution

Message	UBX-NAV2-CLOCK				
Clock solution					
Type	Periodic/pollled				
<i>Comment</i>					
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x29	0x22	20	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section Navigation epochs in the integration manual for details.  See section iTOW timestamps in the integration manual for details.
4	I4	clkB	-	ns	Clock bias
8	I4	clkD	-	ns/s	Clock drift
12	U4	tAcc	-	ns	Time accuracy estimate
16	U4	fAcc	-	ps/s	Frequency accuracy estimate

### 3.16.2 UBX-NAV2-COV (0x29 0x36)

#### 3.16.2.1 Covariance matrices

Message	UBX-NAV2-COV				
Covariance matrices					
Type	Periodic/pollled				

<b>Comment</b>	This message outputs the covariance matrices for the position and velocity solutions in the topocentric coordinate system defined as the local-level North (N), East (E), Down (D) frame. As the covariance matrices are symmetric, only the upper triangular part is output.				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5 0x62	0x29	0x36	64	<i>see below</i>
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x00 for this version)
5	U1	posCovValid	-	-	Position covariance matrix validity flag
6	U1	velCovValid	-	-	Velocity covariance matrix validity flag
7	U1[9]	reserved0	-	-	<a href="#">Reserved</a>
16	R4	posCovNN	-	m <sup>2</sup>	Position covariance matrix value p_NN
20	R4	posCovNE	-	m <sup>2</sup>	Position covariance matrix value p_NE
24	R4	posCovND	-	m <sup>2</sup>	Position covariance matrix value p_ND
28	R4	posCovEE	-	m <sup>2</sup>	Position covariance matrix value p_EE
32	R4	posCovED	-	m <sup>2</sup>	Position covariance matrix value p_ED
36	R4	posCovDD	-	m <sup>2</sup>	Position covariance matrix value p_DD
40	R4	velCovNN	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v_NN
44	R4	velCovNE	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v_NE
48	R4	velCovND	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v_ND
52	R4	velCovEE	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v_EE
56	R4	velCovED	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v_ED
60	R4	velCovDD	-	m <sup>2</sup> /s <sup>2</sup>	Velocity covariance matrix value v_DD

### 3.16.3 UBX-NAV2-DOP (0x29 0x04)

#### 3.16.3.1 Dilution of precision

<b>Message</b>	UBX-NAV2-DOP				
	<b>Dilution of precision</b>				
<b>Type</b>	Periodic/polled				
<b>Comment</b>	<ul style="list-style-type: none"> <li>DOP values are dimensionless.</li> <li>All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, the DOP value is 1.56.</li> </ul>				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5 0x62	0x29	0x04	18	<i>see below</i>
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U2	gDOP	0.01	-	Geometric DOP
6	U2	pDOP	0.01	-	Position DOP

8	U2	tDOP	0.01	-	Time DOP
10	U2	vDOP	0.01	-	Vertical DOP
12	U2	hDOP	0.01	-	Horizontal DOP
14	U2	nDOP	0.01	-	Northing DOP
16	U2	eDOP	0.01	-	Easting DOP

### 3.16.4 UBX-NAV2-EOE (0x29 0x61)

#### 3.16.4.1 End of epoch

Message	UBX-NAV2-EOE				
	End of epoch				
Type	Periodic				
Comment	This message is intended to be used as a marker to collect all navigation messages of an epoch. It is output after all enabled NAV class messages (except UBX-NAV-HNR) and after all enabled NMEA messages.				
<i>Message structure</i>					
Header	Class	ID	Length (Bytes)	Payload	Checksum
0xb5 0x62	0x29	0x61	4	see below	CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.

### 3.16.5 UBX-NAV2-ODO (0x29 0x09)

#### 3.16.5.1 Odometer solution

Message	UBX-NAV2-ODO				
	Odometer solution				
Type	Periodic/polled				
Comment	This message outputs the traveled distance since last reset (see <a href="#">UBX-NAV-RESETODO</a> ) together with an associated estimated accuracy and the total cumulated ground distance (can only be reset by a cold start of the receiver).				
<i>Message structure</i>					
Header	Class	ID	Length (Bytes)	Payload	Checksum
0xb5 0x62	0x29	0x09	20	see below	CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1[3]	reserved0	-	-	Reserved
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
8	U4	distance	-	m	Ground distance since last reset
12	U4	totalDistance	-	m	Total cumulative ground distance
16	U4	distanceStd	-	m	Ground distance accuracy (1-sigma)

### 3.16.6 UBX-NAV2-POSECEF (0x29 0x01)

### 3.16.6.1 Position solution in ECEF

<b>Message</b>	UBX-NAV2-POSECEF				
<b>Type</b>	Periodic/polled				
<b>Comment</b>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.				
<b>Message structure</b>					
Byte offset	Header	Class	ID	Length (Bytes)	Payload
0	0xb5 0x62	0x29	0x01	20	see below
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	ecefX	-	cm	ECEF X coordinate
8	I4	ecefY	-	cm	ECEF Y coordinate
12	I4	ecefZ	-	cm	ECEF Z coordinate
16	U4	pAcc	-	cm	Position Accuracy Estimate

### 3.16.7 UBX-NAV2-POSLH (0x29 0x02)

#### 3.16.7.1 Geodetic position solution

<b>Message</b>	UBX-NAV2-POSLH				
<b>Type</b>	Periodic/polled				
<b>Comment</b>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.  This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message <a href="#">CFG-NAVSPG-USE_USRDAT</a> .				
<b>Message structure</b>					
Byte offset	Header	Class	ID	Length (Bytes)	Payload
0	0xb5 0x62	0x29	0x02	28	see below
<b>Payload description:</b>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	lon	1e-7	deg	Longitude
8	I4	lat	1e-7	deg	Latitude
12	I4	height	-	mm	Height above ellipsoid
16	I4	hMSL	-	mm	Height above mean sea level
20	U4	hAcc	-	mm	Horizontal accuracy estimate
24	U4	vAcc	-	mm	Vertical accuracy estimate

### 3.16.8 UBX-NAV2-PVT (0x29 0x07)

### 3.16.8.1 Navigation position velocity time solution

Message	UBX-NAV2-PVT				
Type	Navigation position velocity time solution				
Comment	This message combines position, velocity and time solution, including accuracy figures. Note that during a leap second there may be more or less than 60 seconds in a minute. See description of leap seconds in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x29	0x07	92
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U2	year	-	y	Year (UTC)
6	U1	month	-	month	Month, range 1..12 (UTC)
7	U1	day	-	d	Day of month, range 1..31 (UTC)
8	U1	hour	-	h	Hour of day, range 0..23 (UTC)
9	U1	min	-	min	Minute of hour, range 0..59 (UTC)
10	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)
11	X1	valid	-	-	Validity flags
bit 0	U:1	validDate	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)
bit 1	U:1	validTime	-	-	1 = valid UTC time of day (see section Time validity in the integration manual for details)
bit 2	U:1	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
bit 3	U:1	validMag	-	-	1 = valid magnetic declination
12	U4	tAcc	-	ns	Time accuracy estimate (UTC)
16	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
20	U1	fixType	-	-	GNSSfix Type: <ul style="list-style-type: none"><li>• 0 = no fix</li><li>• 1 = dead reckoning only</li><li>• 2 = 2D-fix</li><li>• 3 = 3D-fix</li><li>• 4 = GNSS + dead reckoning combined</li><li>• 5 = time only fix</li></ul>
21	X1	flags	-	-	Fix status flags
bit 0	U:1	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)
bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied
bits 4...2	U:3	psmState	-	-	Power save mode state (see Power management section in the integration manual for details). <ul style="list-style-type: none"><li>• 0 = PSM is not active</li><li>• 1 = Enabled (an intermediate state before Acquisition state)</li></ul>

					<ul style="list-style-type: none"> <li>• 2 = Acquisition</li> <li>• 3 = Tracking</li> <li>• 4 = Power Optimized Tracking</li> <li>• 5 = Inactive</li> </ul>
	bit 5	U <sub>1</sub>	headVehValid	-	-
					1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode
	bits 7...6	U <sub>2</sub>	carrSoln	-	-
					<p>Carrier phase range solution status:</p> <ul style="list-style-type: none"> <li>• 0 = no carrier phase range solution</li> <li>• 1 = carrier phase range solution with floating ambiguities</li> <li>• 2 = carrier phase range solution with fixed ambiguities</li> </ul> <p>(not supported for protocol versions less than 20.00)</p>
22	X1	flags2	-	-	Additional flags
	bit 5	U <sub>1</sub>	confirmedAvai	-	-
					<p>1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details)</p> <p>This flag is only supported in <a href="#">Protocol Versions 19.00, 19.10, 20.10, 20.20, 20.30, 22.00, 23.00, 23.01, 27 and 28</a>.</p>
	bit 6	U <sub>1</sub>	confirmedDate	-	-
					1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
	bit 7	U <sub>1</sub>	confirmedTime	-	-
					1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
23	U1	numSV	-	-	Number of satellites used in Nav Solution
24	I4	lon	1e-7	deg	Longitude
28	I4	lat	1e-7	deg	Latitude
32	I4	height	-	mm	Height above ellipsoid
36	I4	hMSL	-	mm	Height above mean sea level
40	U4	hAcc	-	mm	Horizontal accuracy estimate
44	U4	vAcc	-	mm	Vertical accuracy estimate
48	I4	velN	-	mm/s	NED north velocity
52	I4	velE	-	mm/s	NED east velocity
56	I4	velD	-	mm/s	NED down velocity
60	I4	gSpeed	-	mm/s	Ground Speed (2-D)
64	I4	headMot	1e-5	deg	Heading of motion (2-D)
68	U4	sAcc	-	mm/s	Speed accuracy estimate
72	U4	headAcc	1e-5	deg	Heading accuracy estimate (both motion and vehicle)
76	U2	pDOP	0.01	-	Position DOP
78	X2	flags3	-	-	Additional flags
	bit 0	U <sub>1</sub>	invalidLlh	-	-
					1 = Invalid lon, lat, height and hMSL (applicable to heading products only)
	bits 4...1	U <sub>4</sub>	lastCorrection	-	-
			Age		<p>Age of the most recently received differential correction:</p> <ul style="list-style-type: none"> <li>• 0 = Not available</li> <li>• 1 = Age between 0 and 1 second</li> </ul>

- 2 = Age between 1 (inclusive) and 2 seconds
- 3 = Age between 2 (inclusive) and 5 seconds
- 4 = Age between 5 (inclusive) and 10 seconds
- 5 = Age between 10 (inclusive) and 15 seconds
- 6 = Age between 15 (inclusive) and 20 seconds
- 7 = Age between 20 (inclusive) and 30 seconds
- 8 = Age between 30 (inclusive) and 45 seconds
- 9 = Age between 45 (inclusive) and 60 seconds
- 10 = Age between 60 (inclusive) and 90 seconds
- 11 = Age between 90 (inclusive) and 120 seconds
- >=12 = Age greater or equal than 120 seconds

bit 13	U <sub>1</sub>	authTime	-	-	Flag that indicates if the output time has been validated against an external trusted time source <ul style="list-style-type: none"> <li>• 0 = Time is not authenticated</li> <li>• 1 = Time is authenticated</li> </ul>
bit 14	U <sub>1</sub>	nmaFixStatus	-	-	Flag assigned to a fix that has been computed mixing satellites with data authenticated through Navigation Message Authentication (NMA) methods and satellites using unauthenticated data. The fix is flagged as Verified when internal cross-checks validates the unauthenticated signals against the authenticated ones. Note that Not Verified status does not imply directly spoofing attacks, to identify spoofing alerts refer to <a href="#">UBX-SEC-SIG</a> . <ul style="list-style-type: none"> <li>• 0 = Not Verified: The mixed solution does not agree with the NMA authenticated data or the comparison could not be performed, e.g., not enough authenticated SVs to extrapolate the result or cryptographic data not decoded yet</li> <li>• 1 = Verified: The mixed solution agrees with the NMA authenticated data</li> </ul> <p>Currently, the only existing NMA method is Galileo Open Service Navigation Message Authentication (OSNMA) protocol.</p>
80	U1[4]	reserved0	-	-	Reserved
84	I4	headVeh	1e-5	deg	Heading of vehicle (2-D), this is only valid when headVehValid is set, otherwise the output is set to the heading of motion
88	I2	magDec	1e-2	deg	Magnetic declination. Only supported in ADR 4.10 and later.
90	U2	magAcc	1e-2	deg	Magnetic declination accuracy. Only supported in ADR 4.10 and later.

### 3.16.9 UBX-NAV2-SAT (0x29 0x35)

#### 3.16.9.1 Satellite information

Message	UBX-NAV2-SAT				
Satellite information					
Type	Periodic/polled				

<b>Comment</b>	This message displays information about SVs that are either known to be visible or currently tracked by the receiver. All signal related information corresponds to the subset of signals specified in <a href="#">Signal Identifiers</a> .					
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>		<i>Payload</i>
	0xb5	0x62	0x29	0x35	8 + numSvs·12	<i>see below</i>
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>		<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U4	iTOW		-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version		-	-	Message version (0x01 for this version)
5	U1	numSvs		-	-	Number of satellites
6	U1[2]	reserved0		-	-	Reserved
<i>Start of repeated group (numSvs times)</i>						
8 + n·12	U1	gnssId		-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> ) for assignment
9 + n·12	U1	svId		-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> ) for assignment
10 + n·12	U1	cno		-	dBHz	Carrier to noise ratio (signal strength)
11 + n·12	I1	elev		-	deg	Elevation (range: +/-90), unknown if out of range
12 + n·12	I2	azim		-	deg	Azimuth (range 0-360), unknown if elevation is out of range
14 + n·12	I2	prRes		0.1	m	Pseudorange residual
16 + n·12	X4	flags		-	-	Bitmask
bits 2...0	U3	qualityInd		-	-	Signal quality indicator: <ul style="list-style-type: none"><li>• 0 = no signal</li><li>• 1 = searching signal</li><li>• 2 = signal acquired</li><li>• 3 = signal detected but unusable</li><li>• 4 = code locked and time synchronized</li><li>• 5, 6, 7 = code and carrier locked and time synchronized</li></ul>
bit 3	U1	svUsed		-	-	1 = Signal in the subset specified in <a href="#">Signal Identifiers</a> is currently being used for navigation
bits 5...4	U2	health		-	-	Signal health flag: <ul style="list-style-type: none"><li>• 0 = unknown</li><li>• 1 = healthy</li><li>• 2 = unhealthy</li></ul>
bit 6	U1	diffCorr		-	-	1 = differential correction data is available for this SV
bit 7	U1	smoothed		-	-	1 = carrier smoothed pseudorange used
bits 10...8	U3	orbitSource		-	-	Orbit source: <ul style="list-style-type: none"><li>• 0 = no orbit information is available for this SV</li><li>• 1 = ephemeris is used</li><li>• 2 = almanac is used</li><li>• 3 = AssistNow Offline orbit is used</li><li>• 4 = AssistNow Autonomous orbit is used</li></ul>

					• 5, 6, 7 = other orbit information is used
bit 11	U:1	ephAvail	-	-	1 = ephemeris is available for this SV
bit 12	U:1	almAvail	-	-	1 = almanac is available for this SV
bit 13	U:1	anoAvail	-	-	1 = AssistNow Offline data is available for this SV
bit 14	U:1	aopAvail	-	-	1 = AssistNow Autonomous data is available for this SV
bit 16	U:1	sbasCorrUsed	-	-	1 = SBAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 17	U:1	rtcmCorrUsed	-	-	1 = RTCM corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 18	U:1	slasCorrUsed	-	-	1 = QZSS SLAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 19	U:1	spartnCorrUsed	-	-	1 = SPARTN corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 20	U:1	prCorrUsed	-	-	1 = Pseudorange corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 21	U:1	crCorrUsed	-	-	1 = Carrier range corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 22	U:1	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>
bit 23	U:1	clasCorrUsed	-	-	1 = CLAS corrections have been used for a signal in the subset specified in <a href="#">Signal Identifiers</a>

*End of repeated group (numSvs times)*

### 3.16.10 UBX-NAV2-SBAS (0x29 0x32)

#### 3.16.10.1 SBAS status data

Message	UBX-NAV2-SBAS SBAS status data					
Type	Periodic/pollled					
Comment	This message outputs the status of the SBAS sub system					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x29	0x32	12 + cnt·12	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.	
4	U1	geo	-	-	PRN Number of the GEO where correction and integrity data is used from	
5	U1	mode	-	-	SBAS Mode • 0 Disabled • 1 Enabled integrity • 3 Enabled test mode	

6	I1	sys	-	-	SBAS System (WAAS/EGNOS/...) <ul style="list-style-type: none"> <li>-1 Unknown</li> <li>0 WAAS</li> <li>1 EGNOS</li> <li>2 MSAS</li> <li>3 GAGAN</li> <li>16 GPS</li> </ul>
7	X1	service	-	-	SBAS Services available
	bit 0	U <sub>1</sub>	Ranging	-	GEO may be used as ranging source
	bit 1	U <sub>1</sub>	Corrections	-	GEO is providing correction data
	bit 2	U <sub>1</sub>	Integrity	-	GEO is providing integrity
	bit 3	U <sub>1</sub>	Testmode	-	GEO is in test mode
	bit 4	U <sub>1</sub>	Bad	-	Problem with signal or broadcast data indicated
8	U1	cnt	-	-	Number of SV data following
9	X1	statusFlags	-	-	SBAS status flags
	bits 1...0	U <sub>2</sub>	integrityUsed	-	SBAS integrity used <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Integrity information is not available or SBAS integrity is not enabled</li> <li>2 = Receiver uses only GPS satellites for which integrity information is available</li> </ul>
10	U1[2]	reserved0	-	-	Reserved
<i>Start of repeated group (cnt times)</i>					
12 + n·12	U1	svid	-	-	SV ID
13 + n·12	U1	reserved1	-	-	Reserved
14 + n·12	U1	udre	-	-	Monitoring status
15 + n·12	U1	svSys	-	-	System (WAAS/EGNOS/...) same as SYS
16 + n·12	U1	svService	-	-	Services available same as SERVICE
17 + n·12	U1	reserved2	-	-	Reserved
18 + n·12	I2	prc	-	cm	Pseudo Range correction in [cm]
20 + n·12	U1[2]	reserved3	-	-	Reserved
22 + n·12	I2	ic	-	cm	Ionosphere correction in [cm]
<i>End of repeated group (cnt times)</i>					

### 3.16.11 UBX-NAV2-SIG (0x29 0x43)

#### 3.16.11.1 Signal information

<b>Message</b>	UBX-NAV2-SIG
<b>Signal information</b>	
<b>Type</b>	Periodic/polled
<b>Comment</b>	This message displays information about signals currently tracked or searched by the receiver.

On the F9 platform the maximum number of signals is 120.

Message structure	Header	Class	ID	Length (Bytes)			Payload	Checksum
	0xb5	0x62	0x29	0x43	8 + numSigs·16		see below	CK_A CK_B
<i>Payload description:</i>								
Byte offset	Type	Name		Scale	Unit	Description		
0	U4	iTOW		-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.		
4	U1	version		-	-	Message version (0x00 for this version)		
5	U1	numSigs		-	-	Number of signals		
6	U1[2]	reserved0		-	-	Reserved		
<i>Start of repeated group (numSigs times)</i>								
8 + n·16	U1	gnssId		-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> ) for assignment		
9 + n·16	U1	svId		-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> ) for assignment		
10 + n·16	U1	sigId		-	-	New style signal identifier (see <a href="#">Signal Identifiers</a> )		
11 + n·16	U1	freqId		-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)		
12 + n·16	I2	prRes		0.1	m	Pseudorange residual		
14 + n·16	U1	cno		-	dBHz	Carrier-to-noise density ratio (signal strength)		
15 + n·16	U1	qualityInd		-	-	Signal quality indicator: <ul style="list-style-type: none"> <li>• 0 = no signal</li> <li>• 1 = searching signal</li> <li>• 2 = signal acquired</li> <li>• 3 = signal detected but unusable</li> <li>• 4 = code locked and time synchronized</li> <li>• 5, 6, 7 = code and carrier locked and time synchronized</li> </ul>		
16 + n·16	U1	corrSource		-	-	Correction source: <ul style="list-style-type: none"> <li>• 0 = no corrections</li> <li>• 1 = SBAS corrections</li> <li>• 2 = BeiDou corrections</li> <li>• 3 = RTCM2 corrections</li> <li>• 4 = RTCM3 OSR corrections</li> <li>• 5 = RTCM3 SSR corrections</li> <li>• 6 = QZSS SLAS corrections</li> <li>• 7 = SPARTN corrections</li> <li>• 8 = CLAS corrections</li> </ul>		
17 + n·16	U1	ionoModel		-	-	Ionospheric model used: <ul style="list-style-type: none"> <li>• 0 = no model</li> <li>• 1 = Klobuchar model transmitted by GPS</li> <li>• 2 = SBAS model</li> <li>• 3 = Klobuchar model transmitted by BeiDou</li> <li>• 8 = Iono delay derived from dual frequency observations</li> </ul>		
18 + n·16	X2	sigFlags		-	-	Signal related flags		
bits 1...0	U2	health		-	-	Signal health flag: <ul style="list-style-type: none"> <li>• 0 = unknown</li> <li>• 1 = healthy</li> </ul>		

					<ul style="list-style-type: none"> <li>• 2 = unhealthy</li> </ul>
bit 2	U <sub>1</sub>	prSmoothed	-	-	1 = Pseudorange has been smoothed
bit 3	U <sub>1</sub>	prUsed	-	-	1 = Pseudorange has been used for this signal
bit 4	U <sub>1</sub>	crUsed	-	-	1 = Carrier range has been used for this signal
bit 5	U <sub>1</sub>	doUsed	-	-	1 = Range rate (Doppler) has been used for this signal
bit 6	U <sub>1</sub>	prCorrUsed	-	-	1 = Pseudorange corrections have been used for this signal
bit 7	U <sub>1</sub>	crCorrUsed	-	-	1 = Carrier range corrections have been used for this signal
bit 8	U <sub>1</sub>	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for this signal
bit 9	U <sub>1</sub>	authStatus	-	-	<p>Authentication status of the navigation data used to compute the satellite's position in current navigation epoch. If the authentication fails, the navigation data is not used so the authentication status in this message can take only two values:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Authenticated</li> </ul> <p>Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message.</p>
20 + n·16	U1[4]	reserved1	-	-	Reserved
<i>End of repeated group (numSigs times)</i>					

### 3.16.12 UBX-NAV2-SLAS (0x29 0x42)

#### 3.16.12.1 QZSS L1S SLAS status data

Message	UBX-NAV2-SLAS				
Type	QZSS L1S SLAS status data				
Comment	This message outputs the status of the QZSS L1S SLAS sub system				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x29	0x42 20 + cnt·8	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.
4	U1	version	-	-	Message version (0x00 for this version)
5	U1[3]	reserved0	-	-	Reserved
8	I4	gmsLon	1e-3	deg	Longitude of the used ground monitoring station
12	I4	gmsLat	1e-3	deg	Latitude of the used ground monitoring station
16	U1	gmsCode	-	-	Code of the used ground monitoring station according to the QZSS SLAS Interface Specification, available from <a href="http://qzss.go.jp/en/">qzss.go.jp/en/</a>
17	U1	qzssSvId	-	-	Satellite identifier of the QZS/GEO whose correction data is used (see <a href="#">Satellite Numbering</a> )

18	X1	serviceFlags	-	-	Flags regarding SLAS service	
	bit 0	U <sub>1</sub>	gmsAvailable	-	-	1 = Ground monitoring station available
	bit 1	U <sub>1</sub>	qzssSv Available	-	-	1 = Correction providing QZSS SV available
	bit 2	U <sub>1</sub>	testMode	-	-	1 = Currently used QZSS SV in test mode
19	U1	cnt	-	-	Number of pseudorange corrections following	
<i>Start of repeated group (cnt times)</i>						
20 + n·8	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> )	
21 + n·8	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )	
22 + n·8	U1	reserved1	-	-	Reserved	
23 + n·8	U1[3]	reserved2	-	-	Reserved	
26 + n·8	I2	prc	-	cm	Pseudorange correction	
<i>End of repeated group (cnt times)</i>						

### 3.16.13 UBX-NAV2-STATUS (0x29 0x03)

#### 3.16.13.1 Receiver navigation status

Message	UBX-NAV2-STATUS				
Type	Receiver navigation status				
Comment	See important comments concerning the validity of the position given in section Navigation output filters in the Integration manual.				
Message structure	Header	Class	ID	Length (Bytes)	Payload Checksum
	0xb5 0x62	0x29	0x03	16	see below CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. For details, see section iTOW timestamps in the integration manual.
4	U1	gpsFix	-	-	GPSfix Type, this value does <b>not</b> qualify a fix as valid and within the limits. See note on flag gpsFixOk below. <ul style="list-style-type: none"> <li>• 0x00 = no fix</li> <li>• 0x01 = dead reckoning only</li> <li>• 0x02 = 2D-fix</li> <li>• 0x03 = 3D-fix</li> <li>• 0x04 = GPS + dead reckoning combined</li> <li>• 0x05 = Time only fix</li> <li>• 0x06..0xff = reserved</li> </ul>
5	X1	flags	-	-	Navigation Status Flags
	bit 0	U <sub>1</sub>	gpsFixOk	-	1 = position and velocity valid and within DOP and ACC Masks.
	bit 1	U <sub>1</sub>	diffSoln	-	1 = differential corrections were applied
	bit 2	U <sub>1</sub>	wknSet	-	1 = Week Number valid (for details, see section Time validity in the Integration manual)
	bit 3	U <sub>1</sub>	towSet	-	1 = Time of Week valid (for details, see section Time validity in the integration manual)

6	X1	fixStat	-	-	Fix Status Information
	bit 0	U <sub>1</sub>	diffCorr	-	1 = differential corrections available
	bit 1	U <sub>1</sub>	carrSolnValid	-	1 = valid carrSoln
	bits 7...6	U <sub>2</sub>	mapMatching	-	map matching status: • 00: none
7	X1	flags2	-	-	further information about navigation output
	bits 1...0	U <sub>2</sub>	psmState	-	power save mode state (not supported for protocol versions less than 13.01) • 0 = ACQUISITION [or when psm disabled] • 1 = TRACKING • 2 = POWER OPTIMIZED TRACKING • 3 = INACTIVE
	bits 4...3	U <sub>2</sub>	spoofDetState	-	Spoofing detection state (not supported for protocol versions less than 18.00) • 0: Unknown or deactivated • 1: No spoofing indicated • 2: Spoofing indicated • 3: Multiple spoofing indications  Note that the spoofing state value only reflects the detector state for the current navigation epoch. As spoofing can be detected most easily at the transition from real signal to spoofing signal, this is also where the detector is triggered the most. I.e. a value of 1 - <i>No spoofing indicated</i> does not mean that the receiver is not spoofed, it simply states that the detector was not triggered in this epoch.
	bits 7...6	U <sub>2</sub>	carrSoln	-	Carrier phase range solution status: • 0 = no carrier phase range solution • 1 = carrier phase range solution with floating ambiguities • 2 = carrier phase range solution with fixed ambiguities
8	U4	ttff	-	ms	Time to first fix (millisecond time tag)
12	U4	msss	-	ms	Milliseconds since startup / reset

### 3.16.14 UBX-NAV2-SVIN (0x29 0x3b)

#### 3.16.14.1 Survey-in data

Message	UBX-NAV2-SVIN				
Type	Survey-in data				
Comment	This message contains information about survey-in parameters.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x29	0x3b	40
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)

1	U1[3]	reserved0	-	-	Reserved
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.
8	U4	dur	-	s	Passed survey-in observation time
12	I4	meanX	-	cm	Current survey-in mean position ECEF X coordinate
16	I4	meanY	-	cm	Current survey-in mean position ECEF Y coordinate
20	I4	meanZ	-	cm	Current survey-in mean position ECEF Z coordinate
24	I1	meanXHP	-	0.1_mm	Current high-precision survey-in mean position ECEF X coordinate. Must be in the range -99..+99. The current survey-in mean position ECEF X coordinate, in units of cm, is given by $\text{meanX} + (0.01 * \text{meanXHP})$
25	I1	meanYHP	-	0.1_mm	Current high-precision survey-in mean position ECEF Y coordinate. Must be in the range -99..+99. The current survey-in mean position ECEF Y coordinate, in units of cm, is given by $\text{meanY} + (0.01 * \text{meanYHP})$
26	I1	meanZHP	-	0.1_mm	Current high-precision survey-in mean position ECEF Z coordinate. Must be in the range -99..+99. The current survey-in mean position ECEF Z coordinate, in units of cm, is given by $\text{meanZ} + (0.01 * \text{meanZHP})$
27	U1	reserved1	-	-	Reserved
28	U4	meanAcc	-	0.1_mm	Current survey-in mean position accuracy
32	U4	obs	-	-	Number of position observations used during survey-in
36	U1	valid	-	-	Survey-in position validity flag, 1 = valid, otherwise 0
37	U1	active	-	-	Survey-in in progress flag, 1 = in-progress, otherwise 0
38	U1[2]	reserved2	-	-	Reserved

### 3.16.15 UBX-NAV2-TIMEBDS (0x29 0x24)

#### 3.16.15.1 BeiDou time solution

Message	UBX-NAV2-TIMEBDS				
Type	BeiDou time solution				
Comment	This message reports the precise BDS time of the most recent navigation solution including validity flags and an accuracy estimate.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x29	0x24	20	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	SOW	-	s	BDS time of week (rounded to seconds)

8	I4	fSOW	-	ns	Fractional part of SOW (range: +/-500000000). The precise BDS time of week in seconds is: SOW + fSOW * 1e-9
12	I2	week	-	-	BDS week number of the navigation epoch
14	I1	leaps	-	s	BDS leap seconds (BDS-UTC)
15	X1	valid	-	-	Validity Flags
	bit 0	U <sub>1</sub> :1	sowValid	-	1 = Valid SOW and fSOW (see section Time validity in the integration manual for details)
	bit 1	U <sub>1</sub> :1	weekValid	-	1 = Valid week (see section Time validity in the integration manual for details)
	bit 2	U <sub>1</sub> :1	leapSValid	-	1 = Valid leap second
16	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.16.16 UBX-NAV2-TIMEGAL (0x29 0x25)

#### 3.16.16.1 Galileo time solution

Message	UBX-NAV2-TIMEGAL				
Type	Galileo time solution				
Type	Periodic/pollled				
Comment	This message reports the precise Galileo time of the most recent navigation solution including validity flags and an accuracy estimate.				
Message structure	Header      Class      ID      Length (Bytes)				Payload      Checksum
	0xb5 0x62	0x29	0x25	20	see below      CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	galTow	-	s	Galileo time of week (rounded to seconds)
8	I4	fGalTow	-	ns	Fractional part of the Galileo time of week (range: +/-500000000). The precise Galileo time of week in seconds is: galTow + fGalTow * 1e-9
12	I2	galWno	-	-	Galileo week number
14	I1	leaps	-	s	Galileo leap seconds (Galileo-UTC)
15	X1	valid	-	-	Validity Flags
	bit 0	U <sub>1</sub> :1	galTowValid	-	1 = Valid galTow and fGalTow (see section Time validity in the integration manual for details)
	bit 1	U <sub>1</sub> :1	galWnoValid	-	1 = Valid galWno (see section Time validity in the integration manual for details)
	bit 2	U <sub>1</sub> :1	leapSValid	-	1 = Valid leapS
16	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.16.17 UBX-NAV2-TIMEGLO (0x29 0x23)

### 3.16.17.1 GLONASS time solution

<b>Message</b>	UBX-NAV2-TIMEGLO				
	GLONASS time solution				
Type	Periodic/pollled				
Comment	This message reports the precise GLO time of the most recent navigation solution including validity flags and an accuracy estimate.				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	TOD	-	s	GLONASS time of day (rounded to integer seconds)
8	I4	fTOD	-	ns	Fractional part of TOD (range: +/-500000000). The precise GLONASS time of day in seconds is: TOD + fTOD * 1e-9
12	U2	Nt	-	days	Current date (range: 1-1461), starting at 1 from the 1st Jan of the year indicated by N4 and ending at 1461 at the 31st Dec of the third year after that indicated by N4
14	U1	N4	-	-	Four-year interval number starting from 1996 (1=1996, 2=2000, 3=2004...)
15	X1	valid	-	-	Validity flags
bit 0	U:1	todValid	-	-	1 = Valid TOD and fTOD (see section Time validity in the integration manual for details)
bit 1	U:1	dateValid	-	-	1 = Valid N4 and Nt (see section Time validity in the integration manual for details)
16	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.16.18 UBX-NAV2-TIMEGPS (0x29 0x20)

#### 3.16.18.1 GPS time solution

<b>Message</b>	UBX-NAV2-TIMEGPS				
	GPS time solution				
Type	Periodic/pollled				
Comment	This message reports the precise GPS time of the most recent navigation solution including validity flags and an accuracy estimate.				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	fTOW	-	ns	Fractional part of iTOW (range: +/-500000). The precise GPS time of week in seconds is: (iTOW * 1e-3) + (fTOW * 1e-9)

8	I2	week	-	-	GPS week number of the navigation epoch
10	I1	leaps	-	s	GPS leap seconds (GPS-UTC)
11	X1	valid	-	-	Validity Flags
	bit 0	U <sub>1</sub>	towValid	-	1 = Valid GPS time of week (iTOW & fTOW, (see section Time validity in the integration manual for details))
	bit 1	U <sub>1</sub>	weekValid	-	1 = Valid GPS week number (see section Time validity in the integration manual for details)
	bit 2	U <sub>1</sub>	leapSValid	-	1 = Valid GPS leap seconds
12	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.16.19 UBX-NAV2-TIMELS (0x29 0x26)

#### 3.16.19.1 Leap second event information

Message	UBX-NAV2-TIMELS				
Leap second event information					
Type	Periodic/pollled				
Comment	Information about the upcoming leap second event if one is scheduled.				
Message structure	Header	Class	ID	Length (Bytes)	Payload Checksum
	0xb5 0x62	0x29	0x26	24	see below CK_A CK_B
Payload description:					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	<p>GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.</p>
4	U1	version	-	-	Message version (0x00 for this version)
5	U1[3]	reserved0	-	-	Reserved
8	U1	srcOfCurrLs	-	-	<p>Information source for the current number of leap seconds.</p> <ul style="list-style-type: none"> <li>• 0 = Default (hardcoded in the firmware, can be outdated)</li> <li>• 1 = Derived from time difference between GPS and GLONASS time</li> <li>• 2 = GPS</li> <li>• 3 = SBAS</li> <li>• 4 = BeiDou</li> <li>• 5 = Galileo</li> <li>• 6 = Aided data</li> <li>• 7 = Configured</li> <li>• 8 = NavIC</li> <li>• 255 = Unknown</li> </ul>
9	I1	currLs	-	s	Current number of leap seconds since start of GPS time (Jan 6, 1980). It reflects how much GPS time is ahead of UTC time. Galileo number of leap seconds is the same as GPS. BeiDou number of leap seconds is 14 less than GPS. GLONASS follows UTC time, so no leap seconds.

10	U1	srcOfLsChange	-	-	Information source for the future leap second event. <ul style="list-style-type: none"> <li>• 0 = No source</li> <li>• 2 = GPS</li> <li>• 3 = SBAS</li> <li>• 4 = BeiDou</li> <li>• 5 = Galileo</li> <li>• 6 = GLONASS</li> <li>• 7 = NavIC</li> </ul>
11	I1	lsChange	-	s	Future leap second change if one is scheduled. +1 = positive leap second, -1 = negative leap second, 0 = no future leap second event scheduled or no information available. If the value is 0, then the amount of leap seconds did not change and the event should be ignored.
12	I4	timeToLsEvent	-	s	Number of seconds until the next leap second event, or from the last leap second event if no future event scheduled. If > 0 event is in the future, = 0 event is now, < 0 event is in the past. Valid only if validTimeToLsEvent = 1.
16	U2	dateOfLsGps Wn	-	-	GPS week number (WN) of the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1.
18	U2	dateOfLsGps Dn	-	-	GPS day of week number (DN) for the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1. (GPS and Galileo DN: from 1 = Sun to 7 = Sat. BeiDou DN: from 0 = Sun to 6 = Sat.)
20	U1[3]	reserved1	-	-	Reserved
23	X1	valid	-	-	Validity flags
bit 0	U <sub>1</sub>	validCurrLs	-	-	1 = Valid current number of leap seconds value.
bit 1	U <sub>1</sub>	validTimeToLs Event	-	-	1 = Valid time to next leap second event or from the last leap second event if no future event scheduled.

### 3.16.20 UBX-NAV2-TIMEQZSS (0x29 0x27)

#### 3.16.20.1 QZSS time solution

Message	UBX-NAV2-TIMEQZSS				
	QZSS time solution				
Type	Periodic/pollled				
Comment	This message reports the precise QZSS time of the most recent navigation solution including validity flags and an accuracy estimate.  See the Clocks and time section in the integration manual for details.				
Message structure	Header	Class	ID	Length (Bytes)	
	0xb5 0x62	0x29	0x27	20	
Payload description:					
Byte offset	Type	Name	Scale	Unit	
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch.
4	U4	qzssTow	-	s	QZSS time of week (rounded to seconds)

8	I4	fQzssTow	-	ns	Fractional part of QZSS time of week (range: +/-500000000). The precise QZSS time of week in seconds is: qzssTow + (fQzssTow * 1e-9)
12	I2	qzssWno	-	-	QZSS week number of the navigation epoch
14	I1	leaps	-	s	QZSS leap seconds (QZSS-UTC)
15	X1	valid	-	-	Validity Flags
bit 0	U <sub>1</sub>	qzssTowValid	-	-	1 = Valid QZSS time of week (qzssTow and fQzssTow)
bit 1	U <sub>1</sub>	qzssWnoValid	-	-	1 = Valid QZSS week number
bit 2	U <sub>1</sub>	leapSValid	-	-	1 = Valid QZSS leap seconds
16	U4	tAcc	-	ns	Time Accuracy Estimate

### 3.16.21 UBX-NAV2-TIMEUTC (0x29 0x21)

#### 3.16.21.1 UTC time solution

Message	UBX-NAV2-TIMEUTC				
Type	UTC time solution				
Comment	Note that during a leap second there may be more or less than 60 seconds in a minute. See the description of leap seconds in the integration manual for details.				
Message structure	Header 0xb5 0x62	Class 0x29	ID 0x21	Length (Bytes) 20	Payload see below CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	tAcc	-	ns	Time accuracy estimate (UTC)
8	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
12	U2	year	-	y	Year, range 1999..2099 (UTC)
14	U1	month	-	month	Month, range 1..12 (UTC)
15	U1	day	-	d	Day of month, range 1..31 (UTC)
16	U1	hour	-	h	Hour of day, range 0..23 (UTC)
17	U1	min	-	min	Minute of hour, range 0..59 (UTC)
18	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)
19	X1	valid	-	-	Validity Flags
bit 0	U <sub>1</sub>	validTOW	-	-	1 = Valid Time of Week (see section Time validity in the integration manual for details)
bit 1	U <sub>1</sub>	validWKN	-	-	1 = Valid Week Number (see section Time validity in the integration manual for details)
bit 2	U <sub>1</sub>	validUTC	-	-	1 = Valid UTC Time
bit 3	U <sub>1</sub>	authStatus	-	-	Indicates if the parameters used to convert GNSS time into UTC time have been authenticated. <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Authenticated</li> </ul>

Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message which means that data can only be authenticated for EU UTC standard.

bits 7...4	U <sub>4</sub>	utcStandard	-	-	UTC standard identifier. (Not supported for protocol versions less than 15.00)
					<ul style="list-style-type: none"> <li>• 0 = Information not available</li> <li>• 1 = Communications Research Laboratory (CRL), Tokyo, Japan</li> <li>• 2 = National Institute of Standards and Technology (NIST)</li> <li>• 3 = U.S. Naval Observatory (USNO)</li> <li>• 4 = International Bureau of Weights and Measures (BIPM)</li> <li>• 5 = European laboratories</li> <li>• 6 = Former Soviet Union (SU)</li> <li>• 7 = National Time Service Center (NTSC), China</li> <li>• 8 = National Physics Laboratory India (NPLI)</li> <li>• 15 = Unknown</li> </ul>

### 3.16.22 UBX-NAV2-VELECEF (0x29 0x11)

#### 3.16.22.1 Velocity solution in ECEF

Message	UBX-NAV2-VELECEF				
Type	Velocity solution in ECEF				
Type	Periodic/polled				
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.				
<i>Message structure</i>					
Message structure	Header 0xb5 0x62	Class 0x29	ID 0x11	Length (Bytes) 20	Payload <i>see below</i> Checksum CK_A CK_B
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	ecefVX	-	cm/s	ECEF X velocity
8	I4	ecefVY	-	cm/s	ECEF Y velocity
12	I4	ecefVZ	-	cm/s	ECEF Z velocity
16	U4	sACC	-	cm/s	Speed accuracy estimate

### 3.16.23 UBX-NAV2-VELNED (0x29 0x12)

#### 3.16.23.1 Velocity solution in NED frame

Message	UBX-NAV2-VELNED				
Type	Velocity solution in NED frame				
Type	Periodic/polled				

<i>Comment</i>	See important comments concerning validity of position given in section Navigation output filters in the integration manual.				
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5	0x62	0x29	0x12	36 <i>see below</i>
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	velN	-	cm/s	North velocity component
8	I4	velE	-	cm/s	East velocity component
12	I4	velD	-	cm/s	Down velocity component
16	U4	speed	-	cm/s	Speed (3-D)
20	U4	gSpeed	-	cm/s	Ground speed (2-D)
24	I4	heading	1e-5	deg	Heading of motion 2-D
28	U4	sAcc	-	cm/s	Speed accuracy Estimate
32	U4	cAcc	1e-5	deg	Course / Heading accuracy estimate

## 3.17 UBX-RXM (0x02)

The messages in the UBX-RXM class are used to output status and result data from the receiver manager as well as sending commands to the receiver manager.

### 3.17.1 UBX-RXM-COR (0x02 0x34)

#### 3.17.1.1 Differential correction input status

<i>Message</i>	UBX-RXM-COR				
	Differential correction input status				
<i>Type</i>	Output				
<i>Comment</i>	This message shows information on received differential correction input messages. It is output upon successful parsing of a differential correction input message, irrespective of whether the parsed message is supported/used by the receiver.				
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5	0x62	0x02	0x34	12 <i>see below</i>
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U1	version	-	-	Message version (0x01 for this version)
1	U1	ebno	2^-3	dB	Energy per bit to noise power spectral density ratio (Eb/N0). 0: unknown. Reported only for protocol UBX-RXM-PMP (SPARTN) to monitor signal quality.
2	U1	reserved0	-	-	Reserved
3	U1	reserved1	-	-	Reserved
4	X4	statusInfo	-	-	Message input status information
bits 4...0	U5	protocol	-	-	Input correction data protocol: <ul style="list-style-type: none"><li>• 0: Unknown</li><li>• 1: RTCM3</li></ul>

					<ul style="list-style-type: none"> <li>• 2: SPARTN (Secure Position Augmentation for Real Time Navigation)</li> <li>• 29: UBX-RXM-PMP (SPARTN)</li> <li>• 30: UBX-RXM-QZSSL6</li> </ul>
bits 6...5	U;2	errStatus	-	-	Error status of the received correction message content based on possibly available error codes or checksums: <ul style="list-style-type: none"> <li>• 0: Unknown</li> <li>• 1: Error-free</li> <li>• 2: Erroneous</li> </ul>
bits 8...7	U;2	msgUsed	-	-	Status of receiver using the input message: <ul style="list-style-type: none"> <li>• 0: Unknown</li> <li>• 1: Not used</li> <li>• 2: Used</li> </ul>
bits 24...9	U;16	correctionId	-	-	Identifier for the correction stream: <ul style="list-style-type: none"> <li>• For RTCM 3: Reference station ID (DF003) of the received RTCM input message. Valid range 0-4095. Reported only for the standard RTCM messages that include the DF003 field and for the u-blox proprietary RTCM messages 4072.x. For all other messages, reports 0xFFFF.</li> <li>• For other correction protocols 0xFFFF.</li> </ul>
bit 25	U;1	msgTypeValid	-	-	Validity of the msgType field. Set to False e.g. if the protocol does not define msgType.
bit 26	U;1	msgSubType Valid	-	-	Validity of the msgSubType field. Set to False e.g. if the protocol does not define subtype for the msgType.
bit 27	U;1	msgInputHandle	-	-	Input handling support of the input message: <ul style="list-style-type: none"> <li>• 0: Receiver does not have input handling support for this message</li> <li>• 1: Receiver has input handling support for this message. Input handling support does not necessarily mean that message is supported/ used by the receiver.</li> </ul>
bits 29...28	U;2	msgEncrypted	-	-	Encryption status of the input message: <ul style="list-style-type: none"> <li>• 0: Unknown</li> <li>• 1: Not encrypted</li> <li>• 2: Encrypted</li> </ul>
bits 31...30	U;2	msgDecrypted	-	-	Decryption status of the input message: <ul style="list-style-type: none"> <li>• 0: Unknown</li> <li>• 1: Not decrypted</li> <li>• 2: Decrypted</li> </ul>
8	U2	msgType	-	-	Message type
10	U2	msgSubType	-	-	Message subtype

### **3.17.2 UBX-RXM-MEASX (0x02 0x14)**

### 3.17.2.1 Satellite measurements for RRLP

Message	UBX-RXM-MEASX					
Type	Satellite measurements for RRLP					
Comment	<p>The message payload data is, where possible and appropriate, according to the Radio Resource LCS (Location Services) Protocol (RRLP) [1]. One exception is the satellite and GNSS IDs, which here are given according to the <a href="#">Satellite Numbering</a> scheme. The correct satellites have to be selected and their satellite ID translated accordingly [1, tab. A.10.14] for use in a RRLP Measure Position Response Component. Similarly, the measurement reference time of week has to be forwarded correctly (modulo 14400000 for the 24 LSB GPS measurements variant, modulo 3600000 for the 22 LSB Galileo and Additional Navigation Satellite Systems (GNSS) measurements variant) of the RRLP measure position response to the SMLC.</p> <p>Reference: [1] ETSI TS 144 031 V11.0.0 (2012-10), Digital cellular telecommunications system (Phase 2+), Location Services (LCS), Mobile Station (MS) - Serving Mobile Location Centre (SMLC), Radio Resource LCS Protocol (RRLP), (3GPP TS 44.031 version 11.0.0 Release 11).</p>					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x02	0x14	44 + numSV·24	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version, currently 0x01	
1	U1[3]	reserved0	-	-	<a href="#">Reserved</a>	
4	U4	gpstOW	-	ms	GPS measurement reference time	
8	U4	glotOW	-	ms	GLONASS measurement reference time	
12	U4	bdsTOW	-	ms	BeiDou measurement reference time	
16	U1[4]	reserved1	-	-	<a href="#">Reserved</a>	
20	U4	qzsstOW	-	ms	QZSS measurement reference time	
24	U2	gpstOWacc	2^-4	ms	GPS measurement reference time accuracy (0xffff = > 4s)	
26	U2	glotOWacc	2^-4	ms	GLONASS measurement reference time accuracy (0xffff = > 4s)	
28	U2	bdsTOWacc	2^-4	ms	BeiDou measurement reference time accuracy (0xffff = > 4s)	
30	U1[2]	reserved2	-	-	<a href="#">Reserved</a>	
32	U2	qzsstOWacc	2^-4	ms	QZSS measurement reference time accuracy (0xffff = > 4s)	
34	U1	numSV	-	-	Number of satellites in repeated block	
35	U1	flags	-	-	Flags	
bits 1...0	U2	towSet	-	-	TOW set (0 = no, 1 or 2 = yes)	
36	U1[8]	reserved3	-	-	<a href="#">Reserved</a>	
<i>Start of repeated group (numSV times)</i>						
44 + n·24	U1	gnssId	-	-	GNSS ID (see <a href="#">Satellite Numbering</a> )	
45 + n·24	U1	svId	-	-	Satellite ID (see <a href="#">Satellite Numbering</a> )	
46 + n·24	U1	cNo	-	-	carrier noise ratio (0..63)	
47 + n·24	U1	mpathIndic	-	-	multipath index (according to [1]) (0 = not measured, 1 = low, 2 = medium, 3 = high)	
48 + n·24	I4	dopplerMS	0.04	m/s	Doppler measurement	
52 + n·24	I4	dopplerHz	0.2	Hz	Doppler measurement	

56 + n·24	U2	wholeChips	-	-	whole value of the code phase measurement (0..1022 for GPS)
58 + n·24	U2	fracChips	-	-	fractional value of the code phase measurement (0..1023)
60 + n·24	U4	codePhase	2^-21	ms	Code phase
64 + n·24	U1	intCodePhase	-	ms	Integer (part of the) code phase
65 + n·24	U1	pseuRangeRMS Err	-	-	pseudorange RMS error index (according to [1]) (0..63)
66 + n·24	U1[2]	reserved4	-	-	Reserved

*End of repeated group (numSV times)*

### 3.17.3 UBX-RXM-PMP (0x02 0x72)

#### 3.17.3.1 PMP (LBAND) message

Message	UBX-RXM-PMP				Payload	Checksum
Type	PMP (LBAND) message				see below	CK_A CK_B
<i>Comment</i>	Point to Multipoint (LBAND) input message					
<i>Message structure</i>	Header	Class	ID	Length (Bytes)		
	0xb5 0x62	0x02	0x72	24 + [0..n]		
<i>Payload description:</i>						
<i>Byte offset</i>	Type	Name	Scale	Unit	<i>Description</i>	
0	U1	version	-	-	Message version (0x01 for this version)	
1	U1	reserved0	-	-	Reserved	
2	U2	numBytesUserData	-	-	Number of bytes the userData block has in this frame (0...504)	
4	U4	timeTag	-	ms	Time since startup when frame started - if max value of type is reached the counter will be reset	
8	U4[2]	uniqueWord	-	-	Received unique words	
16	U2	serviceIdentifier	-	-	Received service identifier	
18	U1	spare	-	-	Received spare data	
19	U1	uniqueWordBitErrors	-	-	Number of bit errors in both unique words	
20	U2	fecBits	-	-	Number of bits corrected by FEC (forward error correction)	
22	U1	ebno	2^-3	dB	Energy per bit to noise power spectral density ratio	
23	U1	reserved1	-	-	Reserved	
<i>Start of repeated group (N times)</i>						
24 + n	U1	userData	-	-	Received user data, which is variable (=numBytesUserData)	
<i>End of repeated group (N times)</i>						

### 3.17.4 UBX-RXM-PMREQ (0x02 0x41)

### 3.17.4.1 Power management request

Message	UBX-RXM-PMREQ Power management request				
Type	Command				
Comment	This message requests a power management related task of the receiver.				
<b>Message structure</b>					
	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x02	0x41	8	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	duration	-	ms	Duration of the requested task. The maximum supported value is 12 days. Set to 0 to wait for a wakeup signal on a pin
4	X4	flags	-	-	task flags
	bit 1	U:1 backup	-	-	The receiver goes into backup mode for a time period defined by duration, provided that it is not connected to USB

### 3.17.4.2 Power management request

Message	UBX-RXM-PMREQ Power management request				
Type	Command				
Comment	This message requests a power management related task of the receiver.				
<b>Message structure</b>					
	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x02	0x41	16	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1[3]	reserved0	-	-	Reserved
4	U4	duration	-	ms	Duration of the requested task. The maximum supported value is 12 days. Set to 0 to wait for a wakeup signal on a pin
8	X4	flags	-	-	task flags
	bit 1	U:1 backup	-	-	The receiver goes into backup mode for a time period defined by duration, provided that it is not connected to USB
	bit 2	U:1 force	-	-	Force receiver backup while USB is connected. USB interface will be disabled.
12	X4	wakeupSources	-	-	Configure pins to wake up the receiver. The receiver wakes up if there is either a falling or a rising edge on one of the configured pins.
	bit 3	U:1 uartrx	-	-	Wake up the receiver if there is an edge on the UART RX pin
	bit 5	U:1 extint0	-	-	Wake up the receiver if there is an edge on the EXTINT0 pin
	bit 6	U:1 extint1	-	-	Wake up the receiver if there is an edge on the EXTINT1 pin

bit 7	U <sub>1</sub>	spics	-	-	Wake up the receiver if there is an edge on the SPI CS pin
-------	----------------	-------	---	---	--

### 3.17.5 UBX-RXM-QZSSL6 (0x02 0x73)

#### 3.17.5.1 QZSS L6 message

Message	UBX-RXM-QZSSL6 QZSS L6 message					
Type	Input					
Comment	QZSS L6 message input, as defined in 'Quasi Zenith Satellite System Interface Specification Centimeter Level Augmentation Service (IS-QZSS-L6-001)'.					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x02	0x73	264	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x01 for this version)	
1	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )	
2	U2	cno	2 <sup>-8</sup>	dBHz	Mean C/N0	
4	U4	timeTag	-	ms	Local time tag corresponding to the beginning of a received QZSS L6 message	
8	U1	groupDelay	-	ns	L6 group delay w.r.t. L2 on channel	
9	U1	bitErrCorr	-	-	Number of bit errors corrected by Reed-Solomon decoder	
10	X2	chInfo	-	-	Information about receiver channel associated with a received QZSS L6 message	
bits 9...8	U <sub>2</sub>	chn	-	-	Receiver channel (0, 1)	
bit 10	U <sub>1</sub>	msgName	-	-	Message name, 0=L6D, 1=L6E	
bits 13...12	U <sub>2</sub>	errStatus	-	-	Error status of the received QZSS L6 message: 0=unknown, 1=error-free, 2=erroneous	
bits 15...14	U <sub>2</sub>	chName	-	-	Channel name, 0=channel A, 1=channel B	
12	U1[2]	reserved0	-	-	<a href="#">Reserved</a>	
14	U1[250]	msgBytes	-	-	Bytes in a QZSS L6 message	

### 3.17.6 UBX-RXM-RAWX (0x02 0x15)

#### 3.17.6.1 Multi-GNSS raw measurements

Message	UBX-RXM-RAWX Multi-GNSS raw measurements			
Type	Periodic/polled			
Comment	This message contains the information needed to be able to generate a RINEX 3 multi-GNSS observation file (see <a href="http://ftp.igs.org/pub/data/format/">ftp://ftp.igs.org/pub/data/format/</a> ).  This message contains pseudorange, Doppler, carrier phase, phase lock and signal quality information for GNSS satellites once signals have been synchronized. This message supports all active GNSS.  The only difference between this version of the message and the previous version ( <b>UBX-RXM-RAWX-DATA0</b> ) is the addition of the version field.			

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x02	0x15	16 + numMeas·32	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name		Scale	Unit	Description
0	R8	rcvTow		-	s	Measurement time of week in receiver local time approximately aligned to the GPS time system.  The receiver local time of week, week number and leap second information can be used to translate the time to other time systems. More information about the difference in time systems can be found in the RINEX 3 format documentation. For a receiver operating in GLONASS only mode, UTC time can be determined by subtracting the leapS field from GPS time regardless of whether the GPS leap seconds are valid.
8	U2	week		-	weeks	GPS week number in receiver local time.
10	I1	leapS		-	s	GPS leap seconds (GPS-UTC). This field represents the receiver's best knowledge of the leap seconds offset. A flag is given in the recStat bitfield to indicate if the leap seconds are known.
11	U1	numMeas		-	-	Number of measurements to follow
12	X1	recStat		-	-	Receiver tracking status bitfield
bit 0	U <sub>1</sub>	leapSec		-	-	Leap seconds have been determined
bit 1	U <sub>1</sub>	clkReset		-	-	Clock reset applied. Typically the receiver clock is changed in increments of integer milliseconds.
13	U1	version		-	-	Message version (0x01 for this version)
14	U1[2]	reserved0		-	-	Reserved
<i>Start of repeated group (numMeas times)</i>						
16 + n·32	R8	prMes		-	m	Pseudorange measurement [m]. GLONASS inter frequency channel delays are compensated with an internal calibration table.
24 + n·32	R8	cpMes		-	cycles	Carrier phase measurement [cycles]. The carrier phase initial ambiguity is initialized using an approximate value to make the magnitude of the phase close to the pseudorange measurement. Clock resets are applied to both phase and code measurements in accordance with the RINEX specification.
32 + n·32	R4	doMes		-	Hz	Doppler measurement (positive sign for approaching satellites) [Hz]
36 + n·32	U1	gnssId		-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> for a list of identifiers)
37 + n·32	U1	svId		-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )
38 + n·32	U1	sigId		-	-	New style signal identifier (see <a href="#">Signal Identifiers</a> ). (not supported for protocol versions less than 27.00)
39 + n·32	U1	freqId		-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
40 + n·32	U2	locktime		-	ms	Carrier phase locktime counter (maximum 64500ms)
42 + n·32	U1	cno		-	dBHz	Carrier-to-noise density ratio (signal strength) [dB-Hz]
43 + n·32	X1	prStdev		0.01*2^n	m	Estimated pseudorange measurement standard deviation

bits 3...0	U <sub>4</sub>	prStd	-	-	Estimated pseudorange standard deviation
44 + n·32	X1	cpStdev	0.004	cycles	Estimated carrier phase measurement standard deviation (note a raw value of 0x0F indicates the value is invalid)
bits 3...0	U <sub>4</sub>	cpStd	-	-	Estimated carrier phase standard deviation
45 + n·32	X1	doStdev	0.002*2 <sup>n</sup> Hz		Estimated Doppler measurement standard deviation.
bits 3...0	U <sub>4</sub>	doStd	-	-	Estimated Doppler standard deviation
46 + n·32	X1	trkStat	-	-	Tracking status bitfield
bit 0	U <sub>1</sub>	prValid	-	-	Pseudorange valid
bit 1	U <sub>1</sub>	cpValid	-	-	Carrier phase valid
bit 2	U <sub>1</sub>	halfCyc	-	-	Half cycle valid
bit 3	U <sub>1</sub>	subHalfCyc	-	-	Half cycle subtracted from phase
47 + n·32	U1	reserved1	-	-	Reserved

*End of repeated group (numMeas times)*

### 3.17.7 UBX-RXM-RLM (0x02 0x59)

#### 3.17.7.1 Galileo SAR short-RLM report

Message	UBX-RXM-RLM Galileo SAR short-RLM report				
Type	Output				
Comment	This message contains the contents of any Galileo Search and Rescue (SAR) Short Return Link Message detected by the receiver.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x02	0x59	16	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	type	-	-	Message type (0x01 for Short-RLM)
2	U1	svId	-	-	Identifier of transmitting satellite (see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	Reserved
4	U1[8]	beacon	-	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.
12	U1	message	-	-	Message code (4 bits)
13	U1[2]	params	-	-	Parameters (16 bits), with bytes ordered by earliest transmitted (most significant) first.
15	U1	reserved1	-	-	Reserved

#### 3.17.7.2 Galileo SAR long-RLM report

Message	UBX-RXM-RLM Galileo SAR long-RLM report				
Type	Output				

<b>Comment</b>	This message contains the contents of any Galileo Search and Rescue (SAR) Long Return Link Message detected by the receiver.				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5	0x62	0x02	0x59	28
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	type	-	-	Message type (0x02 for Long-RLM)
2	U1	svId	-	-	Identifier of transmitting satellite (see <a href="#">Satellite Numbering</a> )
3	U1	reserved0	-	-	Reserved
4	U1[8]	beacon	-	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.
12	U1	message	-	-	Message code (4 bits)
13	U1[12]	params	-	-	Parameters (96 bits), with bytes ordered by earliest transmitted (most significant) first.
25	U1[3]	reserved1	-	-	Reserved

### 3.17.8 UBX-RXM-RTCM (0x02 0x32)

#### 3.17.8.1 RTCM input status

<b>Message</b>	UBX-RXM-RTCM RTCM input status				
<b>Type</b>	Output				
<b>Comment</b>	This message shows info on a received RTCM input message. It is output upon successful parsing of an RTCM input message, irrespective of whether the RTCM message is supported or not by the receiver.				
<b>Message structure</b>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>
	0xb5	0x62	0x02	0x32	8
<i>Payload description:</i>					
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>
0	U1	version	-	-	Message version (0x02 for this version)
1	X1	flags	-	-	RTCM input status flags
bit 0	U <sub>1</sub>	crcFailed	-	-	0 when RTCM message received and passed CRC check, 1 when failed, in which case refStation and msgType might be corrupted and misleading
bits 2...1	U <sub>2</sub>	msgUsed	-	-	2 = RTCM message used successfully by the receiver, 1 = not used, 0 = do not know
2	U2	subType	-	-	Message subtype, only applicable to u-blox proprietary RTCM message 4072 (not available on all products)
4	U2	refStation	-	-	Reference station ID: <ul style="list-style-type: none"><li>• For RTCM 2.3: Reference station ID of the received RTCM 2 input message. Valid range 0-1023.</li><li>• For RTCM 3.3: Reference station ID (DF003) of the received RTCM input message. Valid range 0-4095. Reported only for the standard RTCM messages that include the DF003 field and for the u-blox proprietary RTCM messages 4072.x. For all other messages, reports 0xFFFF.</li></ul>

6	U2	msgType	-	-	Message type
---	----	---------	---	---	--------------

### 3.17.9 UBX-RXM-SFRBX (0x02 0x13)

#### 3.17.9.1 Broadcast navigation data subframe

Message	UBX-RXM-SFRBX Broadcast navigation data subframe				
Type	Output				
Comment	This message reports a complete subframe of broadcast navigation data decoded from a single signal. The number of data words reported in each message depends on the nature of the signal.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x02	0x13	8 + numWords·4	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	gnssId	-	-	GNSS identifier (see <a href="#">Satellite Numbering</a> )
1	U1	svId	-	-	Satellite identifier (see <a href="#">Satellite Numbering</a> )
2	U1	sigId	-	-	Signal identifier (see <a href="#">Signal Identifiers</a> )
3	U1	freqId	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
4	U1	numWords	-	-	The number of data words contained in this message (up to 16, for currently supported signals)
5	U1	chn	-	-	The tracking channel number the message was received on
6	U1	version	-	-	Message version, (0x02 for this version)
7	U1	reserved0	-	-	<a href="#">Reserved</a>
<i>Start of repeated group (numWords times)</i>					
8 + n·4	U4	dwrd	-	-	The data words
<i>End of repeated group (numWords times)</i>					

### 3.17.10 UBX-RXM-SPARTN (0x02 0x33)

#### 3.17.10.1 SPARTN input status

Message	UBX-RXM-SPARTN SPARTN input status				
Type	Output				
Comment	This message shows info on a received SPARTN input message. It is output upon successful parsing of a SPARTN input message, irrespective of whether the SPARTN message is supported or not by the receiver.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x02	0x33	8	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x01 for this version)
1	X1	flags	-	-	SPARTN input status flags
bits 2...1	U2	msgUsed	-	-	2 = SPARTN message used successfully by the receiver, 1 = not used, 0 = do not know
2	U2	subType	-	-	Message subtype

4	U1[2]	reserved0	-	-	Reserved
6	U2	msgType	-	-	Message type

### 3.17.11 UBX-RXM-SPARTNKEY (0x02 0x36)

#### 3.17.11.1 Poll installed keys

<b>Message</b>	UBX-RXM-SPARTNKEY				
<b>Poll installed keys</b>					
<b>Type</b>	Poll request				
<b>Comment</b>	Depending on the number of active keys, the receiver shall send a UBX-RXM-SPARTNKEY message describing the keys. If there are no active keys then a UBX-RXM-SPARTNKEY shall be sent, with field numKeys set to zero.				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	
	0xb5	0x62	0x02	0x36	0
<b>Payload</b>	This message has no payload.				
					<i>see below</i>
					CK_A CK_B

#### 3.17.11.2 Transfer dynamic SPARTN keys

<b>Message</b>	UBX-RXM-SPARTNKEY				
<b>Transfer dynamic SPARTN keys</b>					
<b>Type</b>	Input/output				
<b>Comment</b>	This message is used to load keys to the receiver. The receiver has provision to store up to two (2) keys. By definition, the one currently used is named 'current' and the one that shall be used as soon as 'current' expires is named 'next'. Depending on how many active keys the receiver has at the time of receiving the message, one of the following shall occur:				
	<ul style="list-style-type: none"> <li>If the receiver has no active keys, then the first key transferred shall become 'current'. If the message contains a second key, this shall become 'next'.</li> <li>If the receiver has one (1) active key (current), the transferred key shall be stored as 'current'. If the message contains a second key, that key shall be stored as 'next'.</li> <li>If the receiver has two (2) active keys (current and next), the transferred key(s) shall be stored as 'current' and 'next'.</li> </ul>				
	To query the receiver's keys state (including the keys themselves), send a UBX-RXM-SPARTNKEY poll request.				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	
	0xb5	0x62	0x02	0x36	4 + numKeys·8 + [0..n]
				<i>see below</i>	
<b>Payload description:</b>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	U1	version	-	-	Message version (0x01 for this version)
1	U1	numKeys	-	-	Number of keys the message contains (can be 0, 1 or 2). In case of 0 the remaining fields will not be transmitted.
2	U1[2]	reserved0	-	-	Reserved
<b>Start of repeated group (numKeys times)</b>					
4 + n·8	U1	reserved1	-	-	Reserved
5 + n·8	U1	keyLengthBytes	-	-	Key length in bytes
6 + n·8	U2	validFromWno	-	week	GPS week number the key is valid from
8 + n·8	U4	validFromTow	-	sec	GPS time of week the key is valid from
<b>End of repeated group (numKeys times)</b>					
<b>Start of repeated group (N times)</b>					

4 + numKeys·8 + n	U1	key	-	-	Key(s) payload. This is a concatenation of all keys as raw bytes. The number of keys is defined in 'numKeys' field. Each key length is defined in its 'keyLengthBytes' field.
-------------------	----	-----	---	---	---

*End of repeated group (N times)*

## 3.18 UBX-SEC (0x27)

The messages in the UBX-SEC class are used for security features of the receiver.

### 3.18.1 UBX-SEC-OSNMA (0x27 0x0a)

#### 3.18.1.1 Galileo Open Service Navigation Message Authentication (OSNMA) security information

Message	UBX-SEC-OSNMA					
Type	Galileo Open Service Navigation Message Authentication (OSNMA) security information					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x27	0x0a	24 + authSVs·4	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x02 for this version)	
1	X1	nmaHeader	-	-	NMA header (status of the OSNMA service: NMA status, chain in force and CPKS)	
bit 0	U <sub>1</sub>	headerAuth	-	-	Indicates if the NMA header has been authenticated.	
bits 2...1	U <sub>2</sub>	Status	-	-	Indicates if the NMA header has been authenticated.	
bits 2...1	U <sub>2</sub>	nmaStatus	-	-	Status of OSNMA service (as indicated by the Galileo system)	
					<ul style="list-style-type: none"> <li>• 0: Service status not authenticated yet</li> <li>• 1: OSNMA service in test</li> <li>• 2: OSNMA service operational</li> <li>• 3: OSNMA service invalid, service not usable</li> </ul>	
bits 4...3	U <sub>2</sub>	chainInForce	-	-	Id of the TESLA chain in force	
bits 7...5	U <sub>3</sub>	CPKS	-	-	TESLA chain and public key status	
					<ul style="list-style-type: none"> <li>• 0: Data is not applicable</li> <li>• 1: Nominal</li> <li>• 2: End of Chain (EOC), new DSM-KROOT is being transmitted</li> <li>• 3: Chain revoked (CREV), a chain is or has been revoked</li> <li>• 4: New public key (NPK), the public key in force is being renewed</li> <li>• 5: Public key revocation (PKREV), the public key is or has been revoked</li> </ul>	

- 6: New Merkle tree (NMT), the Merkle tree is being renewed
- 7: Alert message (AM), OSNMA cryptographic data has been dropped. Connect to the GSC OSNMA server

2	X1	osnmaMonitoring	-	-	Monitoring information on OSNMA service as observed by the receiver
	bit 0	U <sub>1</sub>	osnmaEnabled	-	Flag that indicates whether OSNMA execution is enabled in the receiver
	bits 5...1	U <sub>5</sub>	numberSVs	-	Number of SVs from which OSNMA data is being collected
	bits 7...6	U <sub>2</sub>	nmaHeader Update	-	<p>New unauthenticated NMA header (NMA status, chain in force and CPKS) observed in the signal. Changes are pending on authentication. The authentication of the MAC and TESLA keys is discontinued until the new header has been authenticated</p> <ul style="list-style-type: none"> <li>• 0: Last observed NMA header is the same as the last authenticated header</li> <li>• 1: New observed NMA header pending on authentication: Update still indicates a healthy service</li> <li>• 2: New observed NMA header pending on authentication: Update indicates a problem in the service provision</li> </ul>
3	X1	timSyncReq	-	-	Information related to OSNMA Time Synchronization requirement status
	bit 0	U <sub>1</sub>	timSyncEnabled	-	Flag that indicates if OSNMA must be executed applying the Time Synchronization requirement
	bits 3...1	U <sub>3</sub>	timSyncStatus	-	<p>Indicates if the time synchronization check has been applied.</p> <ul style="list-style-type: none"> <li>• 0: Time synchronization is not performed. Default to outside authentication epochs or when time synchronization is not requested</li> <li>• 1: Time synchronization could not be performed, trusted time is not available</li> <li>• 2: Time synchronization could not be performed, the trusted time is not accurate enough</li> <li>• 3: Time synchronization check passed</li> <li>• 4: Time synchronization check failed, replay attack</li> </ul>
4	I4	timSyncReq Diff	-	ms	<p>Time difference from the Time Synchronization requirement.</p> <p>The time difference between the trusted input time and the decoded GST propagated to the current local time from the subframe that contains the TESLA key to be authenticated. Note that the time synchronization status must pass or fail (timSyncReq = 3/4). Otherwise, the the time difference cannot be computed</p>

8	U1[4]	reserved0	-	-	Reserved
12	X4	dsm Authentication	-	-	Information related to the DSM authentication
bits 5...0	U <sub>6</sub>	dsm Authentication Status	-	-	<p>Indicates if the authentication of a Digital Signature Message has been performed</p> <ul style="list-style-type: none"> <li>• 0: No DSM authentication</li> <li>• 1: DSM-KROOT authenticated, new status and configuration accepted</li> <li>• 2: DSM-PKR authenticated, new public key accepted</li> <li>• 3: OSNMA Alert message: All cryptographic data is dropped. Connect to GSC OSNMA server</li> <li>• 4: DSM-KROOT authentication failed, new status and configuration is not accepted</li> <li>• 5: DSM-PKR authentication failed, new public key is not accepted</li> <li>• 6: Authentication not performed: DSM coded with unknown public key</li> <li>• 7: Authentication not performed: Public key decompression failed</li> <li>• 8: Authentication successful but new configuration is not supported</li> <li>• 9: Authentication of a new public key during a NMT event cannot be performed. Missing future Merkle tree root</li> </ul>
bits 7...6	U <sub>2</sub>	hashFunction	-	-	Last authenticated hash function that must be used
bits 9...8	U <sub>2</sub>	macFunction	-	-	Last authenticated MAC function that must be used
bits 13...10	U <sub>4</sub>	pubKeyId	-	-	Last authenticated public key Id that must be used in ECDSA verification
bits 21...14	U <sub>8</sub>	macLookupTable	-	-	Last authenticated MAC Lookup table index
bits 25...22	U <sub>4</sub>	keySize	-	-	Last authenticated TESLA key size index
bits 29...26	U <sub>4</sub>	macSize	-	-	Last authenticated MAC size index
bit 30	U <sub>1</sub>	fromNVS	-	-	Last authenticated configuration comes from NVS
16	X4	teslaKey	-	-	Information related to the TESLA key authentication
bits 2...0	U <sub>3</sub>	teslaKeyAuth Status	-	-	<p>Indicates if the authentication of an element of the TESLA key has been performed and the result thereof</p> <ul style="list-style-type: none"> <li>• 0: No TESLA key authentication performed</li> <li>• 1: TESLA key successfully authenticated against the root key</li> <li>• 2: TESLA key authentication against the root key has failed</li> <li>• 3: TESLA key authentication on-going: Intermediate authentication step</li> </ul>

					<ul style="list-style-type: none"> <li>• 4: TESLA key authentication is not performed: Key to authenticate is in the past. Potential replayed signals or simulation.</li> </ul>
bits 14...3	U <sub>12</sub>	wnSf	-	-	The GST week number of the subframe in which the public key has been transmitted
bits 29...15	U <sub>15</sub>	towSf	-	-	Seconds of week of the GST of the subframe in which the public key has been transmitted divided by 30s (subframe length)
bits 31...30	U <sub>2</sub>	chainId	-	-	Chain Id of the TESLA key that has been authenticated
20	X4	generalAnd Timing	-	-	Information related to the overall authentication process: Timing parameters and summary of data authenticated
bits 5...0	U <sub>6</sub>	authSVs	-	-	Total number of SVs for which orbit/clocks data authentication has been performed (ADKD types 0 or 12)
bits 11...6	U <sub>6</sub>	authNumTim	-	-	Total number of timing parameters authentications (typically one per SV sending MAC ADKD type 4)
bits 13...12	U <sub>2</sub>	timingAuth Result	-	-	<p>Indicates if the authentication of the timing parameters (GST-UTC and GST-GPS) has been performed and the result</p> <ul style="list-style-type: none"> <li>• 0: No timing parameters authentication performed</li> <li>• 1: Timing parameters successfully authenticated</li> <li>• 2: Timing parameters authentication failed</li> </ul>
bit 14	U <sub>1</sub>	macAdkdType	-	-	<p>Indicates if the receiver processes fast (1 subframe delay) or slow (10 subframes delay) MACs</p> <ul style="list-style-type: none"> <li>• 0: Fast MACs (ADKD type 0)</li> <li>• 1: Slow MACs (ADKD type 12)</li> </ul>
bits 16...15	U <sub>2</sub>	pubKeySrc	-	-	<p>Origin of the public key</p> <ul style="list-style-type: none"> <li>• 0: Factory default</li> <li>• 1: From satellites</li> <li>• 2: From aided message</li> <li>• 3: From NVS</li> </ul>
bits 18...17	U <sub>2</sub>	merkleRootSrc	-	-	<p>Origin of the Merkle tree root</p> <ul style="list-style-type: none"> <li>• 0: Factory default</li> <li>• 2: From aided message</li> <li>• 3: From NVS</li> </ul>
bit 19	U <sub>1</sub>	merkleRootVal	-	-	<p>Validity of the Merkle tree root currently applicable</p> <ul style="list-style-type: none"> <li>• 0: Merkle tree root is invalid</li> <li>• 1: Merkle tree root is valid</li> </ul>
bits 21...20	U <sub>2</sub>	futureMerkle RootSrc	-	-	<p>Origin of the future Merkle tree root</p> <ul style="list-style-type: none"> <li>• 0: Factory default</li> <li>• 2: From aided message</li> <li>• 3: From NVS</li> </ul>
bit 22	U <sub>1</sub>	futureMerkle RootVal	-	-	<p>Validity of the future Merkle tree root</p> <ul style="list-style-type: none"> <li>• 0: Future Merkle tree root is invalid or unknown</li> </ul>

					<ul style="list-style-type: none"> <li>• 1: Future Merkle tree root is valid</li> </ul>
bit 23	U <sub>1</sub>	pubKeyVal	-	-	<p>Validity of the public key</p> <ul style="list-style-type: none"> <li>• 0: Public key is invalid or unknown</li> <li>• 1: Public key is valid</li> </ul>
bit 24	U <sub>1</sub>	futurePubKey Val	-	-	<p>Validity of the future public key</p> <ul style="list-style-type: none"> <li>• 0: Future public key is invalid or unknown</li> <li>• 1: Future public key is valid</li> </ul>
bits 26...25	U <sub>2</sub>	futurePubKey Src	-	-	<p>Origin of the future public key</p> <ul style="list-style-type: none"> <li>• 0: Factory default</li> <li>• 1: From satellites</li> <li>• 3: From NVS</li> </ul>
bits 30...27	U <sub>4</sub>	futurePubKey Id	-	-	Last authenticated public key Id that will be used in ECDSA verification after the next key update
<i>Start of repeated group (authSVs times)</i>					
24 + n·4	X2	bitfield1	-	-	bitfield:
bits 9...0	U <sub>10</sub>	IODE	-	-	Issue of data, authenticated ephemeris
bits 14...10	U <sub>5</sub>	authNum	-	-	Number of times that the same block of navigation data has been authenticated in last execution
bit 15	U <sub>1</sub>	authStatus	-	-	<p>Indicates the authentication result for current SV's orbits, clocks, flags group delays and ionospheric delay data:</p> <ul style="list-style-type: none"> <li>• 0: Navigation data successfully authenticated</li> <li>• 1: Navigation data authentication failed</li> </ul>
26 + n·4	U1	svId	-	-	Satellite identifier whose data gets authenticated (see <a href="#">Satellite Numbering</a> )
27 + n·4	U1	reserved1	-	-	Reserved
<i>End of repeated group (authSVs times)</i>					

### 3.18.2 UBX-SEC-SIG (0x27 0x09)

#### 3.18.2.1 Signal security information

Message	UBX-SEC-SIG				
Type	Signal security information				
Comment	Information related to the security, i.e. availability and integrity, of the signals.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5	0x62	0x27	0x09	4 + jamNumCentFreqs·4
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x02 for this version)
1	X1	sigSecFlags	-	-	Signal security flags, providing high-level jamming and spoofing detector information
bit 0	U <sub>1</sub>	jamDetEnabled	-	-	Flag indicates whether jamming detection is enabled
bits 2...1	U <sub>2</sub>	jamState	-	-	Jamming state

- 0: Unknown
- 1: No jamming indicated
- 2: Warning; jamming indicated

0: *Unknown*, denotes that the currently available information is not sufficient to judge whether the receiver is jammed or not. This may occur at receiver start up (or more generally when the receiver is in a mode, where jamming detection is hindered) or when the jamming indicator is disabled. 1: *No jamming indicated*: the jamming indicator is enabled and does not sense any significant jamming. 2: *Warning; jamming indicated*: the jamming indicator is indicating jamming which has a significant impact on the signal tracking. (The list *jamPerCentFreq* can be checked to find out which frequency bands are jammed.)

bit 3	<b>U<sub>1</sub></b>	spfDetEnabled	-	-	Flag indicates whether spoofing detection is enabled
bits 6...4	<b>U<sub>3</sub></b>	spfState	-	-	Spoofing state <ul style="list-style-type: none"> <li>• 0: Unknown</li> <li>• 1: No spoofing indicated</li> <li>• 2: Spoofing indicated</li> <li>• 3: Spoofing affirmed</li> </ul>
2	<b>U1</b>	reserved0	-	-	<b>Reserved</b>
3	<b>U1</b>	jamNumCentFreqs	-	-	The number of center frequencies we provide jamming information for (subsequent messages)
<i>Start of repeated group (jamNumCentFreqs times)</i>					
4 + n·4	<b>X4</b>	jamStateCentFreq	-	-	Jamming state of signals sharing a given center frequency  Note that jamming information is only provided for center frequencies related to at least one in-use signal, for which a sufficient amount of information is currently available to judge if it is affected by jamming.
bits 23...0	<b>U<sub>24</sub></b>	centFreq	-	-	Center frequency in [kHz], floored to the nearest kHz multiple
bit 24	<b>U<sub>1</sub></b>	jammed	-	-	Flag indicates whether signals on the given center frequency are considered jammed

*End of repeated group (jamNumCentFreqs times)*

### 3.18.3 UBX-SEC-SIGLOG (0x27 0x10)

#### 3.18.3.1 Signal security log

Message	UBX-SEC-SIGLOG
Type	Periodic/polled
Comment	This message provides a log of past signal security related events, that is, events related to jamming and spoofing. Each event is a combination of a detection type and a event type, where the event type 'indication started' and 'indication stopped' and also the event type 'indication triggered' and 'indication timed-out' form a pair. A maximum of 16 events are logged; after the log is filled, recent events take precedence over past events in the log. Power cycles and restarts of the receiver reset the log, deleting its content.  Note: It is advised not to restart the receiver while it's indicating spoofing.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x27	0x10	8 + numEvents·8	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x01 for this version)	
1	U1	numEvents	-	-	Number of events	
2	U1[6]	reserved0	-	-	Reserved	
<i>Start of repeated group (numEvents times)</i>						
8 + n·8	U4	timeElapsed	-	s	Seconds elapsed since this event Special value 0xFFFFFFFF: more than 45 days	
12 + n·8	U1	detectionType	-	-	Type of the spoofing or jamming detection: <ul style="list-style-type: none"> <li>• 0 = simulated signal</li> <li>• 1 = abnormal signal</li> <li>• 2 = INS/GNSS mismatch</li> <li>• 3 = abrupt changes in GNSS signal</li> <li>• 4 = jamming indicated</li> <li>• 5 = authentication failed</li> <li>• 6 = replayed signals</li> </ul>	
13 + n·8	U1	eventType	-	-	Type of the event: <ul style="list-style-type: none"> <li>• 0 = indication started</li> <li>• 1 = indication stopped</li> <li>• 2 = indication triggered</li> <li>• 3 = indication timed-out</li> </ul> <p>Note: Single epoch events, caused by abrupt changes due to switching from the real to the spoofing signal or vice versa are handled as time-out events. This means that the time-out event is reported after a certain cool off period which is not related to any observations in the signal. The other detection types make use of 'start' and 'stop' event types.</p>	
14 + n·8	U1[2]	reserved1	-	-	Reserved	
<i>End of repeated group (numEvents times)</i>						

### 3.18.4 UBX-SEC-UNIQID (0x27 0x03)

#### 3.18.4.1 Unique chip ID

Message	UBX-SEC-UNIQID					Checksum
	Unique chip ID					
Type	Output					
Comment	This message is used to retrieve a unique chip identifier (40 bits, 5 bytes).					
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x27	0x03	9	see below	CK_A CK_B
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	version	-	-	Message version (0x01 for this version)	
1	U1[3]	reserved0	-	-	Reserved	
4	U1[5]	uniqueId	-	-	Unique chip ID	

## 3.19 UBX-TIM (0x0d)

The messages in the UBX-TIM class are used to output timing information from the receiver, such as time pulse and time mark measurements.

### 3.19.1 UBX-TIM-TM2 (0x0d 0x03)

#### 3.19.1.1 Time mark data

Message	UBX-TIM-TM2				Payload	Checksum
Type	Time mark data					
Type	Periodic/pollled					
Comment	This message contains information for high precision time stamping / pulse counting. The delay figures and timebase given in <a href="#">UBX-CFG-TP5</a> are also applied to the time results output in this message.					
<i>Payload description:</i>						
Byte offset	Type	Name	Scale	Unit	Description	
0	U1	ch	-	-	Channel (i.e. EXTINT) upon which the pulse was measured	
1	X1	flags	-	-	Bitmask	
bit 0	U <sub>1</sub>	mode	-	-	<ul style="list-style-type: none"> <li>• 0=single</li> <li>• 1=running</li> </ul>	
bit 1	U <sub>1</sub>	run	-	-	<ul style="list-style-type: none"> <li>• 0=armed</li> <li>• 1=stopped</li> </ul>	
bit 2	U <sub>1</sub>	newFallingEdge	-	-	New falling edge detected	
bits 4...3	U <sub>2</sub>	timeBase	-	-	<ul style="list-style-type: none"> <li>• 0=Time base is Receiver time</li> <li>• 1=Time base is GNSS time (the system according to the configuration in <a href="#">UBX-CFG-TP5</a> for tpIdx=0)</li> <li>• 2=Time base is UTC (the variant according to the configuration in <a href="#">UBX-CFG-NAV5</a>)</li> </ul>	
bit 5	U <sub>1</sub>	utc	-	-	<ul style="list-style-type: none"> <li>• 0=UTC not available</li> <li>• 1=UTC available</li> </ul>	
bit 6	U <sub>1</sub>	time	-	-	<ul style="list-style-type: none"> <li>• 0=Time is not valid</li> <li>• 1=Time is valid (Valid GNSS fix)</li> </ul>	
bit 7	U <sub>1</sub>	newRisingEdge	-	-	New rising edge detected	
2	U2	count	-	-	Rising edge counter	
4	U2	wnR	-	-	Week number of last rising edge	
6	U2	wnF	-	-	Week number of last falling edge	
8	U4	towMsR	-	ms	Tow of rising edge	
12	U4	towSubMsR	-	ns	Millisecond fraction of tow of rising edge in nanoseconds	
16	U4	towMsF	-	ms	Tow of falling edge	
20	U4	towSubMsF	-	ns	Millisecond fraction of tow of falling edge in nanoseconds	

24	U4	accEst	-	ns	Accuracy estimate
----	----	--------	---	----	-------------------

### 3.19.2 UBX-TIM-TP (0x0d 0x01)

#### 3.19.2.1 Time pulse time data

Message	UBX-TIM-TP				
Type	Time pulse time data				
Comment	This message contains information on the timing of the next pulse at the TIMEPULSE0 output. The recommended configuration when using this message is to set both the measurement rate ( <a href="#">CFG-RATE</a> ) and the timepulse frequency ( <a href="#">CFG-TP</a> ) to 1 Hz.				
Message structure	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x0d	0x01	16	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	U4	towMS	-	ms	Time pulse time of week according to time base
4	U4	towSubMS	2^-32	ms	Submillisecond part of towMS
8	I4	qErr	-	ps	Quantization error of time pulse
12	U2	week	-	weeks	Time pulse week number according to time base
14	X1	flags	-	-	Flags
bit 0	U:1	timeBase	-	-	<ul style="list-style-type: none"> <li>• 0 = Time base is GNSS</li> <li>• 1 = Time base is UTC</li> </ul>
bit 1	U:1	utc	-	-	<ul style="list-style-type: none"> <li>• 0 = UTC not available</li> <li>• 1 = UTC available</li> </ul>
bits 3...2	U:2	raim	-	-	(T)RAIM information <ul style="list-style-type: none"> <li>• 0 = Information not available</li> <li>• 1 = Not active</li> <li>• 2 = Active</li> </ul>
bit 4	U:1	qErrInvalid	-	-	<ul style="list-style-type: none"> <li>• 0 = Quantization error valid</li> <li>• 1 = Quantization error invalid</li> </ul>
bit 5	U:1	TpNotLocked	-	-	<ul style="list-style-type: none"> <li>• 0 = Next TP is locked to GNSS</li> <li>• 1 = Next TP is based on local time and not locked to GNSS - week/tow may be invalid</li> </ul>
15	X1	refInfo	-	-	Time reference information
bits 3...0	U:4	timeRefGnss	-	-	GNSS reference information. Only valid if time base is GNSS (timeBase=0). <ul style="list-style-type: none"> <li>• 0 = GPS</li> <li>• 1 = GLONASS</li> <li>• 2 = BeiDou</li> <li>• 3 = Galileo</li> <li>• 4 = NavIC</li> <li>• 15 = Unknown</li> </ul>
bits 7...4	U:4	utcStandard	-	-	UTC standard identifier. Only valid if time base is UTC (timeBase=1). <ul style="list-style-type: none"> <li>• 0 = Information not available</li> </ul>

- 1 = Communications Research Laboratory (CRL), Tokyo, Japan
- 2 = National Institute of Standards and Technology (NIST)
- 3 = U.S. Naval Observatory (USNO)
- 4 = International Bureau of Weights and Measures (BIPM)
- 5 = European laboratories
- 6 = Former Soviet Union (SU)
- 7 = National Time Service Center (NTSC), China
- 8 = National Physics Laboratory India (NPLI)
- 15 = Unknown

### 3.19.3 UBX-TIM-VRFY (0x0d 0x06)

#### 3.19.3.1 Sourced time verification

<b>Message</b>	UBX-TIM-VRFY				
	Sourced time verification				
Type	Periodic/pollled				
Comment	This message contains verification information about previous time received via assistance data or from RTC.				
<b>Message structure</b>					
	Header	Class	ID	Length (Bytes)	Payload
	0xb5 0x62	0x0d	0x06	20	see below
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	I4	itow	-	ms	integer millisecond tow received by source
4	I4	frac	-	ns	sub-millisecond part of tow
8	I4	deltaMs	-	ms	integer milliseconds of delta time (current time minus sourced time)
12	I4	deltaNs	-	ns	Sub-millisecond part of delta time
16	U2	wno	-	week	Week number
18	X1	flags	-	-	Flags
bits 2...0	U3	src	-	-	Aiding time source <ul style="list-style-type: none"> <li>• 0 = no time aiding done</li> <li>• 2 = source was RTC</li> <li>• 3 = source was assistance data</li> </ul>
19	U1	reserved0	-	-	Reserved

### 3.20 UBX-UPD (0x09)

The messages in the UBX-UPD class are used to download a firmware to the receiver and to update the firmware on the flash.

#### 3.20.1 UBX-UPD-SOS (0x09 0x14)

### 3.20.1.1 Poll backup restore status

<b>Message</b>	UBX-UPD-SOS				
	<b>Poll backup restore status</b>				
<b>Type</b>	Poll request				
<b>Comment</b>	Sending this (empty) message to the receiver results in the receiver returning a <i>System restored from backup</i> message as defined below.				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	<b>Payload</b>
	0xb5 0x62	0x09	0x14	0	<i>see below</i>
<b>Payload</b>	This message has no payload.				

### 3.20.1.2 Create backup in flash

<b>Message</b>	UBX-UPD-SOS				
	<b>Create backup in flash</b>				
<b>Type</b>	Command				
<b>Comment</b>	The host can send this message in order to save part of the battery-backed memory (BBR) in a file in the flash file system. The feature is designed in order to emulate the presence of the backup battery even if it is not present; the host can issue the save on shutdown command before switching off the device supply. It is recommended to issue a GNSS stop command using UBX-CFG-RST before in order to keep the BBR memory content consistent.				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	<b>Payload</b>
	0xb5 0x62	0x09	0x14	4	<i>see below</i>
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	U1	cmd	-	-	Command (must be 0)
1	U1[3]	reserved0	-	-	Reserved

### 3.20.1.3 Clear backup in flash

<b>Message</b>	UBX-UPD-SOS				
	<b>Clear backup in flash</b>				
<b>Type</b>	Command				
<b>Comment</b>	The host can send this message in order to erase the backup file present in flash. It is recommended that the clear operation is issued after the host has received the notification that the memory has been restored after a reset. Alternatively the host can parse the startup string <i>Restored data saved on shutdown</i> or poll the UBX-UPD-SOS message for obtaining the status.				
<b>Message structure</b>	Header	Class	ID	Length (Bytes)	<b>Payload</b>
	0xb5 0x62	0x09	0x14	4	<i>see below</i>
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	U1	cmd	-	-	Command (must be 1)
1	U1[3]	reserved0	-	-	Reserved

### 3.20.1.4 Backup creation acknowledge

<b>Message</b>	UBX-UPD-SOS				
	<b>Backup creation acknowledge</b>				
<b>Type</b>	Output				
<b>Comment</b>	The message is sent from the device as confirmation of creation of a backup file in flash. The host can safely shut down the device after having received this message.				

<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x09	0x14	8	<i>see below</i>	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	cmd	-	-	Command (must be 2)	
1	U1[3]	reserved0	-	-	Reserved	
4	U1	response	-	-	<ul style="list-style-type: none"> <li>• 0 = Not acknowledged</li> <li>• 1 = Acknowledged</li> </ul>	
5	U1[3]	reserved1	-	-	Reserved	

### 3.20.1.5 System restored from backup

<b>Message</b>	UBX-UPD-SOS					
	System restored from backup					
<b>Type</b>	Output					
<b>Comment</b>	The message is sent from the device to notify the host the BBR has been restored from a backup file in the flash file system. The host should clear the backup file after receiving this message. If the UBX-UPD-SOS message is polled, this message is resent.					
<i>Message structure</i>	<i>Header</i>	<i>Class</i>	<i>ID</i>	<i>Length (Bytes)</i>	<i>Payload</i>	<i>Checksum</i>
	0xb5 0x62	0x09	0x14	8	<i>see below</i>	CK_A CK_B
<i>Payload description:</i>						
<i>Byte offset</i>	<i>Type</i>	<i>Name</i>	<i>Scale</i>	<i>Unit</i>	<i>Description</i>	
0	U1	cmd	-	-	Command (must be 3)	
1	U1[3]	reserved0	-	-	Reserved	
4	U1	response	-	-	<ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Failed restoring from backup</li> <li>• 2 = Restored from backup</li> <li>• 3 = Not restored (no backup)</li> </ul>	
5	U1[3]	reserved1	-	-	Reserved	

## 4 RTCM protocol

### 4.1 RTCM introduction

The RTCM (Radio Technical Commission for Maritime Services) protocols are used to supply the GNSS receiver with real-time differential correction data. The RTCM protocol specifications are available from <http://www.rtcm.org>.

The RTCM 3.x support is implemented according to *RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3*.

### 4.2 RTCM 3.x configuration

The configuration of RTCM 3.x input or RTCM 3.x output (if available) is further detailed in the integration manual for typical applications.

The RTCM 3.x protocol can be disabled/enabled on communication interfaces using the [Configuration interface](#), for example configuration item [CFG-UART1INPROT-RTCM3X](#).

### 4.3 RTCM messages overview

Message	Class/ID	Description (Type)
<b>RTCM-3X – RTCM 3.3 messages</b>		
RTCM-3X-TYPE1001	0xf5 0x01	Message type 1001 <ul style="list-style-type: none"><li>• L1-only GPS RTK observables (Input)</li></ul>
RTCM-3X-TYPE1002	0xf5 0x02	Message type 1002 <ul style="list-style-type: none"><li>• Extended L1-only GPS RTK observables (Input)</li></ul>
RTCM-3X-TYPE1003	0xf5 0x03	Message type 1003 <ul style="list-style-type: none"><li>• L1/L2 GPS RTK observables (Input)</li></ul>
RTCM-3X-TYPE1004	0xf5 0x04	Message type 1004 <ul style="list-style-type: none"><li>• Extended L1/L2 GPS RTK observables (Input)</li></ul>
RTCM-3X-TYPE1005	0xf5 0x05	Message type 1005 <ul style="list-style-type: none"><li>• Stationary RTK reference station ARP (Input/output)</li></ul>
RTCM-3X-TYPE1006	0xf5 0x06	Message type 1006 <ul style="list-style-type: none"><li>• Stationary RTK reference station ARP with antenna height (Input)</li></ul>
RTCM-3X-TYPE1007	0xf5 0x07	Message type 1007 <ul style="list-style-type: none"><li>• Antenna descriptor (Input)</li></ul>
RTCM-3X-TYPE1009	0xf5 0x09	Message type 1009 <ul style="list-style-type: none"><li>• L1-only GLONASS RTK observables (Input)</li></ul>
RTCM-3X-TYPE1010	0xf5 0x0a	Message type 1010 <ul style="list-style-type: none"><li>• Extended L1-Only GLONASS RTK observables (Input)</li></ul>
RTCM-3X-TYPE1011	0xf5 0xa1	Message type 1011 <ul style="list-style-type: none"><li>• L1&amp;L2 GLONASS RTK observables (Input)</li></ul>
RTCM-3X-TYPE1012	0xf5 0xa2	Message type 1012 <ul style="list-style-type: none"><li>• Extended L1&amp;L2 GLONASS RTK observables (Input)</li></ul>
RTCM-3X-TYPE1033	0xf5 0x21	Message type 1033 <ul style="list-style-type: none"><li>• Receiver and antenna descriptors (Input)</li></ul>
RTCM-3X-TYPE1074	0xf5 0x4a	Message type 1074 <ul style="list-style-type: none"><li>• GPS MSM4 (Input/output)</li></ul>
RTCM-3X-TYPE1075	0xf5 0x4b	Message type 1075 <ul style="list-style-type: none"><li>• GPS MSM5 (Input)</li></ul>

<b>Message</b>	<b>Class/ID</b>	<b>Description (Type)</b>
RTCM-3X-TYPE1077	0xf5 0x4d	Message type 1077 • GPS MSM7 (Input/output)
RTCM-3X-TYPE1084	0xf5 0x54	Message type 1084 • GLONASS MSM4 (Input/output)
RTCM-3X-TYPE1085	0xf5 0x55	Message type 1085 • GLONASS MSM5 (Input)
RTCM-3X-TYPE1087	0xf5 0x57	Message type 1087 • GLONASS MSM7 (Input/output)
RTCM-3X-TYPE1094	0xf5 0x5e	Message type 1094 • Galileo MSM4 (Input/output)
RTCM-3X-TYPE1095	0xf5 0x5f	Message type 1095 • Galileo MSM5 (Input)
RTCM-3X-TYPE1097	0xf5 0x61	Message type 1097 • Galileo MSM7 (Input/output)
RTCM-3X-TYPE1124	0xf5 0x7c	Message type 1124 • BeiDou MSM4 (Input/output)
RTCM-3X-TYPE1125	0xf5 0x7d	Message type 1125 • BeiDou MSM5 (Input)
RTCM-3X-TYPE1127	0xf5 0x7f	Message type 1127 • BeiDou MSM7 (Input/output)
RTCM-3X-TYPE1230	0xf5 0xe6	Message type 1230 • GLONASS L1 and L2 code-phase biases (Input/output)
RTCM-3X-TYPE4072_0	0xf5 0xfe	Message type 4072, sub-type 0 • Reference station PVT (u-blox proprietary) (Input/output)
RTCM-3X-TYPE4072_1	0xf5 0xfd	Message type 4072, sub-type 1 • Additional reference station information (u-blox proprietary) (Output)

## 4.4 RTCM 3.3 messages

For details see [RTCM protocol](#) and the RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 available from <http://www.rtcm.org>.

### 4.4.1 Message type 1001

#### 4.4.1.1 L1-only GPS RTK observables

<b>Message</b>	RTCM-3X-TYPE1001									
	<b>L1-only GPS RTK observables</b>									
<b>Type</b>	Input									
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.									
<b>Information</b> Class/ID: 0xf5 0x01, Message Type: 1001 (0x3e9), Message Size: 6 + nData										
<b>Payload description:</b>										
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>					
0	X1	rtcmByte0	-	-	RTCM frame byte 0					
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)					
1	X1	rtcmByte1	-	-	RTCM frame byte 1					
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)					

bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.2 Message type 1002

### 4.4.2.1 Extended L1-only GPS RTK observables

<b>Message</b>	RTCM-3X-TYPE1002				
<b>Extended L1-only GPS RTK observables</b>					
Type	Input				
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x02, Message Type: 1002 (0x3ea), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.3 Message type 1003

### 4.4.3.1 L1/L2 GPS RTK observables

<b>Message</b>	RTCM-3X-TYPE1003				
<b>L1/L2 GPS RTK observables</b>					
Type	Input				
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x03, Message Type: 1003 (0x3eb), Message Size: 6 + nData				

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

#### 4.4.4 Message type 1004

##### 4.4.4.1 Extended L1/L2 GPS RTK observables

Message	RTCM-3X-TYPE1004				
Extended L1/L2 GPS RTK observables					
Type	Input				
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x04, Message Type: 1004 (0x3ec), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

#### 4.4.5 Message type 1005

#### 4.4.5.1 Stationary RTK reference station ARP

<b>Message</b>	RTCM-3X-TYPE1005				
Stationary RTK reference station ARP					
Type	Input/output				
<i>Comment</i>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<i>Information</i>	Class/ID: 0xf5 0x05, Message Type: 1005 (0x3ed), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

#### 4.4.6 Message type 1006

##### 4.4.6.1 Stationary RTK reference station ARP with antenna height

<b>Message</b>	RTCM-3X-TYPE1006				
Stationary RTK reference station ARP with antenna height					
Type	Input				
<i>Comment</i>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<i>Information</i>	Class/ID: 0xf5 0x06, Message Type: 1006 (0x3ee), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
-------	----	------	---	---	---

*End of repeated group (nData times)*

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.7 Message type 1007

### 4.4.7.1 Antenna descriptor

Message	RTCM-3X-TYPE1007				
Antenna descriptor					
Type	Input				
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x07, Message Type: 1007 (0x3ef), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.8 Message type 1009

### 4.4.8.1 L1-only GLONASS RTK observables

Message	RTCM-3X-TYPE1009				
L1-only GLONASS RTK observables					
Type	Input				
Comment	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x09, Message Type: 1009 (0x3f1), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1

bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.9 Message type 1010

### 4.4.9.1 Extended L1-Only GLONASS RTK observables

<b>Message</b>	RTCM-3X-TYPE1010				
Extended L1-Only GLONASS RTK observables					
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x0a, Message Type: 1010 (0x3f2), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.10 Message type 1011

### 4.4.10.1 L1&L2 GLONASS RTK observables

<b>Message</b>	RTCM-3X-TYPE1011				
L1&L2 GLONASS RTK observables					
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				

*Information Class/ID: 0xf5 0xa1, Message Type: 1011 (0x3f3), Message Size: 6 + nData*

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

#### 4.4.11 Message type 1012

##### 4.4.11.1 Extended L1&L2 GLONASS RTK observables

<b>Message</b>	RTCM-3X-TYPE1012				
<b>Extended L1&amp;L2 GLONASS RTK observables</b>					
<b>Type</b>	Input				
<b>Comment</b>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<i>Information Class/ID: 0xf5 0xa2, Message Type: 1012 (0x3f4), Message Size: 6 + nData</i>					
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

#### 4.4.12 Message type 1033

#### 4.4.12.1 Receiver and antenna descriptors

<b>Message</b>	RTCM-3X-TYPE1033				
<b>Receiver and antenna descriptors</b>					
Type	Input				
<i>Comment</i>	See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<i>Information</i>	Class/ID: 0xf5 0x21, Message Type: 1033 (0x409), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

#### 4.4.13 Message type 1074

<b>Message</b>	RTCM-3X-TYPE1074				
<b>GPS MSM4</b>					
Type	Input/output				
<i>Comment</i>	Full GPS Pseudoranges and PhaseRanges plus CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<i>Information</i>	Class/ID: 0xf5 0x4a, Message Type: 1074 (0x432), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
-------	----	------	---	---	---

*End of repeated group (nData times)*

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.14 Message type 1075

### 4.4.14.1 GPS MSM5

Message	RTCM-3X-TYPE1075 GPS MSM5				
Type	Input				
Comment	Full GPS Pseudoranges, PhaseRanges, PhaseRangeRate and CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x4b, Message Type: 1075 (0x433), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.15 Message type 1077

### 4.4.15.1 GPS MSM7

Message	RTCM-3X-TYPE1077 GPS MSM7				
Type	Input/output				
Comment	Full GPS Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
Information	Class/ID: 0xf5 0x4d, Message Type: 1077 (0x435), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0

	bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1		rtcmByte1	-	-	RTCM frame byte 1
	bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
	bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1		rtcmByte2	-	-	RTCM frame byte 2
	bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>						
3 + n	U1		data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>						
3 + nData	U1[3]		crc	-	-	Checksum

#### 4.4.16 Message type 1084

##### 4.4.16.1 GLONASS MSM4

<b>Message</b>	RTCM-3X-TYPE1084				
<b>GLONASS MSM4</b>					
<b>Type</b>	Input/output				
<b>Comment</b>	Full GLONASS Pseudoranges and PhaseRanges plus CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x54, Message Type: 1084 (0x43c), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 7...0	U <sub>8</sub>	preamble	-	-
					Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 1...0	U <sub>2</sub>	nDataMSB	-	-
					Payload length (2 MSB)
	bits 7...2	U <sub>6</sub>	res1	-	-
					Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 7...0	U <sub>8</sub>	nData	-	-
					Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1		data	-	-
					Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]		crc	-	-
Checksum					

#### 4.4.17 Message type 1085

#### 4.4.17.1 GLONASS MSM5

<b>Message</b>	RTCM-3X-TYPE1085 GLONASS MSM5				
<b>Type</b>	Input				
<b>Comment</b>	Full GLONASS Pseudoranges, PhaseRanges, PhaseRangeRate and CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x55, Message Type: 1085 (0x43d), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

#### 4.4.18 Message type 1087

<b>Message</b>	RTCM-3X-TYPE1087 GLONASS MSM7				
<b>Type</b>	Input/output				
<b>Comment</b>	Full GLONASS Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x57, Message Type: 1087 (0x43f), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)

*Start of repeated group (nData times)*

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
-------	----	------	---	---	---

*End of repeated group (nData times)*

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.19 Message type 1094

### 4.4.19.1 Galileo MSM4

**Message** RTCM-3X-TYPE1094

Galileo MSM4

**Type** Input/output

**Comment** Full Galileo Pseudoranges and PhaseRanges plus CNR

See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.

**Information** Class/ID: 0xf5 0x5e, Message Type: 1094 (0x446), Message Size: 6 + nData

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)

*Start of repeated group (nData times)*

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
-------	----	------	---	---	---

*End of repeated group (nData times)*

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.20 Message type 1095

### 4.4.20.1 Galileo MSM5

**Message** RTCM-3X-TYPE1095

Galileo MSM5

**Type** Input

**Comment** Full Galileo Pseudoranges, PhaseRanges, PhaseRangeRate and CNR

See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.

**Information** Class/ID: 0xf5 0x5f, Message Type: 1095 (0x447), Message Size: 6 + nData

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
-------------	------	------	-------	------	-------------

0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.21 Message type 1097

### 4.4.21.1 Galileo MSM7

<b>Message</b>	RTCM-3X-TYPE1097 Galileo MSM7				
<b>Type</b>	Input/output				
<b>Comment</b>	Full Galileo Pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution) See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x61, Message Type: 1097 (0x449), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 4.4.22 Message type 1124

#### 4.4.22.1 BeiDou MSM4

<b>Message</b>	RTCM-3X-TYPE1124				
	<b>BeiDou MSM4</b>				
<b>Type</b>	Input/output				
<b>Comment</b>	Full BeiDou Pseudoranges and PhaseRanges plus CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x7c, Message Type: 1124 (0x464), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

#### 4.4.23 Message type 1125

<b>Message</b>	RTCM-3X-TYPE1125				
	<b>BeiDou MSM5</b>				
<b>Type</b>	Input				
<b>Comment</b>	Full BeiDou Pseudoranges, PhaseRanges, PhaseRangeRate and CNR See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf5 0x7d, Message Type: 1125 (0x465), Message Size: 6 + nData				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)

*Start of repeated group (nData times)*

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
-------	----	------	---	---	---

*End of repeated group (nData times)*

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.24 Message type 1127

### 4.4.24.1 BeiDou MSM7

**Message** RTCM-3X-TYPE1127

**BeiDou MSM7**

**Type** Input/output

**Comment** Full BeiDou pseudoranges, PhaseRanges, PhaseRangeRate and CNR (high resolution)

See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.

**Information** Class/ID: 0xf5 0x7f, Message Type: 1127 (0x467), Message Size: 6 + nData

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U:2	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (8 LSB)

*Start of repeated group (nData times)*

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
-------	----	------	---	---	---

*End of repeated group (nData times)*

3 + nData	U1[3]	crc	-	-	Checksum
-----------	-------	-----	---	---	----------

## 4.4.25 Message type 1230

### 4.4.25.1 GLONASS L1 and L2 code-phase biases

**Message** RTCM-3X-TYPE1230

**GLONASS L1 and L2 code-phase biases**

**Type** Input/output

**Comment** See RTCM Standard 10403.3 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.

**Information** Class/ID: 0xf5 0xe6, Message Type: 1230 (0x4ce), Message Size: 6 + nData

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	X1	rtcmByte0	-	-	RTCM frame byte 0

	bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1		rtcmByte1	-	-	RTCM frame byte 1
	bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
	bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1		rtcmByte2	-	-	RTCM frame byte 2
	bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>						
3 + n	U1		data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>						
3 + nData	U1[3]		crc	-	-	Checksum

#### 4.4.26 Message type 4072, sub-type 0

##### 4.4.26.1 Reference station PVT (u-blox proprietary)

<b>Message</b>	RTCM-3X-TYPE4072_0					
<b>Reference station PVT (u-blox proprietary)</b>						
<b>Type</b>	Input/output					
<b>Comment</b>	The payload starts with the following RTCM data fields:					
	<ul style="list-style-type: none"> <li>• uint12 (12 bits unsigned, RTCM data field type D002): message type (0xfe8 for this message)</li> <li>• uint12 (12 bits unsigned, RTCM data field type D002): message sub-type (0x000 for this message)</li> </ul>					
<b>Information</b>	Class/ID: 0xf5 0xfe, Message Type: 4072 (0xfe8), Sub-type: 0 (0x000), Message Size: 6 + nData					
<i>Payload description:</i>						
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>	
0	X1	rtcmByte0	-	-	RTCM frame byte 0	
	bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1	
	bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
	bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2	
	bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>						
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.	
<i>End of repeated group (nData times)</i>						
3 + nData	U1[3]	crc	-	-	Checksum	

#### 4.4.27 Message type 4072, sub-type 1

#### 4.4.27.1 Additional reference station information (u-blox proprietary)

<b>Message</b>	RTCM-3X-TYPE4072_1				
<b>Additional reference station information (u-blox proprietary)</b>					
<b>Type</b>	Output				
<b>Comment</b>	The payload starts with the following RTCM data fields: <ul style="list-style-type: none"> <li>• uint12 (12 bits unsigned, RTCM data field type D002): message type (0xfe8 for this message)</li> <li>• uint12 (12 bits unsigned, RTCM data field type D002): message sub-type (0x001 for this message)</li> </ul>				
<b>Information</b>	Class/ID: 0xf5 0xfd, Message Type: 4072 (0xfe8), Sub-type: 1 (0x001), Message Size: 6 + nData				
<i>Payload description:</i>					
<b>Byte offset</b>	<b>Type</b>	<b>Name</b>	<b>Scale</b>	<b>Unit</b>	<b>Description</b>
0	X1	rtcmByte0	-	-	RTCM frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1...0	U <sub>2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7...2	U <sub>6</sub>	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (8 LSB)
<i>Start of repeated group (nData times)</i>					
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
3 + nData	U1[3]	crc	-	-	Checksum

## 5 SPARTN protocol

### 5.1 SPARTN introduction

The SPARTN (Secure Position Augmentation for Real-Time Navigation) protocol are used to supply the GNSS receiver with real-time correction data. The SPARTN protocol specifications are available in [spartnformat.org](https://www.spartnformat.org).

The SPARTN 2.0 support is implemented according to *Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021*.

### 5.2 SPARTN configuration

The configuration of SPARTN input is further detailed in the integration manual for typical applications.

The SPARTN protocol can be disabled/enabled on communication interfaces using the [Configuration interface](#), for example configuration item [CFG-UART1INPROT-SPARTN](#).

### 5.3 SPARTN messages overview

Message	Class/ID	Description (Type)
<b>SPARTN-1X – SPARTN messages</b>		
SPARTN-1X-OCB_GPS	0xf6 0x01	Message type 0, sub-type 0 <ul style="list-style-type: none"><li>GPS orbit, clock, bias (OCB) (Input)</li></ul>
SPARTN-1X-OCB_GLO	0xf6 0x02	Message type 0, sub-type 1 <ul style="list-style-type: none"><li>GLONASS orbit, clock, bias (OCB) (Input)</li></ul>
SPARTN-1X-OCB_GAL	0xf6 0x03	Message type 0, sub-type 2 <ul style="list-style-type: none"><li>Galileo orbit, clock, bias (OCB) (Input)</li></ul>
SPARTN-1X-OCB_BDS	0xf6 0x04	Message type 0, sub-type 3 <ul style="list-style-type: none"><li>BeiDou orbit, clock, bias (OCB) (Input)</li></ul>
SPARTN-1X-HPAC_GPS	0xf6 0x0a	Message type 1, sub-type 0 <ul style="list-style-type: none"><li>GPS high-precision atmosphere correction (HPAC) (Input)</li></ul>
SPARTN-1X-HPAC_GLO	0xf6 0x0b	Message type 1, sub-type 1 <ul style="list-style-type: none"><li>GLONASS high-precision atmosphere correction (HPAC) (Input)</li></ul>
SPARTN-1X-HPAC_GAL	0xf6 0x0c	Message type 1, sub-type 2 <ul style="list-style-type: none"><li>Galileo high-precision atmosphere correction (HPAC) (Input)</li></ul>
SPARTN-1X-HPAC_BDS	0xf6 0x0d	Message type 1, sub-type 3 <ul style="list-style-type: none"><li>BeiDou high-precision atmosphere correction (HPAC) (Input)</li></ul>
SPARTN-1X-GAD	0xf6 0x13	Message type 2, sub-type 0 <ul style="list-style-type: none"><li>Geographic area definition (GAD) (Input)</li></ul>

### 5.4 SPARTN messages

For details see [SPARTN protocol](#) and the Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 available from <https://www.spartnformat.org>.

#### 5.4.1 Message type 0, sub-type 0

### 5.4.1.1 GPS orbit, clock, bias (OCB)

Message	SPARTN-1X-OCB_GPS GPS orbit, clock, bias (OCB)				
Type	Input				
Comment	This message carries the data for GPS satellite orbits, clocks, biases and other auxiliary information. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
Information	Class/ID: 0xf6 0x01, Message Type: 0 (0x00), Sub-type: 0 (0x0), Message Size: 5 + nData + crcType				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U <sub>1</sub>	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U <sub>7</sub>	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U <sub>4</sub>	frameCrc	-	-	Frame CRC
bits 5...4	U <sub>2</sub>	crcType	-	-	Message CRC type
bit 6	U <sub>1</sub>	eaf	-	-	Encryption and/or authentication flag
bit 7	U <sub>1</sub>	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

### 5.4.2 Message type 0, sub-type 1

#### 5.4.2.1 GLONASS orbit, clock, bias (OCB)

Message	SPARTN-1X-OCB_GLO GLONASS orbit, clock, bias (OCB)				
Type	Input				
Comment	This message carries the data for GLONASS satellite orbits, clocks, biases and other auxiliary information. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
Information	Class/ID: 0xf6 0x02, Message Type: 0 (0x00), Sub-type: 1 (0x1), Message Size: 5 + nData + crcType				

**Payload description:**

Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U <sub>1</sub>	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U <sub>7</sub>	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U <sub>4</sub>	frameCrc	-	-	Frame CRC
bits 5...4	U <sub>2</sub>	crcType	-	-	Message CRC type
bit 6	U <sub>1</sub>	eaf	-	-	Encryption and/or authentication flag
bit 7	U <sub>1</sub>	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.3 Message type 0, sub-type 2

### 5.4.3.1 Galileo orbit, clock, bias (OCB)

<b>Message</b>	SPARTN-1X-OCB_GAL				
	Galileo orbit, clock, bias (OCB)				
<b>Type</b>	Input				
<b>Comment</b>	This message carries the data for Galileo satellite orbits, clocks, biases and other auxiliary information. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<b>Information</b>	Class/ID: 0xf6 0x03, Message Type: 0 (0x00), Sub-type: 2 (0x2), Message Size: 5 + nData + crcType				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U <sub>1</sub>	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U <sub>7</sub>	msgType	-	-	Message type

2	X1	spartnByte2	-	-	SPARTN frame byte 2
	bits 7...0	U <sub>8</sub>	nData	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
	bits 3...0	U <sub>4</sub>	frameCrc	-	Frame CRC
	bits 5...4	U <sub>2</sub>	crcType	-	Message CRC type
	bit 6	U <sub>1</sub>	eaf	-	Encryption and/or authentication flag
	bit 7	U <sub>1</sub>	nDataLSB	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.4 Message type 0, sub-type 3

### 5.4.4.1 BeiDou orbit, clock, bias (OCB)

Message	SPARTN-1X-OCB_BDS									
Type	BeiDou orbit, clock, bias (OCB)									
Type	Input									
Comment	This message carries the data for BeiDou satellite orbits, clocks, biases and other auxiliary information. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.									
<i>Information</i> Class/ID: 0xf6 0x04, Message Type: 0 (0x00), Sub-type: 3 (0x3), Message Size: 5 + nData + crcType										
<i>Payload description:</i>										
Byte offset	Type	Name	Scale	Unit	Description					
0	X1	spartnByte0	-	-	SPARTN frame byte 0					
	bits 7...0	U <sub>8</sub>	preamble	-	Preamble (0x73, 's')					
1	X1	spartnByte1	-	-	SPARTN frame byte 1					
	bit 0	U <sub>1</sub>	nDataMSB	-	Payload length (MSB)					
	bits 7...1	U <sub>7</sub>	msgType	-	Message type					
2	X1	spartnByte2	-	-	SPARTN frame byte 2					
	bits 7...0	U <sub>8</sub>	nData	-	Payload length (middle 8 bits)					
3	X1	spartnByte3	-	-	SPARTN frame byte 3					
	bits 3...0	U <sub>4</sub>	frameCrc	-	Frame CRC					
	bits 5...4	U <sub>2</sub>	crcType	-	Message CRC type					
	bit 6	U <sub>1</sub>	eaf	-	Encryption and/or authentication flag					

bit 7	U <sub>1</sub>	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U <sub>1</sub>	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U <sub>1</sub>	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U <sub>1</sub>	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.5 Message type 1, sub-type 0

### 5.4.5.1 GPS high-precision atmosphere correction (HPAC)

Message	SPARTN-1X-HPAC_GPS				
Type	GPS high-precision atmosphere correction (HPAC)				
Comment	<p>This message contains high-precision atmosphere data for GPS, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message.</p> <p>See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.</p>				
Information	Class/ID: 0xf6 0x0a, Message Type: 1 (0x01), Sub-type: 0 (0x0), Message Size: 5 + nData + crcType				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U <sub>1</sub>	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U <sub>7</sub>	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U <sub>4</sub>	frameCrc	-	-	Frame CRC
bits 5...4	U <sub>2</sub>	crcType	-	-	Message CRC type
bit 6	U <sub>1</sub>	eaf	-	-	Encryption and/or authentication flag
bit 7	U <sub>1</sub>	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U <sub>1</sub>	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U <sub>1</sub>	crc0	-	-	Message CRC 1st byte

*Start of repeated group (crcType times)*

5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
---------------	----	------	---	---	------------------------------

*End of repeated group (crcType times)*

## 5.4.6 Message type 1, sub-type 1

### 5.4.6.1 GLONASS high-precision atmosphere correction (HPAC)

Message	SPARTN-1X-HPAC_GLO GLONASS high-precision atmosphere correction (HPAC)				
Type	Input				
<i>Comment</i>	This message contains high-precision atmosphere data for GLONASS, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<i>Information</i>	Class/ID: 0xf6 0x0b, Message Type: 1 (0x01), Sub-type: 1 (0x1), Message Size: 5 + nData + crcType				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

## 5.4.7 Message type 1, sub-type 2

#### 5.4.7.1 Galileo high-precision atmosphere correction (HPAC)

<b>Message</b>	SPARTN-1X-HPAC_GAL Galileo high-precision atmosphere correction (HPAC)				
Type	Input				
<i>Comment</i>	This message contains high-precision atmosphere data for Galileo, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.				
<i>Information</i>	Class/ID: 0xf6 0x0c, Message Type: 1 (0x01), Sub-type: 2 (0x2), Message Size: 5 + nData + crcType				
<i>Payload description:</i>					
Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U <sub>1</sub>	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U <sub>7</sub>	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U <sub>4</sub>	frameCrc	-	-	Frame CRC
bits 5...4	U <sub>2</sub>	crcType	-	-	Message CRC type
bit 6	U <sub>1</sub>	eaf	-	-	Encryption and/or authentication flag
bit 7	U <sub>1</sub>	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>					
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>					
4 + nData	U1	crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>					
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>					

#### 5.4.8 Message type 1, sub-type 3

##### 5.4.8.1 BeiDou high-precision atmosphere correction (HPAC)

<b>Message</b>	SPARTN-1X-HPAC_BDS BeiDou high-precision atmosphere correction (HPAC)				
Type	Input				
<i>Comment</i>	This message contains high-precision atmosphere data for BeiDou, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message.				

See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.

*Information Class/ID: 0xf6 0x0d, Message Type: 1 (0x01), Sub-type: 3 (0x3), Message Size: 5 + nData + crcType*

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 7...0	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
bits 7...1	U:7	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 7...0	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 3...0	U:4	frameCrc	-	-	Frame CRC
bits 5...4	U:2	crcType	-	-	Message CRC type
bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
bit 7	U:1	nDataLSB	-	-	Payload length (LSB)

*Start of repeated group (nData times)*

4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
-------	----	------	---	---	---

*End of repeated group (nData times)*

4 + nData	U1	crc0	-	-	Message CRC 1st byte
-----------	----	------	---	---	----------------------

*Start of repeated group (crcType times)*

5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
---------------	----	------	---	---	------------------------------

*End of repeated group (crcType times)*

## 5.4.9 Message type 2, sub-type 0

### 5.4.9.1 Geographic area definition (GAD)

Message	SPARTN-1X-GAD
<b>Geographic area definition (GAD)</b>	
Type	Input
Comment	This message is used to define geographic areas of data usage. The use of this message can serve different purposes, including atmospheric data availability and other types of geographical/geometrical aspects of usage of data.  See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021 for a detailed message specification.

*Information Class/ID: 0xf6 0x13, Message Type: 2 (0x02), Sub-type: 0 (0x0), Message Size: 5 + nData + crcType*

*Payload description:*

Byte offset	Type	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0

	bits 7...0	U <sub>8</sub>	preamble	-	-	Preamble (0x73, 's')
1	X1		spartnByte1	-	-	SPARTN frame byte 1
	bit 0	U <sub>1</sub>	nDataMSB	-	-	Payload length (MSB)
	bits 7...1	U <sub>7</sub>	msgType	-	-	Message type
2	X1		spartnByte2	-	-	SPARTN frame byte 2
	bits 7...0	U <sub>8</sub>	nData	-	-	Payload length (middle 8 bits)
3	X1		spartnByte3	-	-	SPARTN frame byte 3
	bits 3...0	U <sub>4</sub>	frameCrc	-	-	Frame CRC
	bits 5...4	U <sub>2</sub>	crcType	-	-	Message CRC type
	bit 6	U <sub>1</sub>	eaf	-	-	Encryption and/or authentication flag
	bit 7	U <sub>1</sub>	nDataLSB	-	-	Payload length (LSB)
<i>Start of repeated group (nData times)</i>						
4 + n	U1		data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
<i>End of repeated group (nData times)</i>						
4 + nData	U1		crc0	-	-	Message CRC 1st byte
<i>Start of repeated group (crcType times)</i>						
5 + nData + n	U1		crcN	-	-	Message CRC additional bytes
<i>End of repeated group (crcType times)</i>						

# 6 Configuration interface


This chapter describes the receiver configuration interface.

## 6.1 Configuration database

The configuration database in the receiver's RAM holds the current configuration, which is used by the receiver at run-time. It is constructed on startup of the receiver from several sources of configuration. These sources are called *Configuration Layers*. The current configuration is called the *RAM Layer*. Any configuration in any layer is organized as *Configuration Items*, where each Configuration Item is referenced to by a unique *Configuration Key ID* and holds a single *Configuration Value*.

## 6.2 Configuration items

The following figure shows the structure of a *Configuration Item*, which consists of a (*Configuration*) *Key ID* and its (*Configuration*) *Value*:

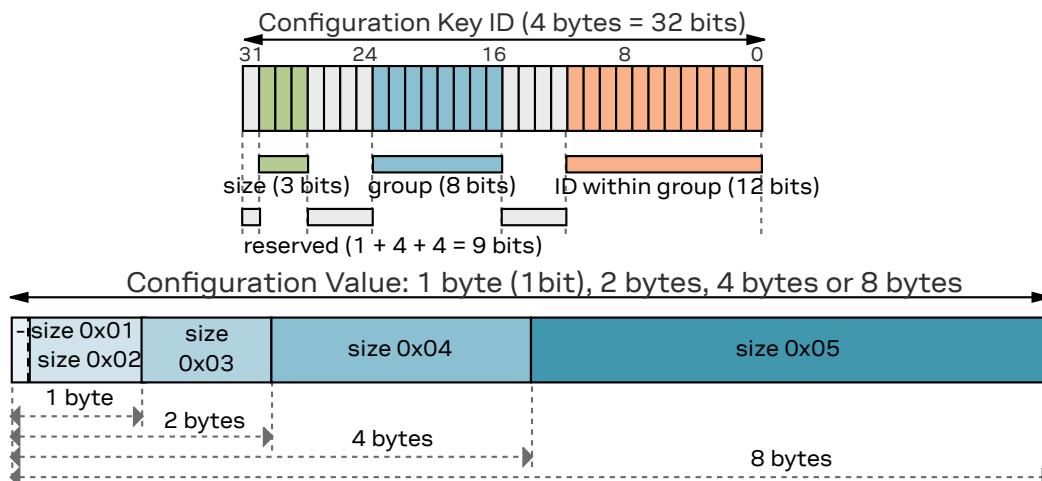

A Configuration Key ID is a 32-bit integer value, which is split into the following parts:

- Bit 31: Currently unused. Reserved for future use.
- Bits 30...28: Three bits that indicate the storage size of a Configuration Value (range 0x01-0x05, see below)
- Bits 27...24: Currently unused. Reserved for future use.
- Bits 23...16: Eight bits that define a unique group ID (range 0x01-0xfe)
- Bits 15...12: Currently unused. Reserved for future use.
- Bits 11...0: Twelve bits that define a unique item ID within a group (range 0x001-0xffe)

The entire 32-bit value is the unique Key ID, which uniquely identifies a particular item. The numeric representation of the Key ID uses the lower-case hexadecimal format, such as 0x20c400a1. An easier, more readable text representation uses the form CFG-GROUP-ITEM. This is also referred to as the (*Configuration*) *Key Name*.

Supported storage size identifiers (bits 30...28 of the Key ID) are:

- 0x01: one bit (the actual storage used is one byte, but only the least significant bit is used)
- 0x02: one byte
- 0x03: two bytes
- 0x04: four bytes

- 0x05: eight bytes

Each Configuration Item is of a certain type, which defines the interpretation of the raw binary data (see also [UBX data types](#)):

- U1, U2, U4, U8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths
- I1, I2, I4, I8: signed little-endian, two's complement integers of 8-, 16-, 32- and 64-bit widths
- R4, R8: IEEE 754 single (32-bit) and double (64-bit) precision floats
- E1, E2, E4: unsigned little-endian enumeration of 8-, 16-, and 32-bit widths
- X1, X2, X4, X8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths for bitfields and other binary data, such as strings
- L: single-bit boolean (true = 1, false = 0), stored as U1


## 6.3 Configuration layers

The receiver has several *Configuration Layers*. They are separate sources of Configuration Items. Some of the layers are read-only and others are modifiable. Layers are organized in terms of priority. Values in a high-priority layer replace values stored in a low-priority layer. At startup, the receiver reads all configuration layers and stacks up the items to create the *Current Configuration*, which is used by the receiver at run-time.

The following configuration layers are available (in order of priority, highest priority first):

- **RAM:** This layer contains items stored in volatile RAM. This is the Current Configuration. The value of any item can be set by the user at run-time (see [UBX protocol interface](#)) and it is effective immediately.
- **BBR:** This layer contains items stored in the battery-backed RAM. The contents in this layer are preserved as long as a battery backup supply is provided during off periods. The value of any item can be set by the user at run-time (see [UBX protocol interface](#)) and it becomes effective when the receiver is restarted.
- **Flash:** This layer contains items stored permanently in the external flash memory. This layer is only available if there is a usable external flash memory. The value of any item can be set by the user at run-time (see [UBX protocol interface](#)) and it becomes effective when the receiver is restarted.
- **Default:** This layer contains all items known to the running receiver software and their hard-coded default values. Data in this layer is not writable.

The stacking of the configuration items from the different layers (sources) in order to construct the Current Configuration in the RAM Layer is depicted in the following figure. For each defined item, i.e. for each item in the Default Layer, the receiver software goes through the layers above and stacks all the found items on top. Some items may not be present in every layer. The result is the RAM Layer filled with all configuration items given Configuration Values coming from the highest priority layer the corresponding item was present. In the example figure below bold text indicates the source of the value in the Current Configuration (the RAM Layer). Empty boxes mean that the layer can hold the item but that it is not currently stored there. Boxes with text mean that an item is currently stored in the layer.

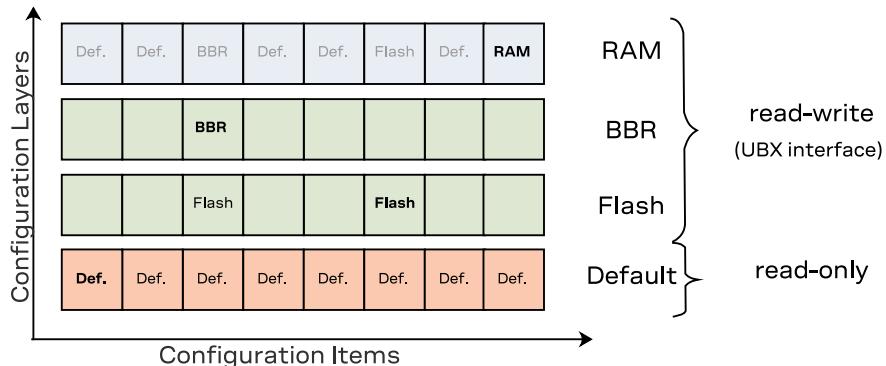

In the example figure above several items (e.g. the first item) are only set in the Default Layer and hence the default value ends up in Current Configuration in the RAM Layer. The third item is present in the Default, Flash and BBR Layers. The value from the BBR Layer has the highest priority and therefore it ends up in the RAM Layer. On the other hand, the default value of the sixth item is changed by the value in the Flash Layer. The value of the last item is changed in the RAM Layer only, i.e. upon startup the value in the RAM Layer was the value from the Default Layer, but the user has changed the value in the RAM Layer at run-time.

## 6.4 Configuration interface access

The following sections describe the existing interfaces to access the Configuration Database.

### 6.4.1 UBX protocol interface


The following [UBX protocol](#) messages are available to access the Configuration Database:

- [UBX-CFG-VALGET](#) to read configuration items from the database
- [UBX-CFG-VALSET](#) to set configuration items in the database
- [UBX-CFG-VALDEL](#) to delete configuration items from the database

## 6.5 Configuration data

Configuration data is the binary representation of a list of Key ID and Value pairs. It is formed by concatenating keys (U4 values) and values (variable type) without any padding. This format is used in the [UBX-CFG-VALSET](#) and [UBX-CFG-VALGET](#) messages.

The figure below shows an example. The four Items (Key ID - Value pairs) on the left use the four fundamental storage sizes: one byte (L, U1, I1, E1 and X1 types), 2 bytes (U2, I2, E2 and X2 types), four byte (U4, I4, E4, X4 and R4 types) and eight bytes (U8, I8, X8 and R8 types). When concatenated (right) the Key IDs and Values are not aligned and there is no padding.

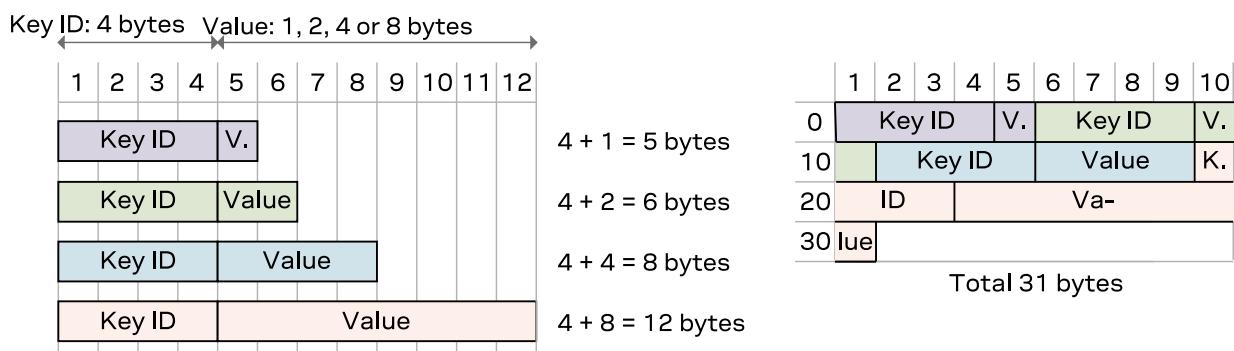


Note that this is an arbitrary example and any number of items of any value storage size can be concatenated the same way.

## 6.6 Configuration transactions

The configuration interface supports two mechanisms of configuration: the first is a transactionless mechanism where sent configuration changes are applied immediately to the configuration layer(s) requested. The second mechanism is a configuration transaction.

A transaction offers a way of queuing multiple configuration changes. It is particularly useful where different configuration keys depend on each other in such a way that sending one before the other can cause the configuration to be rejected. The queued configuration change requests are stored then checked collectively before being applied to the receiver.

A transaction can have the following states described in the figure below.

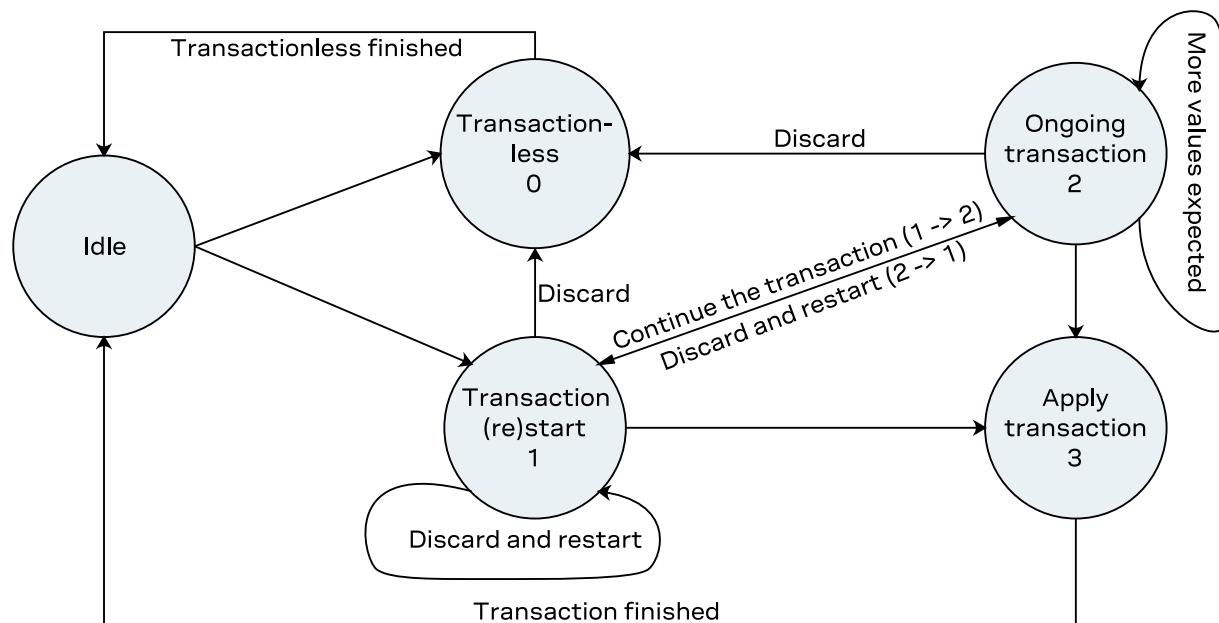

When starting a transaction, specify the layer(s) to apply the changes to. This list of configuration layer(s) must be observed throughout the transaction states. Modifying the configuration layer(s) mid-transaction causes the transaction to be aborted and consequently, no queued changes will be applied.

In the start transaction state, the receiver locks the configuration database so that changes from another entity or message cannot be applied. It is possible to send a configuration key-value pairs with the start transaction state. These are queued waiting to be applied.

In the ongoing state, a configuration key and value must be sent. The receiver aborts the transaction and does not apply any changes if this condition is violated. Key-value pairs sent in the ongoing state are queued waiting to be applied.

In the apply state, the receiver collectively checks the queued changes and applied them to the requested configuration layer(s). Note that any additional key-value pairs sent within the apply state are ignored.

Note that a transaction can only come from a single source, a **UBX-CFG-VALSET** message or a **UBX-CFG-VALDEL** message. This means that in any given transaction it is not possible to mix a delete

and a save request. Starting a transaction from a different source aborts the current transaction and the queued changes are not applied.

Refer to [UBX-CFG-VALSET](#) and [UBX-CFG-VALDEL](#) messages for a detailed description of how to set up a configuration transaction, its limitations and conditions that would cause the transaction to be rejected.

## 6.7 Configuration reset behavior

The RAM layer is always rebuilt from the layers below when the chip's processor comes out from reset. When using [UBX-CFG-RST](#) the processor goes through a reset cycle with these reset types (resetMode field):

- 0x00 hardware reset (watchdog) immediately
- 0x01 controlled software reset
- 0x04 hardware reset (watchdog) after shutdown

See section Forcing a receiver reset in the integration manual.

## 6.8 Configuration overview

Group	Description
CFG-BDS	BeiDou system configuration
CFG-GAL	Galileo system configuration
CFG-GEOFENCE	Geofencing configuration
CFG-HW	Hardware configuration
CFG-I2C	Configuration of the I2C interface
CFG-I2CINPROT	Input protocol configuration of the I2C interface
CFG-I2COUTPROT	Output protocol configuration of the I2C interface
CFG-INFMSG	Information message configuration
CFG-LOGFILTER	Data logger configuration
CFG-MOT	Motion detector configuration
CFG-MSGOUT	Message output configuration
CFG-NAV2	Secondary output configuration
CFG-NAVHPG	High precision navigation configuration
CFG-NAVSPG	Standard precision navigation configuration
CFG-NMEA	NMEA protocol configuration
CFG-ODO	Odometer and low-speed course over ground filter configuration
CFG-QZSS	QZSS system configuration
CFG-RATE	Navigation and measurement rate configuration
CFG-RINV	Remote inventory
CFG-RTCM	RTCM protocol configuration
CFG-SBAS	SBAS configuration
CFG-SEC	Security configuration
CFG-SIGNAL	Satellite systems (GNSS) signal configuration
CFG-SPARTN	SPARTN configuration
CFG-SPI	Configuration of the SPI interface

Group	Description
CFG-SPIINPROT	Input protocol configuration of the SPI interface
CFG-SPIOUTPROT	Output protocol configuration of the SPI interface
CFG-TMODE	Time mode configuration
CFG-TP	Time pulse configuration
CFG-TXREADY	TX ready configuration
CFG-UART1	Configuration of the UART1 interface
CFG-UART1INPROT	Input protocol configuration of the UART1 interface
CFG-UART1OUTPROT	Output protocol configuration of the UART1 interface
CFG-UART2	Configuration of the UART2 interface
CFG-UART2INPROT	Input protocol configuration of the UART2 interface
CFG-UART2OUTPROT	Output protocol configuration of the UART2 interface
CFG-USB	Configuration of the USB interface
CFG-USBINPROT	Input protocol configuration of the USB interface
CFG-USBOUTPROT	Output protocol configuration of the USB interface

## 6.9 Configuration reference

### 6.9.1 CFG-BDS: BeiDou system configuration

Note that enabling and disabling of individual GNSS is done via the [CFG-SIGNAL](#) configuration group.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-BDS-USE_GEO_PRN	0x10340014	L	-	-	Use BeiDou geostationary satellites (PRN 1-5 and 59-63)

Table 5: CFG-BDS configuration items

### 6.9.2 CFG-GAL: Galileo system configuration

Note that enabling and disabling of individual GNSS is done via the [CFG-SIGNAL](#) configuration group.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-GAL-USE_OSNMA	0x10350005	L	-	-	Enable using Galileo Open Service Navigation Message Authentication (OSNMA) protocol
CFG-GAL-OSNMA_MINTAGLENGTH	0x20350007	U1	-	-	Minimum equivalent tag length
					Navigation data authentication is achieved after verifying a minimum number of tag bits associated to the same navigation data set. The receiver shall accumulate N tags of length L bits such that $L \times N \geq OSNMA\_MINTAGLENGTH$ . The value of the minimum equivalent tag length in OSNMA User ICD for the Test Phase (v.1) is 80 bits. Maximum value supported is 140 bits, 7 authentications for the minimum tag length (20 bits).
CFG-GAL-OSNMA_TIMESYNC	0x10350009	L	-	-	Apply the time synchronization requirement

Configuration item	Key ID	Type	Scale	Unit	Description
The security of OSNMA protocol regarding replay attacks depends on the fulfilment by the receiver of the time synchronization requirement described in Annex 3 of OSNMA Receiver Guidelines for the Test Phase (Issue 1.0, November 2021). The time synchronization requirement establishes that, to apply OSNMA protocol, the receiver must know an estimation of the Galileo System Time and its uncertainty from an independent and trusted source. This configuration key allows to activate OSNMA protocol execution even if no external time is provided, as it will still provide protection against certain spoofing attacks.					
If this configuration key is set to true, external time must be provided through <a href="#">UBX-MGA-INI-TIME_UTC</a> or <a href="#">UBX-MGA-INI-TIME_GNSS</a> , indicating in the corresponding field that the time reported comes from a trusted source. Otherwise, OSNMA protocol will not be applied. The accuracy of the time provided in <a href="#">UBX-MGA-INI-TIME_UTC</a> or <a href="#">UBX-MGA-INI-TIME_GNSS</a> must be better than 15 seconds to use MAC ADKD type 0 and better than 150 s to use MAC ADKD type 12. When the time accuracy degrades beyond 150 seconds, the OSNMA protocol cannot be applied.					
If this configuration key is set to false, OSNMA protocol is applied without an external time input. Note that this configuration is not compliant with OSNMA User ICD for the Test Phase (Issue 1.0, November 2021), which indicates that external time must be provided to execute OSNMA.					

Table 6: CFG-GAL configuration items

### 6.9.3 CFG-GEOFENCE: Geofencing configuration

Configuration for the geofencing feature. See section Geofencing in the integration manual for feature details.

If the receiver is sent a valid new configuration, it will respond with a [UBX-ACK-ACK](#) message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a [UBX-ACK-NAK](#) and continuing operation with the previous configuration.

Note that the acknowledge message does not indicate whether the PIO configuration has been successfully applied (pin assigned), it only indicates the successful configuration of the feature. The configured PIO must be previously unoccupied for successful assignment.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-GEOFENCE-CONFLVL	0x20240011	E1	-	-	Required confidence level for state evaluation This value times the position's standard deviation (sigma) defines the confidence band. See <a href="#">Table 8</a> below for a list of possible constants for this item.
CFG-GEOFENCE-USE_PIO	0x10240012	L	-	-	Use PIO combined fence state output
CFG-GEOFENCE-PINPOL	0x20240013	E1	-	-	PIO pin polarity See <a href="#">Table 9</a> below for a list of possible constants for this item.
CFG-GEOFENCE-PIN	0x20240014	U1	-	-	PIO pin number
CFG-GEOFENCE-USE_FENCE1	0x10240020	L	-	-	Use first geofence
CFG-GEOFENCE-FENCE1_LAT	0x40240021	I4	1e-7	deg	Latitude of the first geofence circle center
CFG-GEOFENCE-FENCE1_LON	0x40240022	I4	1e-7	deg	Longitude of the first geofence circle center
CFG-GEOFENCE-FENCE1_RAD	0x40240023	U4	0.01	m	Radius of the first geofence circle
CFG-GEOFENCE-USE_FENCE2	0x10240030	L	-	-	Use second geofence
CFG-GEOFENCE-FENCE2_LAT	0x40240031	I4	1e-7	deg	Latitude of the second geofence circle center
CFG-GEOFENCE-FENCE2_LON	0x40240032	I4	1e-7	deg	Longitude of the second geofence circle center
CFG-GEOFENCE-FENCE2_RAD	0x40240033	U4	0.01	m	Radius of the second geofence circle
CFG-GEOFENCE-USE_FENCE3	0x10240040	L	-	-	Use third geofence
CFG-GEOFENCE-FENCE3_LAT	0x40240041	I4	1e-7	deg	Latitude of the third geofence circle center
CFG-GEOFENCE-FENCE3_LON	0x40240042	I4	1e-7	deg	Longitude of the third geofence circle center
CFG-GEOFENCE-FENCE3_RAD	0x40240043	U4	0.01	m	Radius of the third geofence circle
CFG-GEOFENCE-USE_FENCE4	0x10240050	L	-	-	Use fourth geofence

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-GEOFENCE-FENCE4_LAT	0x40240051	I4	1e-7	deg	Latitude of the fourth geofence circle center
CFG-GEOFENCE-FENCE4_LON	0x40240052	I4	1e-7	deg	Longitude of the fourth geofence circle center
CFG-GEOFENCE-FENCE4_RAD	0x40240053	U4	0.01	m	Radius of the fourth geofence circle

**Table 7: CFG-GEOFENCE configuration items**

Constant	Value	Description
L000	0	No confidence
L680	1	68%
L950	2	95%
L997	3	99.7%
L9999	4	99.99%
L99999	5	99.9999%

**Table 8: Constants for CFG-GEOFENCE-CONFLVL**

Constant	Value	Description
LOW_IN	0	PIO low means inside geofence
LOW_OUT	1	PIO low means outside geofence

**Table 9: Constants for CFG-GEOFENCE-PINPOL**

## 6.9.4 CFG-HW: Hardware configuration

Hardware configuration settings.

Note that not all settings are available for all products. See the applicable data sheet for supported features.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	Active antenna voltage control flag Enable active antenna voltage control flag. Used by EXT and MADC engines.
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	Short antenna detection flag Enable short antenna detection flag. Used by EXT and MADC engines.
CFG-HW-ANT_CFG_SHORTDET_POL	0x10a30030	L	-	-	Short antenna detection polarity Set to true if polarity of the antenna short detection is active low. Used by EXT engine.
CFG-HW-ANT_CFG_OPENDET	0x10a30031	L	-	-	Open antenna detection flag Enable open antenna detection flag. Used by EXT and MADC engines.
CFG-HW-ANT_CFG_OPENDET_POL	0x10a30032	L	-	-	Open antenna detection polarity Set to true if polarity of the antenna open detection is active low. Used by EXT engine.
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	Power down antenna flag Enable power down antenna logic in the event of antenna short circuit. CFG-HW-ANT_CFG_SHORTDET must be enabled to use this feature. Used by EXT and MADC engines.
CFG-HW-ANT_CFG_PWRDOWN_POL	0x10a30034	L	-	-	Power down antenna logic polarity Set to true if polarity of the antenna power down logic is active high. Used by EXT and MADC engines.
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	Automatic recovery from short state flag Enable automatic recovery from short state. Used by EXT and MADC engines.
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	Antenna switch PIO number Antenna switch PIO number. Used by EXT and MADC engines.
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	Antenna short detection PIO number

Configuration item	Key ID	Type	Scale	Unit	Description
Antenna short detection PIO number. Used by EXT engine.					
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	Antenna open detection PIO number
Antenna open detection PIO number. Used by EXT engine.					
CFG-HW-ANT_ON_SHORT_US	0x30a3003c	U2	-	-	ANT on->short timeout[us]
Delay in microseconds between turning the antenna power supply on and enabling the antenna short circuit detection.					
CFG-HW-ANT_SUP_ENGINE	0x20a30054	E1	-	-	Antenna supervisor engine selection
Select the engine used to evaluate antenna state.					
The EXT engine uses an external comparator for current measurement. The MADC engine uses built-in measurement ADC and requires only a shunt resistor for current measurement. The MADC engine is supported only in selected u-blox generation 9 receivers.					
See <a href="#">Table 11</a> below for a list of possible constants for this item.					
CFG-HW-ANT_SUP_SHORT THR	0x20a30055	U1	-	mV	Antenna supervisor MADC engine short detection threshold
Threshold above which antenna short is detected. Used by MADC engine.					
CFG-HW-ANT_SUP_OPEN_THR	0x20a30056	U1	-	mV	Antenna supervisor MADC engine open detection threshold
Threshold below which antenna open/disconnected is detected. Used by MADC engine.					

**Table 10: CFG-HW configuration items**

Constant	Value	Description
EXT	0	Use the EXT engine.
MADC	1	Use the MADC engine.

**Table 11: Constants for CFG-HW-ANT\_SUP\_ENGINE**

## 6.9.5 CFG-I2C: Configuration of the I2C interface

Settings needed to configure the I2C communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-I2C-ADDRESS	0x20510001	U1	-	-	I2C address of the receiver (7 bits)
CFG-I2C-EXTENDEDTIMEOUT	0x10510002	L	-	-	Flag to disable timeouting the interface after 1.5 s
CFG-I2C-ENABLED	0x10510003	L	-	-	Flag to indicate if the I2C interface should be enabled

**Table 12: CFG-I2C configuration items**

## 6.9.6 CFG-I2CINPROT: Input protocol configuration of the I2C interface

Input protocol enable flags of the I2C interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-I2CINPROT-UBX	0x10710001	L	-	-	Flag to indicate if UBX should be an input protocol on I2C
CFG-I2CINPROT-NMEA	0x10710002	L	-	-	Flag to indicate if NMEA should be an input protocol on I2C
CFG-I2CINPROT-RTCM3X	0x10710004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on I2C

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-I2CINPROT-SPARTN</i>	0x10710005	L	-	-	Flag to indicate if SPARTN should be an input protocol on I2C

Table 13: CFG-I2CINPROT configuration items

## 6.9.7 CFG-I2COUTPROT: Output protocol configuration of the I2C interface

Output protocol enable flags of the I2C interface.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-I2COUTPROT-UBX</i>	0x10720001	L	-	-	Flag to indicate if UBX should be an output protocol on I2C
<i>CFG-I2COUTPROT-NMEA</i>	0x10720002	L	-	-	Flag to indicate if NMEA should be an output protocol on I2C
<i>CFG-I2COUTPROT-RTCM3X</i>	0x10720004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on I2C

Table 14: CFG-I2COUTPROT configuration items

## 6.9.8 CFG-INFMSG: Information message configuration

Information message configuration for the NMEA and UBX protocols.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-INFMSG-UBX_I2C</i>	0x20920001	X1	-	-	Information message enable flags for the UBX protocol on the I2C interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				
<i>CFG-INFMSG-UBX_UART1</i>	0x20920002	X1	-	-	Information message enable flags for the UBX protocol on the UART1 interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				
<i>CFG-INFMSG-UBX_UART2</i>	0x20920003	X1	-	-	Information message enable flags for the UBX protocol on the UART2 interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				
<i>CFG-INFMSG-UBX_USB</i>	0x20920004	X1	-	-	Information message enable flags for the UBX protocol on the USB interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				
<i>CFG-INFMSG-UBX_SPI</i>	0x20920005	X1	-	-	Information message enable flags for the UBX protocol on the SPI interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				
<i>CFG-INFMSG-NMEA_I2C</i>	0x20920006	X1	-	-	Information message enable flags for the NMEA protocol on the I2C interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				
<i>CFG-INFMSG-NMEA_UART1</i>	0x20920007	X1	-	-	Information message enable flags for the NMEA protocol on the UART1 interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				
<i>CFG-INFMSG-NMEA_UART2</i>	0x20920008	X1	-	-	Information message enable flags for the NMEA protocol on the UART2 interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				
<i>CFG-INFMSG-NMEA_USB</i>	0x20920009	X1	-	-	Information message enable flags for the NMEA protocol on the USB interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				
<i>CFG-INFMSG-NMEA_SPI</i>	0x2092000a	X1	-	-	Information message enable flags for the NMEA protocol on the SPI interface
	See <a href="#">Table 16</a> below for a list of possible constants for this item.				

Table 15: CFG-INFMSG configuration items

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

Table 16: Constants for CFG-INFMSG-UBX\_I2C, CFG-INFMSG-UBX\_UART1, CFG-INFMSG-UBX\_UART2, CFG-INFMSG-UBX\_USB, CFG-INFMSG-UBX\_SPI, CFG-INFMSG-NMEA\_I2C, CFG-INFMSG-NMEA\_UART1, CFG-INFMSG-NMEA\_UART2, CFG-INFMSG-NMEA\_USB, CFG-INFMSG-NMEA\_SPI

### 6.9.9 CFG-LOGFILTER: Data logger configuration

This group can be used to configure the data logger, i.e. to enable/disable the log recording and to get/set the position entry filter settings.

Position entries can be filtered based on time difference, position difference or current speed thresholds. Position and speed filtering also have a minimum time interval. A position is logged if any of the thresholds are exceeded. If a threshold is set to zero it is ignored. The maximum rate of position logging is 1 Hz.

The filter settings will be configured to the provided values only if the APPLY\_ALL\_FILTERS flag is set. This allows the recording to be enabled/disabled independently of configuring the filter settings.

It is possible to configure the data logger in the absence of a logging file. By doing so, once the logging file is created, the data logger configuration will take effect immediately and logging recording and filtering will activate according to the configuration.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-LOGFILTER-RECORD_ENA	0x10de0002	L	-	-	Recording enabled Set to true when recording enabled.
CFG-LOGFILTER-APPLY_ALL_FILTERS	0x10de0004	L	-	-	Apply all filter settings Set to true when all filter settings are to be applied, not just recording enabling/disabling.
CFG-LOGFILTER-MIN_INTERVAL	0x30de0005	U2	-	s	Minimum time interval between logged positions Minimum time interval between logged positions (0 = not set). <b>This is only applied in combination with the speed and/or position thresholds.</b> If both MIN_INTERVAL and TIME_THRS are set, MIN_INTERVAL must be less than or equal to TIME_THRS. Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.
CFG-LOGFILTER-TIME_THRS	0x30de0006	U2	-	s	Time threshold If the time difference is greater than the threshold then the position is logged (0 = not set). Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.
CFG-LOGFILTER-SPEED_THRS	0x30de0007	U2	-	m/s	Speed threshold If the current speed is greater than the threshold then the position is logged (0 = not set). MIN_INTERVAL also applies. Note: value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.
CFG-LOGFILTER-POSITION_THRS	0x40de0008	U4	-	m	Position threshold

Configuration item	Key ID	Type	Scale	Unit	Description
If the 3D position difference is greater than the threshold then the position is logged (0 = not set). MIN_INTERVAL also applies.					
Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.					

**Table 17: CFG-LOGFILTER configuration items**

### 6.9.10 CFG-MOT: Motion detector configuration

The items in this group specify the parameters used for the internal receiver motion detector. The platform motion is assessed by combining the detected motion of different detectors looking at specific data types (i.e. GNSS, gyroscopes, accelerometers, wheel ticks). The decision thresholds of the internal detectors can be specified using the configuration items in this group.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MOT-GNSSSPEED_THRS</i>	0x20250038	U1	0.01	m/s	Static hold speed threshold, below which the receiver is considered to be stationary
Set this parameter to 0 to enable the default firmware value or behavior.					
<i>CFG-MOT-GNSSDIST_THRS</i>	0x3025003b	U2	1.0	m	Static hold distance threshold, within which the receiver is considered to be stationary
Set this parameter to 0 to enable the default firmware value or behavior.					

**Table 18: CFG-MOT configuration items**

### 6.9.11 CFG-MSGOUT: Message output configuration

For each message and port a separate output rate (per second, per epoch) can be configured.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-NMEA_ID_DTM_I2C</i>	0x209100a6	U1	-	-	Output rate of the NMEA-GX-DTM message on port I2C
<i>CFG-MSGOUT-NMEA_ID_DTM_SPI</i>	0x209100aa	U1	-	-	Output rate of the NMEA-GX-DTM message on port SPI
<i>CFG-MSGOUT-NMEA_ID_DTM_UART1</i>	0x209100a7	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART1
<i>CFG-MSGOUT-NMEA_ID_DTM_UART2</i>	0x209100a8	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART2
<i>CFG-MSGOUT-NMEA_ID_DTM_USB</i>	0x209100a9	U1	-	-	Output rate of the NMEA-GX-DTM message on port USB
<i>CFG-MSGOUT-NMEA_ID_GBS_I2C</i>	0x209100dd	U1	-	-	Output rate of the NMEA-GX-GBS message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GBS_SPI</i>	0x209100e1	U1	-	-	Output rate of the NMEA-GX-GBS message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GBS_UART1</i>	0x209100de	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GBS_UART2</i>	0x209100df	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GBS_USB</i>	0x209100e0	U1	-	-	Output rate of the NMEA-GX-GBS message on port USB
<i>CFG-MSGOUT-NMEA_ID_GGA_I2C</i>	0x209100ba	U1	-	-	Output rate of the NMEA-GX-GGA message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GGA_SPI</i>	0x209100be	U1	-	-	Output rate of the NMEA-GX-GGA message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GGA_UART1</i>	0x209100bb	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GGA_UART2</i>	0x209100bc	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART2

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-NMEA_ID_GGA_USB</i>	0x209100bd	U1	-	-	Output rate of the NMEA-GX-GGA message on port USB
<i>CFG-MSGOUT-NMEA_ID_GLL_I2C</i>	0x209100c9	U1	-	-	Output rate of the NMEA-GX-GLL message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GLL_SPI</i>	0x209100cd	U1	-	-	Output rate of the NMEA-GX-GLL message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GLL_UART1</i>	0x209100ca	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GLL_UART2</i>	0x209100cb	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GLL_USB</i>	0x209100cc	U1	-	-	Output rate of the NMEA-GX-GLL message on port USB
<i>CFG-MSGOUT-NMEA_ID_GNS_I2C</i>	0x209100b5	U1	-	-	Output rate of the NMEA-GX-GNS message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GNS_SPI</i>	0x209100b9	U1	-	-	Output rate of the NMEA-GX-GNS message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GNS_UART1</i>	0x209100b6	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GNS_UART2</i>	0x209100b7	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GNS_USB</i>	0x209100b8	U1	-	-	Output rate of the NMEA-GX-GNS message on port USB
<i>CFG-MSGOUT-NMEA_ID_GRS_I2C</i>	0x209100ce	U1	-	-	Output rate of the NMEA-GX-GRS message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GRS_SPI</i>	0x209100d2	U1	-	-	Output rate of the NMEA-GX-GRS message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GRS_UART1</i>	0x209100cf	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GRS_UART2</i>	0x209100d0	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GRS_USB</i>	0x209100d1	U1	-	-	Output rate of the NMEA-GX-GRS message on port USB
<i>CFG-MSGOUT-NMEA_ID_GSA_I2C</i>	0x209100bf	U1	-	-	Output rate of the NMEA-GX-GSA message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GSA_SPI</i>	0x209100c3	U1	-	-	Output rate of the NMEA-GX-GSA message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GSA_UART1</i>	0x209100c0	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GSA_UART2</i>	0x209100c1	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GSA_USB</i>	0x209100c2	U1	-	-	Output rate of the NMEA-GX-GSA message on port USB
<i>CFG-MSGOUT-NMEA_ID_GST_I2C</i>	0x209100d3	U1	-	-	Output rate of the NMEA-GX-GST message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GST_SPI</i>	0x209100d7	U1	-	-	Output rate of the NMEA-GX-GST message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GST_UART1</i>	0x209100d4	U1	-	-	Output rate of the NMEA-GX-GST message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GST_UART2</i>	0x209100d5	U1	-	-	Output rate of the NMEA-GX-GST message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GST_USB</i>	0x209100d6	U1	-	-	Output rate of the NMEA-GX-GST message on port USB

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-NMEA_ID_GSV_I2C</i>	0x209100c4	U1	-	-	Output rate of the NMEA-GX-GSV message on port I2C
<i>CFG-MSGOUT-NMEA_ID_GSV_SPI</i>	0x209100c8	U1	-	-	Output rate of the NMEA-GX-GSV message on port SPI
<i>CFG-MSGOUT-NMEA_ID_GSV_UART1</i>	0x209100c5	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART1
<i>CFG-MSGOUT-NMEA_ID_GSV_UART2</i>	0x209100c6	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART2
<i>CFG-MSGOUT-NMEA_ID_GSV_USB</i>	0x209100c7	U1	-	-	Output rate of the NMEA-GX-GSV message on port USB
<i>CFG-MSGOUT-NMEA_ID_RLM_I2C</i>	0x20910400	U1	-	-	Output rate of the NMEA-GX-RLM message on port I2C
<i>CFG-MSGOUT-NMEA_ID_RLM_SPI</i>	0x20910404	U1	-	-	Output rate of the NMEA-GX-RLM message on port SPI
<i>CFG-MSGOUT-NMEA_ID_RLM_UART1</i>	0x20910401	U1	-	-	Output rate of the NMEA-GX-RLM message on port UART1
<i>CFG-MSGOUT-NMEA_ID_RLM_UART2</i>	0x20910402	U1	-	-	Output rate of the NMEA-GX-RLM message on port UART2
<i>CFG-MSGOUT-NMEA_ID_RLM_USB</i>	0x20910403	U1	-	-	Output rate of the NMEA-GX-RLM message on port USB
<i>CFG-MSGOUT-NMEA_ID_RMC_I2C</i>	0x209100ab	U1	-	-	Output rate of the NMEA-GX-RMC message on port I2C
<i>CFG-MSGOUT-NMEA_ID_RMC_SPI</i>	0x209100af	U1	-	-	Output rate of the NMEA-GX-RMC message on port SPI
<i>CFG-MSGOUT-NMEA_ID_RMC_UART1</i>	0x209100ac	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART1
<i>CFG-MSGOUT-NMEA_ID_RMC_UART2</i>	0x209100ad	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART2
<i>CFG-MSGOUT-NMEA_ID_RMC_USB</i>	0x209100ae	U1	-	-	Output rate of the NMEA-GX-RMC message on port USB
<i>CFG-MSGOUT-NMEA_ID_VLW_I2C</i>	0x209100e7	U1	-	-	Output rate of the NMEA-GX-VLW message on port I2C
<i>CFG-MSGOUT-NMEA_ID_VLW_SPI</i>	0x209100eb	U1	-	-	Output rate of the NMEA-GX-VLW message on port SPI
<i>CFG-MSGOUT-NMEA_ID_VLW_UART1</i>	0x209100e8	U1	-	-	Output rate of the NMEA-GX-VLW message on port UART1
<i>CFG-MSGOUT-NMEA_ID_VLW_UART2</i>	0x209100e9	U1	-	-	Output rate of the NMEA-GX-VLW message on port UART2
<i>CFG-MSGOUT-NMEA_ID_VLW_USB</i>	0x209100ea	U1	-	-	Output rate of the NMEA-GX-VLW message on port USB
<i>CFG-MSGOUT-NMEA_ID_VTG_I2C</i>	0x209100b0	U1	-	-	Output rate of the NMEA-GX-VTG message on port I2C
<i>CFG-MSGOUT-NMEA_ID_VTG_SPI</i>	0x209100b4	U1	-	-	Output rate of the NMEA-GX-VTG message on port SPI
<i>CFG-MSGOUT-NMEA_ID_VTG_UART1</i>	0x209100b1	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART1
<i>CFG-MSGOUT-NMEA_ID_VTG_UART2</i>	0x209100b2	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART2
<i>CFG-MSGOUT-NMEA_ID_VTG_USB</i>	0x209100b3	U1	-	-	Output rate of the NMEA-GX-VTG message on port USB
<i>CFG-MSGOUT-NMEA_ID_ZDA_I2C</i>	0x209100d8	U1	-	-	Output rate of the NMEA-GX-ZDA message on port I2C

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-NMEA_ID_ZDA_SPI</i>	0x209100dc	U1	-	-	Output rate of the NMEA-GX-ZDA message on port SPI
<i>CFG-MSGOUT-NMEA_ID_ZDA_UART1</i>	0x209100d9	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART1
<i>CFG-MSGOUT-NMEA_ID_ZDA_UART2</i>	0x209100da	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART2
<i>CFG-MSGOUT-NMEA_ID_ZDA_USB</i>	0x209100db	U1	-	-	Output rate of the NMEA-GX-ZDA message on port USB
<i>CFG-MSGOUT-NMEA_NAV2_ID_GGA_I2C</i>	0x20910661	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port I2C
<i>CFG-MSGOUT-NMEA_NAV2_ID_GGA_SPI</i>	0x20910665	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port SPI
<i>CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART1</i>	0x20910662	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port UART1
<i>CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART2</i>	0x20910663	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port UART2
<i>CFG-MSGOUT-NMEA_NAV2_ID_GGA_USB</i>	0x20910664	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port USB
<i>CFG-MSGOUT-NMEA_NAV2_ID_GLL_I2C</i>	0x20910670	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port I2C
<i>CFG-MSGOUT-NMEA_NAV2_ID_GLL_SPI</i>	0x20910674	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port SPI
<i>CFG-MSGOUT-NMEA_NAV2_ID_GLL_UART1</i>	0x20910671	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port UART1
<i>CFG-MSGOUT-NMEA_NAV2_ID_GLL_UART2</i>	0x20910672	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port UART2
<i>CFG-MSGOUT-NMEA_NAV2_ID_GLL_USB</i>	0x20910673	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port USB
<i>CFG-MSGOUT-NMEA_NAV2_ID_GNS_I2C</i>	0x2091065c	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port I2C
<i>CFG-MSGOUT-NMEA_NAV2_ID_GNS_SPI</i>	0x20910660	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port SPI
<i>CFG-MSGOUT-NMEA_NAV2_ID_GNS_UART1</i>	0x2091065d	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port UART1
<i>CFG-MSGOUT-NMEA_NAV2_ID_GNS_UART2</i>	0x2091065e	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port UART2
<i>CFG-MSGOUT-NMEA_NAV2_ID_GNS_USB</i>	0x2091065f	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port USB
<i>CFG-MSGOUT-NMEA_NAV2_ID_GSA_I2C</i>	0x20910666	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port I2C
<i>CFG-MSGOUT-NMEA_NAV2_ID_GSA_SPI</i>	0x2091066a	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port SPI
<i>CFG-MSGOUT-NMEA_NAV2_ID_GSA_UART1</i>	0x20910667	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port UART1
<i>CFG-MSGOUT-NMEA_NAV2_ID_GSA_UART2</i>	0x20910668	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port UART2
<i>CFG-MSGOUT-NMEA_NAV2_ID_GSA_USB</i>	0x20910669	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port USB
<i>CFG-MSGOUT-NMEA_NAV2_ID_RMC_I2C</i>	0x20910652	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port I2C
<i>CFG-MSGOUT-NMEA_NAV2_ID_RMC_SPI</i>	0x20910656	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
<code>CFG-MSGOUT-NMEA_NAV2_ID_RMC_UART1</code>	0x20910653	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port UART1
<code>CFG-MSGOUT-NMEA_NAV2_ID_RMC_UART2</code>	0x20910654	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port UART2
<code>CFG-MSGOUT-NMEA_NAV2_ID_RMC_USB</code>	0x20910655	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port USB
<code>CFG-MSGOUT-NMEA_NAV2_ID_VTG_I2C</code>	0x20910657	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port I2C
<code>CFG-MSGOUT-NMEA_NAV2_ID_VTG_SPI</code>	0x2091065b	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port SPI
<code>CFG-MSGOUT-NMEA_NAV2_ID_VTG_UART1</code>	0x20910658	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port UART1
<code>CFG-MSGOUT-NMEA_NAV2_ID_VTG_UART2</code>	0x20910659	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port UART2
<code>CFG-MSGOUT-NMEA_NAV2_ID_VTG_USB</code>	0x2091065a	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port USB
<code>CFG-MSGOUT-NMEA_NAV2_ID_ZDA_I2C</code>	0x2091067f	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port I2C
<code>CFG-MSGOUT-NMEA_NAV2_ID_ZDA_SPI</code>	0x20910683	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port SPI
<code>CFG-MSGOUT-NMEA_NAV2_ID_ZDA_UART1</code>	0x20910680	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port UART1
<code>CFG-MSGOUT-NMEA_NAV2_ID_ZDA_UART2</code>	0x20910681	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port UART2
<code>CFG-MSGOUT-NMEA_NAV2_ID_ZDA_USB</code>	0x20910682	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port USB
<code>CFG-MSGOUT-PUBX_ID_POLYP_I2C</code>	0x209100ec	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port I2C
<code>CFG-MSGOUT-PUBX_ID_POLYP_SPI</code>	0x209100f0	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port SPI
<code>CFG-MSGOUT-PUBX_ID_POLYP_UART1</code>	0x209100ed	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART1
<code>CFG-MSGOUT-PUBX_ID_POLYP_UART2</code>	0x209100ee	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART2
<code>CFG-MSGOUT-PUBX_ID_POLYP_USB</code>	0x209100ef	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port USB
<code>CFG-MSGOUT-PUBX_ID_POLYS_I2C</code>	0x209100f1	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port I2C
<code>CFG-MSGOUT-PUBX_ID_POLYS_SPI</code>	0x209100f5	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port SPI
<code>CFG-MSGOUT-PUBX_ID_POLYS_UART1</code>	0x209100f2	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART1
<code>CFG-MSGOUT-PUBX_ID_POLYS_UART2</code>	0x209100f3	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART2
<code>CFG-MSGOUT-PUBX_ID_POLYS_USB</code>	0x209100f4	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port USB
<code>CFG-MSGOUT-PUBX_ID_POLYT_I2C</code>	0x209100f6	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port I2C
<code>CFG-MSGOUT-PUBX_ID_POLYT_SPI</code>	0x209100fa	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port SPI
<code>CFG-MSGOUT-PUBX_ID_POLYT_UART1</code>	0x209100f7	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART1

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-PUBX_ID_POLYT_UART2</i>	0x209100f8	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART2
<i>CFG-MSGOUT-PUBX_ID_POLYT_USB</i>	0x209100f9	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1005_I2C</i>	0x209102bd	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1005_SPI</i>	0x209102c1	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1005_UART1</i>	0x209102be	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1005_UART2</i>	0x209102bf	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE1005_USB</i>	0x209102c0	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1074_I2C</i>	0x2091035e	U1	-	-	Output rate of the RTCM-3X-TYPE1074 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1074_SPI</i>	0x20910362	U1	-	-	Output rate of the RTCM-3X-TYPE1074 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1074_UART1</i>	0x2091035f	U1	-	-	Output rate of the RTCM-3X-TYPE1074 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1074_UART2</i>	0x20910360	U1	-	-	Output rate of the RTCM-3X-TYPE1074 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE1074_USB</i>	0x20910361	U1	-	-	Output rate of the RTCM-3X-TYPE1074 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1077_I2C</i>	0x209102cc	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1077_SPI</i>	0x209102d0	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1077_UART1</i>	0x209102cd	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1077_UART2</i>	0x209102ce	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE1077_USB</i>	0x209102cf	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1084_I2C</i>	0x20910363	U1	-	-	Output rate of the RTCM-3X-TYPE1084 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1084_SPI</i>	0x20910367	U1	-	-	Output rate of the RTCM-3X-TYPE1084 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1084_UART1</i>	0x20910364	U1	-	-	Output rate of the RTCM-3X-TYPE1084 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1084_UART2</i>	0x20910365	U1	-	-	Output rate of the RTCM-3X-TYPE1084 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE1084_USB</i>	0x20910366	U1	-	-	Output rate of the RTCM-3X-TYPE1084 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1087_I2C</i>	0x209102d1	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1087_SPI</i>	0x209102d5	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1087_UART1</i>	0x209102d2	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1087_UART2</i>	0x209102d3	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port UART2

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-RTCM_3X_TYPE1087_USB</i>	0x209102d4	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1094_I2C</i>	0x20910368	U1	-	-	Output rate of the RTCM-3X-TYPE1094 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1094_SPI</i>	0x2091036c	U1	-	-	Output rate of the RTCM-3X-TYPE1094 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1094_UART1</i>	0x20910369	U1	-	-	Output rate of the RTCM-3X-TYPE1094 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1094_UART2</i>	0x2091036a	U1	-	-	Output rate of the RTCM-3X-TYPE1094 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE1094_USB</i>	0x2091036b	U1	-	-	Output rate of the RTCM-3X-TYPE1094 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1097_I2C</i>	0x20910318	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1097_SPI</i>	0x2091031c	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1097_UART1</i>	0x20910319	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1097_UART2</i>	0x2091031a	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE1097_USB</i>	0x2091031b	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1124_I2C</i>	0x2091036d	U1	-	-	Output rate of the RTCM-3X-TYPE1124 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1124_SPI</i>	0x20910371	U1	-	-	Output rate of the RTCM-3X-TYPE1124 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1124_UART1</i>	0x2091036e	U1	-	-	Output rate of the RTCM-3X-TYPE1124 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1124_UART2</i>	0x2091036f	U1	-	-	Output rate of the RTCM-3X-TYPE1124 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE1124_USB</i>	0x20910370	U1	-	-	Output rate of the RTCM-3X-TYPE1124 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1127_I2C</i>	0x209102d6	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1127_SPI</i>	0x209102da	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1127_UART1</i>	0x209102d7	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1127_UART2</i>	0x209102d8	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE1127_USB</i>	0x209102d9	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE1230_I2C</i>	0x20910303	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE1230_SPI</i>	0x20910307	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE1230_UART1</i>	0x20910304	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE1230_UART2</i>	0x20910305	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE1230_USB</i>	0x20910306	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port USB

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_0_I2C</i>	0x209102fe	U1	-	-	Output rate of the RTCM-3X-TYPE4072_0 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_0_SPI</i>	0x20910302	U1	-	-	Output rate of the RTCM-3X-TYPE4072_0 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_0_UART1</i>	0x209102ff	U1	-	-	Output rate of the RTCM-3X-TYPE4072_0 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_0_UART2</i>	0x20910300	U1	-	-	Output rate of the RTCM-3X-TYPE4072_0 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_0_USB</i>	0x20910301	U1	-	-	Output rate of the RTCM-3X-TYPE4072_0 message on port USB
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_1_I2C</i>	0x20910381	U1	-	-	Output rate of the RTCM-3X-TYPE4072_1 message on port I2C
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_1_SPI</i>	0x20910385	U1	-	-	Output rate of the RTCM-3X-TYPE4072_1 message on port SPI
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART1</i>	0x20910382	U1	-	-	Output rate of the RTCM-3X-TYPE4072_1 message on port UART1
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART2</i>	0x20910383	U1	-	-	Output rate of the RTCM-3X-TYPE4072_1 message on port UART2
<i>CFG-MSGOUT-RTCM_3X_TYPE4072_1_USB</i>	0x20910384	U1	-	-	Output rate of the RTCM-3X-TYPE4072_1 message on port USB
<i>CFG-MSGOUT-UBX_LOG_INFO_I2C</i>	0x20910259	U1	-	-	Output rate of the UBX-LOG-INFO message on port I2C
<i>CFG-MSGOUT-UBX_LOG_INFO_SPI</i>	0x2091025d	U1	-	-	Output rate of the UBX-LOG-INFO message on port SPI
<i>CFG-MSGOUT-UBX_LOG_INFO_UART1</i>	0x2091025a	U1	-	-	Output rate of the UBX-LOG-INFO message on port UART1
<i>CFG-MSGOUT-UBX_LOG_INFO_UART2</i>	0x2091025b	U1	-	-	Output rate of the UBX-LOG-INFO message on port UART2
<i>CFG-MSGOUT-UBX_LOG_INFO_USB</i>	0x2091025c	U1	-	-	Output rate of the UBX-LOG-INFO message on port USB
<i>CFG-MSGOUT-UBX_MON_COMMs_I2C</i>	0x2091034f	U1	-	-	Output rate of the UBX-MON-COMMS message on port I2C
<i>CFG-MSGOUT-UBX_MON_COMMs_SPI</i>	0x20910353	U1	-	-	Output rate of the UBX-MON-COMMS message on port SPI
<i>CFG-MSGOUT-UBX_MON_COMMs_UART1</i>	0x20910350	U1	-	-	Output rate of the UBX-MON-COMMS message on port UART1
<i>CFG-MSGOUT-UBX_MON_COMMs_UART2</i>	0x20910351	U1	-	-	Output rate of the UBX-MON-COMMS message on port UART2
<i>CFG-MSGOUT-UBX_MON_COMMs_USB</i>	0x20910352	U1	-	-	Output rate of the UBX-MON-COMMS message on port USB
<i>CFG-MSGOUT-UBX_MON_HW2_I2C</i>	0x209101b9	U1	-	-	Output rate of the UBX-MON-HW2 message on port I2C
<i>CFG-MSGOUT-UBX_MON_HW2_SPI</i>	0x209101bd	U1	-	-	Output rate of the UBX-MON-HW2 message on port SPI
<i>CFG-MSGOUT-UBX_MON_HW2_UART1</i>	0x209101ba	U1	-	-	Output rate of the UBX-MON-HW2 message on port UART1
<i>CFG-MSGOUT-UBX_MON_HW2_UART2</i>	0x209101bb	U1	-	-	Output rate of the UBX-MON-HW2 message on port UART2
<i>CFG-MSGOUT-UBX_MON_HW2_USB</i>	0x209101bc	U1	-	-	Output rate of the UBX-MON-HW2 message on port USB
<i>CFG-MSGOUT-UBX_MON_HW3_I2C</i>	0x20910354	U1	-	-	Output rate of the UBX-MON-HW3 message on port I2C

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_MON_HW3_SPI</i>	0x20910358	U1	-	-	Output rate of the UBX-MON-HW3 message on port SPI
<i>CFG-MSGOUT-UBX_MON_HW3_UART1</i>	0x20910355	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART1
<i>CFG-MSGOUT-UBX_MON_HW3_UART2</i>	0x20910356	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART2
<i>CFG-MSGOUT-UBX_MON_HW3_USB</i>	0x20910357	U1	-	-	Output rate of the UBX-MON-HW3 message on port USB
<i>CFG-MSGOUT-UBX_MON_HW_I2C</i>	0x209101b4	U1	-	-	Output rate of the UBX-MON-HW message on port I2C
<i>CFG-MSGOUT-UBX_MON_HW_SPI</i>	0x209101b8	U1	-	-	Output rate of the UBX-MON-HW message on port SPI
<i>CFG-MSGOUT-UBX_MON_HW_UART1</i>	0x209101b5	U1	-	-	Output rate of the UBX-MON-HW message on port UART1
<i>CFG-MSGOUT-UBX_MON_HW_UART2</i>	0x209101b6	U1	-	-	Output rate of the UBX-MON-HW message on port UART2
<i>CFG-MSGOUT-UBX_MON_HW_USB</i>	0x209101b7	U1	-	-	Output rate of the UBX-MON-HW message on port USB
<i>CFG-MSGOUT-UBX_MON_IO_I2C</i>	0x209101a5	U1	-	-	Output rate of the UBX-MON-IO message on port I2C
<i>CFG-MSGOUT-UBX_MON_IO_SPI</i>	0x209101a9	U1	-	-	Output rate of the UBX-MON-IO message on port SPI
<i>CFG-MSGOUT-UBX_MON_IO_UART1</i>	0x209101a6	U1	-	-	Output rate of the UBX-MON-IO message on port UART1
<i>CFG-MSGOUT-UBX_MON_IO_UART2</i>	0x209101a7	U1	-	-	Output rate of the UBX-MON-IO message on port UART2
<i>CFG-MSGOUT-UBX_MON_IO_USB</i>	0x209101a8	U1	-	-	Output rate of the UBX-MON-IO message on port USB
<i>CFG-MSGOUT-UBX_MON_MSGPP_I2C</i>	0x20910196	U1	-	-	Output rate of the UBX-MON-MSGPP message on port I2C
<i>CFG-MSGOUT-UBX_MON_MSGPP_SPI</i>	0x2091019a	U1	-	-	Output rate of the UBX-MON-MSGPP message on port SPI
<i>CFG-MSGOUT-UBX_MON_MSGPP_UART1</i>	0x20910197	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART1
<i>CFG-MSGOUT-UBX_MON_MSGPP_UART2</i>	0x20910198	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART2
<i>CFG-MSGOUT-UBX_MON_MSGPP_USB</i>	0x20910199	U1	-	-	Output rate of the UBX-MON-MSGPP message on port USB
<i>CFG-MSGOUT-UBX_MON_RF_I2C</i>	0x20910359	U1	-	-	Output rate of the UBX-MON-RF message on port I2C
<i>CFG-MSGOUT-UBX_MON_RF_SPI</i>	0x2091035d	U1	-	-	Output rate of the UBX-MON-RF message on port SPI
<i>CFG-MSGOUT-UBX_MON_RF_UART1</i>	0x2091035a	U1	-	-	Output rate of the UBX-MON-RF message on port UART1
<i>CFG-MSGOUT-UBX_MON_RF_UART2</i>	0x2091035b	U1	-	-	Output rate of the UBX-MON-RF message on port UART2
<i>CFG-MSGOUT-UBX_MON_RF_USB</i>	0x2091035c	U1	-	-	Output rate of the UBX-MON-RF message on port USB
<i>CFG-MSGOUT-UBX_MON_RXBUF_I2C</i>	0x209101a0	U1	-	-	Output rate of the UBX-MON-RXBUF message on port I2C
<i>CFG-MSGOUT-UBX_MON_RXBUF_SPI</i>	0x209101a4	U1	-	-	Output rate of the UBX-MON-RXBUF message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_MON_RXBUF_UART1</i>	0x209101a1	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART1
<i>CFG-MSGOUT-UBX_MON_RXBUF_UART2</i>	0x209101a2	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART2
<i>CFG-MSGOUT-UBX_MON_RXBUF_USB</i>	0x209101a3	U1	-	-	Output rate of the UBX-MON-RXBUF message on port USB
<i>CFG-MSGOUT-UBX_MON_RXR_I2C</i>	0x20910187	U1	-	-	Output rate of the UBX-MON-RXR message on port I2C
<i>CFG-MSGOUT-UBX_MON_RXR_SPI</i>	0x2091018b	U1	-	-	Output rate of the UBX-MON-RXR message on port SPI
<i>CFG-MSGOUT-UBX_MON_RXR_UART1</i>	0x20910188	U1	-	-	Output rate of the UBX-MON-RXR message on port UART1
<i>CFG-MSGOUT-UBX_MON_RXR_UART2</i>	0x20910189	U1	-	-	Output rate of the UBX-MON-RXR message on port UART2
<i>CFG-MSGOUT-UBX_MON_RXR_USB</i>	0x2091018a	U1	-	-	Output rate of the UBX-MON-RXR message on port USB
<i>CFG-MSGOUT-UBX_MON_SPAN_I2C</i>	0x2091038b	U1	-	-	Output rate of the UBX-MON-SPAN message on port I2C
<i>CFG-MSGOUT-UBX_MON_SPAN_SPI</i>	0x2091038f	U1	-	-	Output rate of the UBX-MON-SPAN message on port SPI
<i>CFG-MSGOUT-UBX_MON_SPAN_UART1</i>	0x2091038c	U1	-	-	Output rate of the UBX-MON-SPAN message on port UART1
<i>CFG-MSGOUT-UBX_MON_SPAN_UART2</i>	0x2091038d	U1	-	-	Output rate of the UBX-MON-SPAN message on port UART2
<i>CFG-MSGOUT-UBX_MON_SPAN_USB</i>	0x2091038e	U1	-	-	Output rate of the UBX-MON-SPAN message on port USB
<i>CFG-MSGOUT-UBX_MON_SYS_I2C</i>	0x2091069d	U1	-	-	Output rate of the UBX-MON-SYS message on port I2C
<i>CFG-MSGOUT-UBX_MON_SYS_SPI</i>	0x209106a1	U1	-	-	Output rate of the UBX-MON-SYS message on port SPI
<i>CFG-MSGOUT-UBX_MON_SYS_UART1</i>	0x2091069e	U1	-	-	Output rate of the UBX-MON-SYS message on port UART1
<i>CFG-MSGOUT-UBX_MON_SYS_UART2</i>	0x2091069f	U1	-	-	Output rate of the UBX-MON-SYS message on port UART2
<i>CFG-MSGOUT-UBX_MON_SYS_USB</i>	0x209106a0	U1	-	-	Output rate of the UBX-MON-SYS message on port USB
<i>CFG-MSGOUT-UBX_MON_TXBUF_I2C</i>	0x2091019b	U1	-	-	Output rate of the UBX-MON-TXBUF message on port I2C
<i>CFG-MSGOUT-UBX_MON_TXBUF_SPI</i>	0x2091019f	U1	-	-	Output rate of the UBX-MON-TXBUF message on port SPI
<i>CFG-MSGOUT-UBX_MON_TXBUF_UART1</i>	0x2091019c	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART1
<i>CFG-MSGOUT-UBX_MON_TXBUF_UART2</i>	0x2091019d	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART2
<i>CFG-MSGOUT-UBX_MON_TXBUF_USB</i>	0x2091019e	U1	-	-	Output rate of the UBX-MON-TXBUF message on port USB
<i>CFG-MSGOUT-UBX_NAV2_CLOCK_I2C</i>	0x20910430	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_CLOCK_SPI</i>	0x20910434	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_CLOCK_UART1</i>	0x20910431	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port UART1

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV2_CLOCK_UART2</i>	0x20910432	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_CLOCK_USB</i>	0x20910433	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port USB
<i>CFG-MSGOUT-UBX_NAV2_COV_I2C</i>	0x20910435	U1	-	-	Output rate of the UBX-NAV2-COV message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_COV_SPI</i>	0x20910439	U1	-	-	Output rate of the UBX-NAV2-COV message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_COV_UART1</i>	0x20910436	U1	-	-	Output rate of the UBX-NAV2-COV message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_COV_UART2</i>	0x20910437	U1	-	-	Output rate of the UBX-NAV2-COV message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_COV_USB</i>	0x20910438	U1	-	-	Output rate of the UBX-NAV2-COV message on port USB
<i>CFG-MSGOUT-UBX_NAV2_DOP_I2C</i>	0x20910465	U1	-	-	Output rate of the UBX-NAV2-DOP message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_DOP_SPI</i>	0x20910469	U1	-	-	Output rate of the UBX-NAV2-DOP message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_DOP_UART1</i>	0x20910466	U1	-	-	Output rate of the UBX-NAV2-DOP message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_DOP_UART2</i>	0x20910467	U1	-	-	Output rate of the UBX-NAV2-DOP message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_DOP_USB</i>	0x20910468	U1	-	-	Output rate of the UBX-NAV2-DOP message on port USB
<i>CFG-MSGOUT-UBX_NAV2_EOE_I2C</i>	0x20910565	U1	-	-	Output rate of the UBX-NAV2-EOE message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_EOE_SPI</i>	0x20910569	U1	-	-	Output rate of the UBX-NAV2-EOE message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_EOE_UART1</i>	0x20910566	U1	-	-	Output rate of the UBX-NAV2-EOE message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_EOE_UART2</i>	0x20910567	U1	-	-	Output rate of the UBX-NAV2-EOE message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_EOE_USB</i>	0x20910568	U1	-	-	Output rate of the UBX-NAV2-EOE message on port USB
<i>CFG-MSGOUT-UBX_NAV2_ODO_I2C</i>	0x20910475	U1	-	-	Output rate of the UBX-NAV2-ODO message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_ODO_SPI</i>	0x20910479	U1	-	-	Output rate of the UBX-NAV2-ODO message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_ODO_UART1</i>	0x20910476	U1	-	-	Output rate of the UBX-NAV2-ODO message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_ODO_UART2</i>	0x20910477	U1	-	-	Output rate of the UBX-NAV2-ODO message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_ODO_USB</i>	0x20910478	U1	-	-	Output rate of the UBX-NAV2-ODO message on port USB
<i>CFG-MSGOUT-UBX_NAV2_POSECEF_I2C</i>	0x20910480	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_POSECEF_SPI</i>	0x20910484	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_POSECEF_UART1</i>	0x20910481	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_POSECEF_UART2</i>	0x20910482	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port UART2

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV2_POSECEF_USB</i>	0x20910483	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port USB
<i>CFG-MSGOUT-UBX_NAV2_POSLLH_I2C</i>	0x20910485	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_POSLLH_SPI</i>	0x20910489	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_POSLLH_UART1</i>	0x20910486	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_POSLLH_UART2</i>	0x20910487	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_POSLLH_USB</i>	0x20910488	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port USB
<i>CFG-MSGOUT-UBX_NAV2_PVT_I2C</i>	0x20910490	U1	-	-	Output rate of the UBX-NAV2-PVT message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_PVT_SPI</i>	0x20910494	U1	-	-	Output rate of the UBX-NAV2-PVT message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_PVT_UART1</i>	0x20910491	U1	-	-	Output rate of the UBX-NAV2-PVT message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_PVT_UART2</i>	0x20910492	U1	-	-	Output rate of the UBX-NAV2-PVT message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_PVT_USB</i>	0x20910493	U1	-	-	Output rate of the UBX-NAV2-PVT message on port USB
<i>CFG-MSGOUT-UBX_NAV2_SAT_I2C</i>	0x20910495	U1	-	-	Output rate of the UBX-NAV2-SAT message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_SAT_SPI</i>	0x20910499	U1	-	-	Output rate of the UBX-NAV2-SAT message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_SAT_UART1</i>	0x20910496	U1	-	-	Output rate of the UBX-NAV2-SAT message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_SAT_UART2</i>	0x20910497	U1	-	-	Output rate of the UBX-NAV2-SAT message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_SAT_USB</i>	0x20910498	U1	-	-	Output rate of the UBX-NAV2-SAT message on port USB
<i>CFG-MSGOUT-UBX_NAV2_SBAS_I2C</i>	0x20910500	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_SBAS_SPI</i>	0x20910504	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_SBAS_UART1</i>	0x20910501	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_SBAS_UART2</i>	0x20910502	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_SBAS_USB</i>	0x20910503	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_SIG_I2C</i>	0x20910505	U1	-	-	Output rate of the UBX-NAV2-SIG message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_SIG_SPI</i>	0x20910509	U1	-	-	Output rate of the UBX-NAV2-SIG message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_SIG_UART1</i>	0x20910506	U1	-	-	Output rate of the UBX-NAV2-SIG message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_SIG_UART2</i>	0x20910507	U1	-	-	Output rate of the UBX-NAV2-SIG message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_SIG_USB</i>	0x20910508	U1	-	-	Output rate of the UBX-NAV2-SIG message on port USB

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV2_SLAS_I2C</i>	0x20910510	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_SLAS_SPI</i>	0x20910514	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_SLAS_UART1</i>	0x20910511	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_SLAS_UART2</i>	0x20910512	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_SLAS_USB</i>	0x20910513	U1	-	-	Output rate of the UBX-NAV2-SLAS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_STATUS_I2C</i>	0x20910515	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_STATUS_SPI</i>	0x20910519	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_STATUS_UART1</i>	0x20910516	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_STATUS_UART2</i>	0x20910517	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_STATUS_USB</i>	0x20910518	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_SVIN_I2C</i>	0x20910520	U1	-	-	Output rate of the UBX-NAV2-SVIN message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_SVIN_SPI</i>	0x20910524	U1	-	-	Output rate of the UBX-NAV2-SVIN message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_SVIN_UART1</i>	0x20910521	U1	-	-	Output rate of the UBX-NAV2-SVIN message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_SVIN_UART2</i>	0x20910522	U1	-	-	Output rate of the UBX-NAV2-SVIN message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_SVIN_USB</i>	0x20910523	U1	-	-	Output rate of the UBX-NAV2-SVIN message on port USB
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_I2C</i>	0x20910525	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_SPI</i>	0x20910529	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART1</i>	0x20910526	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART2</i>	0x20910527	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_TIMEBDS_USB</i>	0x20910528	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_TIMEGAL_I2C</i>	0x20910530	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_TIMEGAL_SPI</i>	0x20910534	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_TIMEGAL_UART1</i>	0x20910531	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_TIMEGAL_UART2</i>	0x20910532	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_TIMEGAL_USB</i>	0x20910533	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port USB
<i>CFG-MSGOUT-UBX_NAV2_TIMEGLO_I2C</i>	0x20910535	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port I2C

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV2_TIMEGLO_SPI</i>	0x20910539	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_TIMEGLO_UART1</i>	0x20910536	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_TIMEGLO_UART2</i>	0x20910537	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_TIMEGLO_USB</i>	0x20910538	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port USB
<i>CFG-MSGOUT-UBX_NAV2_TIMEGPS_I2C</i>	0x20910540	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_TIMEGPS_SPI</i>	0x20910544	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_TIMEGPS_UART1</i>	0x20910541	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_TIMEGPS_UART2</i>	0x20910542	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_TIMEGPS_USB</i>	0x20910543	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_TIMELS_I2C</i>	0x20910545	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_TIMELS_SPI</i>	0x20910549	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_TIMELS_UART1</i>	0x20910546	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_TIMELS_UART2</i>	0x20910547	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_TIMELS_USB</i>	0x20910548	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_TIMEQZSS_I2C</i>	0x20910575	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_TIMEQZSS_SPI</i>	0x20910579	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_TIMEQZSS_UART1</i>	0x20910576	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_TIMEQZSS_UART2</i>	0x20910577	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_TIMEQZSS_USB</i>	0x20910578	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port USB
<i>CFG-MSGOUT-UBX_NAV2_TIMEUTC_I2C</i>	0x20910550	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_TIMEUTC_SPI</i>	0x20910554	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_TIMEUTC_UART1</i>	0x20910551	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_TIMEUTC_UART2</i>	0x20910552	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_TIMEUTC_USB</i>	0x20910553	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port USB
<i>CFG-MSGOUT-UBX_NAV2_VELECEF_I2C</i>	0x20910555	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_VELECEF_SPI</i>	0x20910559	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV2_VELECEF_UART1</i>	0x20910556	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_VELECEF_UART2</i>	0x20910557	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_VELECEF_USB</i>	0x20910558	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port USB
<i>CFG-MSGOUT-UBX_NAV2_VELNED_I2C</i>	0x20910560	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port I2C
<i>CFG-MSGOUT-UBX_NAV2_VELNED_SPI</i>	0x20910564	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port SPI
<i>CFG-MSGOUT-UBX_NAV2_VELNED_UART1</i>	0x20910561	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port UART1
<i>CFG-MSGOUT-UBX_NAV2_VELNED_UART2</i>	0x20910562	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port UART2
<i>CFG-MSGOUT-UBX_NAV2_VELNED_USB</i>	0x20910563	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port USB
<i>CFG-MSGOUT-UBX_NAV_CLOCK_I2C</i>	0x20910065	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port I2C
<i>CFG-MSGOUT-UBX_NAV_CLOCK_SPI</i>	0x20910069	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port SPI
<i>CFG-MSGOUT-UBX_NAV_CLOCK_UART1</i>	0x20910066	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART1
<i>CFG-MSGOUT-UBX_NAV_CLOCK_UART2</i>	0x20910067	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART2
<i>CFG-MSGOUT-UBX_NAV_CLOCK_USB</i>	0x20910068	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port USB
<i>CFG-MSGOUT-UBX_NAV_COV_I2C</i>	0x20910083	U1	-	-	Output rate of the UBX-NAV-COV message on port I2C
<i>CFG-MSGOUT-UBX_NAV_COV_SPI</i>	0x20910087	U1	-	-	Output rate of the UBX-NAV-COV message on port SPI
<i>CFG-MSGOUT-UBX_NAV_COV_UART1</i>	0x20910084	U1	-	-	Output rate of the UBX-NAV-COV message on port UART1
<i>CFG-MSGOUT-UBX_NAV_COV_UART2</i>	0x20910085	U1	-	-	Output rate of the UBX-NAV-COV message on port UART2
<i>CFG-MSGOUT-UBX_NAV_COV_USB</i>	0x20910086	U1	-	-	Output rate of the UBX-NAV-COV message on port USB
<i>CFG-MSGOUT-UBX_NAV_DOP_I2C</i>	0x20910038	U1	-	-	Output rate of the UBX-NAV-DOP message on port I2C
<i>CFG-MSGOUT-UBX_NAV_DOP_SPI</i>	0x2091003c	U1	-	-	Output rate of the UBX-NAV-DOP message on port SPI
<i>CFG-MSGOUT-UBX_NAV_DOP_UART1</i>	0x20910039	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART1
<i>CFG-MSGOUT-UBX_NAV_DOP_UART2</i>	0x2091003a	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART2
<i>CFG-MSGOUT-UBX_NAV_DOP_USB</i>	0x2091003b	U1	-	-	Output rate of the UBX-NAV-DOP message on port USB
<i>CFG-MSGOUT-UBX_NAV_EOE_I2C</i>	0x2091015f	U1	-	-	Output rate of the UBX-NAV-EOE message on port I2C
<i>CFG-MSGOUT-UBX_NAV_EOE_SPI</i>	0x20910163	U1	-	-	Output rate of the UBX-NAV-EOE message on port SPI
<i>CFG-MSGOUT-UBX_NAV_EOE_UART1</i>	0x20910160	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART1

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_EOE_UART2</i>	0x20910161	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART2
<i>CFG-MSGOUT-UBX_NAV_EOE_USB</i>	0x20910162	U1	-	-	Output rate of the UBX-NAV-EOE message on port USB
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_I2C</i>	0x209100a1	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port I2C
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_SPI</i>	0x209100a5	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port SPI
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_UART1</i>	0x209100a2	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port UART1
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_UART2</i>	0x209100a3	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port UART2
<i>CFG-MSGOUT-UBX_NAV_GEOFENCE_USB</i>	0x209100a4	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port USB
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_I2C</i>	0x2091002e	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port I2C
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_SPI</i>	0x20910032	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port SPI
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_UART1</i>	0x2091002f	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port UART1
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_UART2</i>	0x20910030	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port UART2
<i>CFG-MSGOUT-UBX_NAV_HPOSECEF_USB</i>	0x20910031	U1	-	-	Output rate of the UBX-NAV-HPOSECEF message on port USB
<i>CFG-MSGOUT-UBX_NAV_HPOSLLH_I2C</i>	0x20910033	U1	-	-	Output rate of the UBX-NAV-HPOSLLH message on port I2C
<i>CFG-MSGOUT-UBX_NAV_HPOSLLH_SPI</i>	0x20910037	U1	-	-	Output rate of the UBX-NAV-HPOSLLH message on port SPI
<i>CFG-MSGOUT-UBX_NAV_HPOSLLH_UART1</i>	0x20910034	U1	-	-	Output rate of the UBX-NAV-HPOSLLH message on port UART1
<i>CFG-MSGOUT-UBX_NAV_HPOSLLH_UART2</i>	0x20910035	U1	-	-	Output rate of the UBX-NAV-HPOSLLH message on port UART2
<i>CFG-MSGOUT-UBX_NAV_HPOSLLH_USB</i>	0x20910036	U1	-	-	Output rate of the UBX-NAV-HPOSLLH message on port USB
<i>CFG-MSGOUT-UBX_NAV_ODO_I2C</i>	0x2091007e	U1	-	-	Output rate of the UBX-NAV-ODO message on port I2C
<i>CFG-MSGOUT-UBX_NAV_ODO_SPI</i>	0x20910082	U1	-	-	Output rate of the UBX-NAV-ODO message on port SPI
<i>CFG-MSGOUT-UBX_NAV_ODO_UART1</i>	0x2091007f	U1	-	-	Output rate of the UBX-NAV-ODO message on port UART1
<i>CFG-MSGOUT-UBX_NAV_ODO_UART2</i>	0x20910080	U1	-	-	Output rate of the UBX-NAV-ODO message on port UART2
<i>CFG-MSGOUT-UBX_NAV_ODO_USB</i>	0x20910081	U1	-	-	Output rate of the UBX-NAV-ODO message on port USB
<i>CFG-MSGOUT-UBX_NAV_ORB_I2C</i>	0x20910010	U1	-	-	Output rate of the UBX-NAV-ORB message on port I2C
<i>CFG-MSGOUT-UBX_NAV_ORB_SPI</i>	0x20910014	U1	-	-	Output rate of the UBX-NAV-ORB message on port SPI
<i>CFG-MSGOUT-UBX_NAV_ORB_UART1</i>	0x20910011	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART1
<i>CFG-MSGOUT-UBX_NAV_ORB_UART2</i>	0x20910012	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART2

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_ORB_USB</i>	0x20910013	U1	-	-	Output rate of the UBX-NAV-ORB message on port USB
<i>CFG-MSGOUT-UBX_NAV_PL_I2C</i>	0x20910415	U1	-	-	Output rate of the UBX-NAV-PL message on port I2C
<i>CFG-MSGOUT-UBX_NAV_PL_SPI</i>	0x20910419	U1	-	-	Output rate of the UBX-NAV-PL message on port SPI
<i>CFG-MSGOUT-UBX_NAV_PL_UART1</i>	0x20910416	U1	-	-	Output rate of the UBX-NAV-PL message on port UART1
<i>CFG-MSGOUT-UBX_NAV_PL_UART2</i>	0x20910417	U1	-	-	Output rate of the UBX-NAV-PL message on port UART2
<i>CFG-MSGOUT-UBX_NAV_PL_USB</i>	0x20910418	U1	-	-	Output rate of the UBX-NAV-PL message on port USB
<i>CFG-MSGOUT-UBX_NAV_POSECEF_I2C</i>	0x20910024	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port I2C
<i>CFG-MSGOUT-UBX_NAV_POSECEF_SPI</i>	0x20910028	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port SPI
<i>CFG-MSGOUT-UBX_NAV_POSECEF_UART1</i>	0x20910025	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART1
<i>CFG-MSGOUT-UBX_NAV_POSECEF_UART2</i>	0x20910026	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART2
<i>CFG-MSGOUT-UBX_NAV_POSECEF_USB</i>	0x20910027	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port USB
<i>CFG-MSGOUT-UBX_NAV_POSLLH_I2C</i>	0x20910029	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port I2C
<i>CFG-MSGOUT-UBX_NAV_POSLLH_SPI</i>	0x2091002d	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port SPI
<i>CFG-MSGOUT-UBX_NAV_POSLLH_UART1</i>	0x2091002a	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART1
<i>CFG-MSGOUT-UBX_NAV_POSLLH_UART2</i>	0x2091002b	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART2
<i>CFG-MSGOUT-UBX_NAV_POSLLH_USB</i>	0x2091002c	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port USB
<i>CFG-MSGOUT-UBX_NAV_PVT_I2C</i>	0x20910006	U1	-	-	Output rate of the UBX-NAV-PVT message on port I2C
<i>CFG-MSGOUT-UBX_NAV_PVT_SPI</i>	0x2091000a	U1	-	-	Output rate of the UBX-NAV-PVT message on port SPI
<i>CFG-MSGOUT-UBX_NAV_PVT_UART1</i>	0x20910007	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART1
<i>CFG-MSGOUT-UBX_NAV_PVT_UART2</i>	0x20910008	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART2
<i>CFG-MSGOUT-UBX_NAV_PVT_USB</i>	0x20910009	U1	-	-	Output rate of the UBX-NAV-PVT message on port USB
<i>CFG-MSGOUT-UBX_NAV_RELPOSNED_I2C</i>	0x2091008d	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port I2C
<i>CFG-MSGOUT-UBX_NAV_RELPOSNED_SPI</i>	0x20910091	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port SPI
<i>CFG-MSGOUT-UBX_NAV_RELPOSNED_UART1</i>	0x2091008e	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port UART1
<i>CFG-MSGOUT-UBX_NAV_RELPOSNED_UART2</i>	0x2091008f	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port UART2
<i>CFG-MSGOUT-UBX_NAV_RELPOSNED_USB</i>	0x20910090	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port USB

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_SAT_I2C</i>	0x20910015	U1	-	-	Output rate of the UBX-NAV-SAT message on port I2C
<i>CFG-MSGOUT-UBX_NAV_SAT_SPI</i>	0x20910019	U1	-	-	Output rate of the UBX-NAV-SAT message on port SPI
<i>CFG-MSGOUT-UBX_NAV_SAT_UART1</i>	0x20910016	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART1
<i>CFG-MSGOUT-UBX_NAV_SAT_UART2</i>	0x20910017	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART2
<i>CFG-MSGOUT-UBX_NAV_SAT_USB</i>	0x20910018	U1	-	-	Output rate of the UBX-NAV-SAT message on port USB
<i>CFG-MSGOUT-UBX_NAV_SBAS_I2C</i>	0x2091006a	U1	-	-	Output rate of the UBX-NAV-SBAS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_SBAS_SPI</i>	0x2091006e	U1	-	-	Output rate of the UBX-NAV-SBAS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_SBAS_UART1</i>	0x2091006b	U1	-	-	Output rate of the UBX-NAV-SBAS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_SBAS_UART2</i>	0x2091006c	U1	-	-	Output rate of the UBX-NAV-SBAS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_SBAS_USB</i>	0x2091006d	U1	-	-	Output rate of the UBX-NAV-SBAS message on port USB
<i>CFG-MSGOUT-UBX_NAV_SIG_I2C</i>	0x20910345	U1	-	-	Output rate of the UBX-NAV-SIG message on port I2C
<i>CFG-MSGOUT-UBX_NAV_SIG_SPI</i>	0x20910349	U1	-	-	Output rate of the UBX-NAV-SIG message on port SPI
<i>CFG-MSGOUT-UBX_NAV_SIG_UART1</i>	0x20910346	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART1
<i>CFG-MSGOUT-UBX_NAV_SIG_UART2</i>	0x20910347	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART2
<i>CFG-MSGOUT-UBX_NAV_SIG_USB</i>	0x20910348	U1	-	-	Output rate of the UBX-NAV-SIG message on port USB
<i>CFG-MSGOUT-UBX_NAV_SLAS_I2C</i>	0x20910336	U1	-	-	Output rate of the UBX-NAV-SLAS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_SLAS_SPI</i>	0x2091033a	U1	-	-	Output rate of the UBX-NAV-SLAS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_SLAS_UART1</i>	0x20910337	U1	-	-	Output rate of the UBX-NAV-SLAS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_SLAS_UART2</i>	0x20910338	U1	-	-	Output rate of the UBX-NAV-SLAS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_SLAS_USB</i>	0x20910339	U1	-	-	Output rate of the UBX-NAV-SLAS message on port USB
<i>CFG-MSGOUT-UBX_NAV_STATUS_I2C</i>	0x2091001a	U1	-	-	Output rate of the UBX-NAV-STATUS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_STATUS_SPI</i>	0x2091001e	U1	-	-	Output rate of the UBX-NAV-STATUS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_STATUS_UART1</i>	0x2091001b	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_STATUS_UART2</i>	0x2091001c	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_STATUS_USB</i>	0x2091001d	U1	-	-	Output rate of the UBX-NAV-STATUS message on port USB
<i>CFG-MSGOUT-UBX_NAV_SVIN_I2C</i>	0x20910088	U1	-	-	Output rate of the UBX-NAV-SVIN message on port I2C

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_SVIN_SPI</i>	0x2091008c	U1	-	-	Output rate of the UBX-NAV-SVIN message on port SPI
<i>CFG-MSGOUT-UBX_NAV_SVIN_UART1</i>	0x20910089	U1	-	-	Output rate of the UBX-NAV-SVIN message on port UART1
<i>CFG-MSGOUT-UBX_NAV_SVIN_UART2</i>	0x2091008a	U1	-	-	Output rate of the UBX-NAV-SVIN message on port UART2
<i>CFG-MSGOUT-UBX_NAV_SVIN_USB</i>	0x2091008b	U1	-	-	Output rate of the UBX-NAV-SVIN message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C</i>	0x20910051	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI</i>	0x20910055	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1</i>	0x20910052	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_UART2</i>	0x20910053	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMEBDS_USB</i>	0x20910054	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C</i>	0x20910056	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI</i>	0x2091005a	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1</i>	0x20910057	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_UART2</i>	0x20910058	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMEGAL_USB</i>	0x20910059	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C</i>	0x2091004c	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI</i>	0x20910050	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1</i>	0x2091004d	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMEGLO_UART2</i>	0x2091004e	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMEGLO_USB</i>	0x2091004f	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C</i>	0x20910047	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI</i>	0x2091004b	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1</i>	0x20910048	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMEGPS_UART2</i>	0x20910049	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMEGPS_USB</i>	0x2091004a	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMELS_I2C</i>	0x20910060	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMELS_SPI</i>	0x20910064	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_TIMELS_UART1</i>	0x20910061	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMELS_UART2</i>	0x20910062	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMELS_USB</i>	0x20910063	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMEQZSS_I2C</i>	0x20910386	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMEQZSS_SPI</i>	0x2091038a	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART1</i>	0x20910387	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART2</i>	0x20910388	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMEQZSS_USB</i>	0x20910389	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMETRUSTED_I2C</i>	0x209103a8	U1	-	-	Output rate of the UBX-NAV-TIMETRUSTED message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMETRUSTED_SPI</i>	0x209103ac	U1	-	-	Output rate of the UBX-NAV-TIMETRUSTED message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMETRUSTED_UART1</i>	0x209103a9	U1	-	-	Output rate of the UBX-NAV-TIMETRUSTED message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMETRUSTED_UART2</i>	0x209103aa	U1	-	-	Output rate of the UBX-NAV-TIMETRUSTED message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMETRUSTED_USB</i>	0x209103ab	U1	-	-	Output rate of the UBX-NAV-TIMETRUSTED message on port USB
<i>CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C</i>	0x2091005b	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port I2C
<i>CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI</i>	0x2091005f	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port SPI
<i>CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1</i>	0x2091005c	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART1
<i>CFG-MSGOUT-UBX_NAV_TIMEUTC_UART2</i>	0x2091005d	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART2
<i>CFG-MSGOUT-UBX_NAV_TIMEUTC_USB</i>	0x2091005e	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port USB
<i>CFG-MSGOUT-UBX_NAV_VELECEF_I2C</i>	0x2091003d	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port I2C
<i>CFG-MSGOUT-UBX_NAV_VELECEF_SPI</i>	0x20910041	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port SPI
<i>CFG-MSGOUT-UBX_NAV_VELECEF_UART1</i>	0x2091003e	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART1
<i>CFG-MSGOUT-UBX_NAV_VELECEF_UART2</i>	0x2091003f	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART2
<i>CFG-MSGOUT-UBX_NAV_VELECEF_USB</i>	0x20910040	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port USB
<i>CFG-MSGOUT-UBX_NAV_VELNED_I2C</i>	0x20910042	U1	-	-	Output rate of the UBX-NAV-VELNED message on port I2C
<i>CFG-MSGOUT-UBX_NAV_VELNED_SPI</i>	0x20910046	U1	-	-	Output rate of the UBX-NAV-VELNED message on port SPI
<i>CFG-MSGOUT-UBX_NAV_VELNED_UART1</i>	0x20910043	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART1

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_NAV_VELNED_UART2</i>	0x20910044	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART2
<i>CFG-MSGOUT-UBX_NAV_VELNED_USB</i>	0x20910045	U1	-	-	Output rate of the UBX-NAV-VELNED message on port USB
<i>CFG-MSGOUT-UBX_RXM_COR_I2C</i>	0x209106b6	U1	-	-	Output rate of the UBX-RXM-COR message on port I2C
<i>CFG-MSGOUT-UBX_RXM_COR_SPI</i>	0x209106ba	U1	-	-	Output rate of the UBX-RXM-COR message on port SPI
<i>CFG-MSGOUT-UBX_RXM_COR_UART1</i>	0x209106b7	U1	-	-	Output rate of the UBX-RXM-COR message on port UART1
<i>CFG-MSGOUT-UBX_RXM_COR_UART2</i>	0x209106b8	U1	-	-	Output rate of the UBX-RXM-COR message on port UART2
<i>CFG-MSGOUT-UBX_RXM_COR_USB</i>	0x209106b9	U1	-	-	Output rate of the UBX-RXM-COR message on port USB
<i>CFG-MSGOUT-UBX_RXM_MEASX_I2C</i>	0x20910204	U1	-	-	Output rate of the UBX-RXM-MEASX message on port I2C
<i>CFG-MSGOUT-UBX_RXM_MEASX_SPI</i>	0x20910208	U1	-	-	Output rate of the UBX-RXM-MEASX message on port SPI
<i>CFG-MSGOUT-UBX_RXM_MEASX_UART1</i>	0x20910205	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART1
<i>CFG-MSGOUT-UBX_RXM_MEASX_UART2</i>	0x20910206	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART2
<i>CFG-MSGOUT-UBX_RXM_MEASX_USB</i>	0x20910207	U1	-	-	Output rate of the UBX-RXM-MEASX message on port USB
<i>CFG-MSGOUT-UBX_RXM_RAWX_I2C</i>	0x209102a4	U1	-	-	Output rate of the UBX-RXM-RAWX message on port I2C
<i>CFG-MSGOUT-UBX_RXM_RAWX_SPI</i>	0x209102a8	U1	-	-	Output rate of the UBX-RXM-RAWX message on port SPI
<i>CFG-MSGOUT-UBX_RXM_RAWX_UART1</i>	0x209102a5	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART1
<i>CFG-MSGOUT-UBX_RXM_RAWX_UART2</i>	0x209102a6	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART2
<i>CFG-MSGOUT-UBX_RXM_RAWX_USB</i>	0x209102a7	U1	-	-	Output rate of the UBX-RXM-RAWX message on port USB
<i>CFG-MSGOUT-UBX_RXM_RLM_I2C</i>	0x2091025e	U1	-	-	Output rate of the UBX-RXM-RLM message on port I2C
<i>CFG-MSGOUT-UBX_RXM_RLM_SPI</i>	0x20910262	U1	-	-	Output rate of the UBX-RXM-RLM message on port SPI
<i>CFG-MSGOUT-UBX_RXM_RLM_UART1</i>	0x2091025f	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART1
<i>CFG-MSGOUT-UBX_RXM_RLM_UART2</i>	0x20910260	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART2
<i>CFG-MSGOUT-UBX_RXM_RLM_USB</i>	0x20910261	U1	-	-	Output rate of the UBX-RXM-RLM message on port USB
<i>CFG-MSGOUT-UBX_RXM_RTCM_I2C</i>	0x20910268	U1	-	-	Output rate of the UBX-RXM-RTCM message on port I2C
<i>CFG-MSGOUT-UBX_RXM_RTCM_SPI</i>	0x2091026c	U1	-	-	Output rate of the UBX-RXM-RTCM message on port SPI
<i>CFG-MSGOUT-UBX_RXM_RTCM_UART1</i>	0x20910269	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART1
<i>CFG-MSGOUT-UBX_RXM_RTCM_UART2</i>	0x2091026a	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART2

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_RXM_RTCM_USB</i>	0x2091026b	U1	-	-	Output rate of the UBX-RXM-RTCM message on port USB
<i>CFG-MSGOUT-UBX_RXM_SFRBX_I2C</i>	0x20910231	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port I2C
<i>CFG-MSGOUT-UBX_RXM_SFRBX_SPI</i>	0x20910235	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port SPI
<i>CFG-MSGOUT-UBX_RXM_SFRBX_UART1</i>	0x20910232	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART1
<i>CFG-MSGOUT-UBX_RXM_SFRBX_UART2</i>	0x20910233	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART2
<i>CFG-MSGOUT-UBX_RXM_SFRBX_USB</i>	0x20910234	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port USB
<i>CFG-MSGOUT-UBX_RXM_SPARTN_I2C</i>	0x20910605	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port I2C
<i>CFG-MSGOUT-UBX_RXM_SPARTN_SPI</i>	0x20910609	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port SPI
<i>CFG-MSGOUT-UBX_RXM_SPARTN_UART1</i>	0x20910606	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port UART1
<i>CFG-MSGOUT-UBX_RXM_SPARTN_UART2</i>	0x20910607	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port UART2
<i>CFG-MSGOUT-UBX_RXM_SPARTN_USB</i>	0x20910608	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port USB
<i>CFG-MSGOUT-UBX_SEC_OSNMA_I2C</i>	0x209106ca	U1	-	-	Output rate of the UBX-SEC-OSNMA message on port I2C
<i>CFG-MSGOUT-UBX_SEC_OSNMA_SPI</i>	0x209106ce	U1	-	-	Output rate of the UBX-SEC-OSNMA message on port SPI
<i>CFG-MSGOUT-UBX_SEC_OSNMA_UART1</i>	0x209106cb	U1	-	-	Output rate of the UBX-SEC-OSNMA message on port UART1
<i>CFG-MSGOUT-UBX_SEC_OSNMA_UART2</i>	0x209106cc	U1	-	-	Output rate of the UBX-SEC-OSNMA message on port UART2
<i>CFG-MSGOUT-UBX_SEC_OSNMA_USB</i>	0x209106cd	U1	-	-	Output rate of the UBX-SEC-OSNMA message on port USB
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_I2C</i>	0x20910689	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port I2C
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_SPI</i>	0x2091068d	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port SPI
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_UART1</i>	0x2091068a	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port UART1
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_UART2</i>	0x2091068b	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port UART2
<i>CFG-MSGOUT-UBX_SEC_SIGLOG_USB</i>	0x2091068c	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port USB
<i>CFG-MSGOUT-UBX_SEC_SIG_I2C</i>	0x20910634	U1	-	-	Output rate of the UBX-SEC-SIG message on port I2C
<i>CFG-MSGOUT-UBX_SEC_SIG_SPI</i>	0x20910638	U1	-	-	Output rate of the UBX-SEC-SIG message on port SPI
<i>CFG-MSGOUT-UBX_SEC_SIG_UART1</i>	0x20910635	U1	-	-	Output rate of the UBX-SEC-SIG message on port UART1
<i>CFG-MSGOUT-UBX_SEC_SIG_UART2</i>	0x20910636	U1	-	-	Output rate of the UBX-SEC-SIG message on port UART2
<i>CFG-MSGOUT-UBX_SEC_SIG_USB</i>	0x20910637	U1	-	-	Output rate of the UBX-SEC-SIG message on port USB

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-MSGOUT-UBX_TIM_TM2_I2C</i>	0x20910178	U1	-	-	Output rate of the UBX-TIM-TM2 message on port I2C
<i>CFG-MSGOUT-UBX_TIM_TM2_SPI</i>	0x2091017c	U1	-	-	Output rate of the UBX-TIM-TM2 message on port SPI
<i>CFG-MSGOUT-UBX_TIM_TM2_UART1</i>	0x20910179	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART1
<i>CFG-MSGOUT-UBX_TIM_TM2_UART2</i>	0x2091017a	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART2
<i>CFG-MSGOUT-UBX_TIM_TM2_USB</i>	0x2091017b	U1	-	-	Output rate of the UBX-TIM-TM2 message on port USB
<i>CFG-MSGOUT-UBX_TIM_TP_I2C</i>	0x2091017d	U1	-	-	Output rate of the UBX-TIM-TP message on port I2C
<i>CFG-MSGOUT-UBX_TIM_TP_SPI</i>	0x20910181	U1	-	-	Output rate of the UBX-TIM-TP message on port SPI
<i>CFG-MSGOUT-UBX_TIM_TP_UART1</i>	0x2091017e	U1	-	-	Output rate of the UBX-TIM-TP message on port UART1
<i>CFG-MSGOUT-UBX_TIM_TP_UART2</i>	0x2091017f	U1	-	-	Output rate of the UBX-TIM-TP message on port UART2
<i>CFG-MSGOUT-UBX_TIM_TP_USB</i>	0x20910180	U1	-	-	Output rate of the UBX-TIM-TP message on port USB
<i>CFG-MSGOUT-UBX_TIM_VRFY_I2C</i>	0x20910092	U1	-	-	Output rate of the UBX-TIM-VRFY message on port I2C
<i>CFG-MSGOUT-UBX_TIM_VRFY_SPI</i>	0x20910096	U1	-	-	Output rate of the UBX-TIM-VRFY message on port SPI
<i>CFG-MSGOUT-UBX_TIM_VRFY_UART1</i>	0x20910093	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART1
<i>CFG-MSGOUT-UBX_TIM_VRFY_UART2</i>	0x20910094	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART2
<i>CFG-MSGOUT-UBX_TIM_VRFY_USB</i>	0x20910095	U1	-	-	Output rate of the UBX-TIM-VRFY message on port USB

Table 19: CFG-MSGOUT configuration items

### 6.9.12 CFG-NAV2: Secondary output configuration

This group contains configuration items related to the secondary (NAV2) output.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-NAV2-OUT_ENABLED</i>	0x10170001	L	-	-	Enable secondary (NAV2) output Enables the secondary output (GNSS standalone output). It can be used simultaneously with the available primary output (high precision, sensor fusion or time mode output).
<i>CFG-NAV2-SBAS_USE_INTEGRITY</i>	0x10170002	L	-	-	Use SBAS integrity information in the secondary output If enabled, the receiver uses only GPS satellites for which integrity information is available. This configuration item allows configuring the SBAS integrity feature differently for the primary output and the secondary output. For configuring the primary output, see CFG-SBAS-USE_INTEGRITY.
<i>CFG-NAV2-NAVSPG_ONLY_AUTHDATA</i>	0x10170003	L	-	-	Enable using only signals with authenticated navigation data in the secondary output

Configuration item	Key ID	Type	Scale	Unit	Description
If enabled, the receiver uses only signals with authenticated navigation data. This configuration item allows configuring the authenticated only navigation feature differently for the primary output and the secondary output. For configuring the primary output, see CFG-NAVSPG-ONLY_AUTHDATA. It is recommended to enable the authenticated only navigation in the secondary output, while keeping all the constellations in the primary output					

Table 20: CFG-NAV2 configuration items

### 6.9.13 CFG-NAVHPG: High precision navigation configuration

This group configures items related to the operation of the receiver in high precision, for example Differential correction and other related features.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-NAVHPG-DGNSSMODE	0x20140011	E1	-	-	Differential corrections mode

See [Table 22](#) below for a list of possible constants for this item.

Table 21: CFG-NAVHPG configuration items

Constant	Value	Description
RTK_FLOAT	2	No attempts made to fix ambiguities
RTK_FIXED	3	Ambiguities are fixed whenever possible
RTK_CAR	5	Conservative ambiguity resolution

Table 22: Constants for CFG-NAVHPG-DGNSSMODE

### 6.9.14 CFG-NAVSPG: Standard precision navigation configuration

This group contains configuration items related to the operation of the receiver at standard precision, including configuring position fix mode, ionospheric model selection and other related items.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	Position fix mode
See <a href="#">Table 24</a> below for a list of possible constants for this item.					
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	Initial fix must be a 3D fix
CFG-NAVSPG-WKNROLLOVER	0x30110017	U2	-	-	GPS week rollover number
GPS week numbers are set correctly from this week up to 1024 weeks after this week. The range is from 1 to 4096.					
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	UTC standard to be used
See section GNSS time base in the integration manual. See <a href="#">Table 25</a> below for a list of possible constants for this item.					
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	Dynamic platform model
See <a href="#">Table 26</a> below for a list of possible constants for this item.					
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	Acknowledge assistance input messages
CFG-NAVSPG-USRDAT	0x10110061	L	-	-	Use user geodetic datum parameters
User specified geodetic system can be used instead of the receiver's default WGS84 ellipsoid. All of the CFG-NAVSPG-USRDATA_* user geodetic datum parameters listed here must be configured before enabling the user specified geodetic system.					
CFG-NAVSPG-USRDAT_MAJA	0x50110062	R8	-	m	Geodetic datum semi-major axis
Accepted range is from 6,300,000.0 to 6,500,000.0 meters					
CFG-NAVSPG-USRDAT_FLAT	0x50110063	R8	-	-	Geodetic datum 1.0 / flattening
Accepted range is 0.0 to 500.0.					

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-NAVSPG-USRDAT_RX</i>	0x40110064	R4	-	m	Geodetic datum X axis shift at the origin Accepted range is +/- 5000.0 meters.
<i>CFG-NAVSPG-USRDAT_DY</i>	0x40110065	R4	-	m	Geodetic datum Y axis shift at the origin Accepted range is +/- 5000.0 meters.
<i>CFG-NAVSPG-USRDAT_DZ</i>	0x40110066	R4	-	m	Geodetic datum Z axis shift at the origin Accepted range is +/- 5000.0 meters.
<i>CFG-NAVSPG-USRDAT_ROTX</i>	0x40110067	R4	-	arcsec	Geodetic datum rotation about the X axis Accepted range is +/- 20.0 milli arc seconds.
<i>CFG-NAVSPG-USRDAT_ROTY</i>	0x40110068	R4	-	arcsec	Geodetic datum rotation about the Y axis () Accepted range is +/- 20.0 milli-arc seconds.
<i>CFG-NAVSPG-USRDAT_SCALE</i>	0x4011006a	R4	-	ppm	Geodetic datum scale factor Accepted range is 0.0 to 50.0 parts per million.
<i>CFG-NAVSPG-INFIL_MINSVS</i>	0x201100a1	U1	-	-	Minimum number of satellites for navigation
<i>CFG-NAVSPG-INFIL_MAXSVS</i>	0x201100a2	U1	-	-	Maximum number of satellites for navigation
<i>CFG-NAVSPG-INFIL_MINCNO</i>	0x201100a3	U1	-	dBHz	Minimum satellite signal level for navigation
<i>CFG-NAVSPG-INFIL_MINELEV</i>	0x201100a4	I1	-	deg	Minimum elevation for a GNSS satellite to be used in navigation
<i>CFG-NAVSPG-INFIL_NCNOTHRS</i>	0x201100aa	U1	-	-	Number of satellites required to have C/N0 above <i>CFG-NAVSPG-INFIL_CNOTHRS</i> for a fix to be attempted
<i>CFG-NAVSPG-INFIL_CNOTHRS</i>	0x201100ab	U1	-	-	C/N0 threshold for deciding whether to attempt a fix
<i>CFG-NAVSPG-OUTFIL_PDOP</i>	0x301100b1	U2	0.1	-	Output filter position DOP mask (threshold)
<i>CFG-NAVSPG-OUTFIL_TDOP</i>	0x301100b2	U2	0.1	-	Output filter time DOP mask (threshold)
<i>CFG-NAVSPG-OUTFIL_PACC</i>	0x301100b3	U2	-	m	Output filter position accuracy mask (threshold)
<i>CFG-NAVSPG-OUTFIL_TACC</i>	0x301100b4	U2	-	m	Output filter time accuracy mask (threshold)
<i>CFG-NAVSPG-OUTFIL_FACC</i>	0x301100b5	U2	0.01	m/s	Output filter frequency accuracy mask (threshold)
<i>CFG-NAVSPG-CONSTR_ALT</i>	0x401100c1	I4	0.01	m	Fixed altitude (mean sea level) for 2D fix mode
<i>CFG-NAVSPG-CONSTR_ALTVAR</i>	0x401100c2	U4	0.0001	m^2	Fixed altitude variance for 2D mode
<i>CFG-NAVSPG-CONSTR_DGNSSSTO</i>	0x201100c4	U1	-	s	DGNSS timeout
<i>CFG-NAVSPG-PL_ENA</i>	0x101100d7	L	-	-	Enable Protection level If enabled, protection level computing is on.
<i>CFG-NAVSPG-ONLY_AUTHDATA</i>	0x101100dd	L	-	-	Enable using only signals with authenticated navigation data In dual filter operation, this configuration item is applied to the primary output.
<i>CFG-NAVSPG-MAX_TIMETRUSTED_ACC</i>	0x301100de	U2	-	s	Maximum trusted time accuracy
Maximum trusted time accuracy value to perform time authentication.					

**Table 23: CFG-NAVSPG configuration items**

Constant	Value	Description
<i>2DONLY</i>	1	2D only

Constant	Value	Description
<i>3DONLY</i>	2	3D only
<i>AUTO</i>	3	Auto 2D/3D

**Table 24: Constants for CFG-NAVSPG-FIXMODE**

Constant	Value	Description
<i>AUTO</i>	0	Automatic; receiver selects based on GNSS configuration
<i>USNO</i>	3	UTC as operated by the U.S. Naval Observatory (USNO); derived from GPS time
<i>EU</i>	5	UTC as combined from multiple European laboratories; derived from Galileo time
<i>SU</i>	6	UTC as operated by the former Soviet Union (SU); derived from GLONASS time
<i>NTSC</i>	7	UTC as operated by the National Time Service Center (NTSC), China; derived from BeiDou time
<i>NPLI</i>	8	UTC as operated by the National Physics Laboratory, India (NPLI); derived from NavIC time
<i>NICT</i>	9	UTC as operated by the National Institute of Information and Communications Technology, Japan (NICT); derived from QZSS time

**Table 25: Constants for CFG-NAVSPG-UTCSTANDARD**

Constant	Value	Description
<i>PORT</i>	0	Portable
<i>STAT</i>	2	Stationary
<i>PED</i>	3	Pedestrian
<i>AUTOMOT</i>	4	Automotive
<i>SEA</i>	5	Sea
<i>AIR1</i>	6	Airborne with <1g acceleration
<i>AIR2</i>	7	Airborne with <2g acceleration
<i>AIR4</i>	8	Airborne with <4g acceleration
<i>WRIST</i>	9	Wrist-worn watch (not available in all products)
<i>BIKE</i>	10	Motorbike (not available in all products)
<i>MOWER</i>	11	Robotic lawn mower (not available in all products)
<i>ESCOOTER</i>	12	E-scooter (not available in all products)

**Table 26: Constants for CFG-NAVSPG-DYNMODEL**

### 6.9.15 CFG-NMEA: NMEA protocol configuration

This group configures the [NMEA protocol](#). See section [NMEA protocol configuration](#) for a detailed description of the configuration effects on NMEA output.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-NMEA-PROTVER</i>	0x20930001	E1	-	-	NMEA protocol version
See <a href="#">Table 28</a> below for a list of possible constants for this item.					
<i>CFG-NMEA-MAXSVS</i>	0x20930002	E1	-	-	Maximum number of SVs to report per Talker ID
See <a href="#">Table 29</a> below for a list of possible constants for this item.					
<i>CFG-NMEA-COMPAT</i>	0x10930003	L	-	-	Enable compatibility mode
This might be needed for certain applications, e.g. for an NMEA parser that expects a fixed number of digits in position coordinates.					

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-NMEA-CONSIDER</i>	0x10930004	L	-	-	Enable considering mode This affects the way the used satellite count in NMEA output is calculated. If set, also considered but rejected satellites (e.g. RAIMED) are counted as used satellites as well.
<i>CFG-NMEA-LIMIT82</i>	0x10930005	L	-	-	Enable strict limit to 82 characters maximum NMEA message length
<i>CFG-NMEA-HIGHPREC</i>	0x10930006	L	-	-	Enable high precision mode This flag cannot be set in conjunction with either CFG-NMEA-COMPAT or CFG-NMEA-LIMIT82 mode.
<i>CFG-NMEA-SVNUMBERING</i>	0x20930007	E1	-	-	Display configuration for SVs that do not have value defined in NMEA Configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. See also <a href="#">Satellite Numbering</a> . See <a href="#">Table 30</a> below for a list of possible constants for this item.
<i>CFG-NMEA-FILT_GPS</i>	0x10930011	L	-	-	Disable reporting of GPS satellites
<i>CFG-NMEA-FILT_SBAS</i>	0x10930012	L	-	-	Disable reporting of SBAS satellites
<i>CFG-NMEA-FILT_GAL</i>	0x10930013	L	-	-	Disable reporting of Galileo satellites
<i>CFG-NMEA-FILT_QZSS</i>	0x10930015	L	-	-	Disable reporting of QZSS satellites
<i>CFG-NMEA-FILT_GLO</i>	0x10930016	L	-	-	Disable reporting of GLONASS satellites
<i>CFG-NMEA-FILT_BDS</i>	0x10930017	L	-	-	Disable reporting of BeiDou satellites
<i>CFG-NMEA-OUT_INVFIX</i>	0x10930021	L	-	-	Enable position output for failed or invalid fixes
<i>CFG-NMEA-OUT_MSKFIX</i>	0x10930022	L	-	-	Enable position output for invalid fixes
<i>CFG-NMEA-OUT_INVTIME</i>	0x10930023	L	-	-	Enable time output for invalid times
<i>CFG-NMEA-OUT_INVDATE</i>	0x10930024	L	-	-	Enable date output for invalid dates
<i>CFG-NMEA-OUT_ONLYGPS</i>	0x10930025	L	-	-	Restrict output to GPS satellites only
<i>CFG-NMEA-OUT_FROZENCOG</i>	0x10930026	L	-	-	Enable course over ground output even if it is frozen
<i>CFG-NMEA-MAINTALKERID</i>	0x20930031	E1	-	-	Main Talker ID By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see <a href="#">CFG-SIGNAL</a> ). This field enables the main Talker ID to be overridden. See <a href="#">Table 31</a> below for a list of possible constants for this item.
<i>CFG-NMEA-GSVTALKERID</i>	0x20930032	E1	-	-	Talker ID for GSV NMEA messages By default the Talker ID for GSV messages is GNSS-specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden. See <a href="#">Table 32</a> below for a list of possible constants for this item.
<i>CFG-NMEA-BDSTALKERID</i>	0x30930033	U2	-	-	BeiDou Talker ID Sets the two ASCII characters that should be used for the BeiDou Talker ID. If these are set to zero, the receiver uses the default BeiDou Talker ID.

**Table 27: CFG-NMEA configuration items**

Constant	Value	Description
V21	21	NMEA protocol version 2.1
V23	23	NMEA protocol version 2.3
V40	40	NMEA protocol version 4.0 (not available in all products)
V41	41	NMEA protocol version 4.10 (not available in all products)

Constant	Value	Description
V411	42	NMEA protocol version 4.11 (not available in all products)

**Table 28: Constants for CFG-NMEA-PROTVER**

Constant	Value	Description
UNLIM	0	Unlimited
8SVS	8	8 SVs
12SVS	12	12 SVs
16SVS	16	16 SVs

**Table 29: Constants for CFG-NMEA-MAXSVS**

Constant	Value	Description
STRICT	0	Strict - satellites are not output
EXTENDED	1	Extended - use proprietary numbering

**Table 30: Constants for CFG-NMEA-SVNUMBERING**

Constant	Value	Description
AUTO	0	Main Talker ID is not overridden
GP	1	Set main Talker ID to 'GP'
GL	2	Set main Talker ID to 'GL'
GN	3	Set main Talker ID to 'GN'
GA	4	Set main Talker ID to 'GA' (not available in all products)
GB	5	Set main Talker ID to 'GB' (not available in all products)
GQ	7	Set main Talker ID to 'GQ' (not available in all products)

**Table 31: Constants for CFG-NMEA-MAINTALKERID**

Constant	Value	Description
GNSS	0	Use GNSS-specific Talker ID (as defined by NMEA)
MAIN	1	Use the main Talker ID

**Table 32: Constants for CFG-NMEA-GSVTALKERID**

## 6.9.16 CFG-ODO: Odometer and low-speed course over ground filter configuration

The items in this group allow the user to configure the Odometer feature and Low-Speed Course Over Ground Filter.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-ODO-USEODO	0x10220001	L	-	-	Use odometer
CFG-ODO-USCOG	0x10220002	L	-	-	Use low-speed course over ground filter
CFG-ODO-OUTLPVEL	0x10220003	L	-	-	Output low-pass filtered velocity
CFG-ODO-OUTLPCOG	0x10220004	L	-	-	Output low-pass filtered course over ground (heading)
CFG-ODO-PROFILE	0x20220005	E1	-	-	Odometer profile configuration
See Table 34 below for a list of possible constants for this item.					
CFG-ODO-COGMAXSPEED	0x20220021	U1	1e-1	m/s	Upper speed limit for low-speed course over ground filter

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-ODO-COGMAXPOSACC</i>	0x20220022	U1	-	-	Maximum acceptable position accuracy for computing low-speed filtered course over ground
<i>CFG-ODO-VELLPGAIN</i>	0x20220031	U1	-	-	Velocity low-pass filter level Range is from 0 to 255.
<i>CFG-ODO-COGLPGAIN</i>	0x20220032	U1	-	-	Course over ground low-pass filter level (at speed < 8 m/s) Range is from 0 to 255.

**Table 33: CFG-ODO configuration items**

Constant	Value	Description
RUN	0	Running
CYCL	1	Cycling
SWIM	2	Swimming
CAR	3	Car
CUSTOM	4	Custom

**Table 34: Constants for CFG-ODO-PROFILE**

### 6.9.17 CFG-QZSS: QZSS system configuration

Note that enabling and disabling of individual GNSS is done via the [CFG-SIGNAL](#) configuration group.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-QZSS-USE_SLAS_DGNSS</i>	0x10370005	L	-	-	Apply QZSS SLAS DGNSS corrections
<i>CFG-QZSS-USE_SLAS_TESTMODE</i>	0x10370006	L	-	-	Use QZSS SLAS data when it is in test mode (SLAS msg 0)
<i>CFG-QZSS-USE_SLAS_RAIM_UNCORR</i>	0x10370007	L	-	-	Raim out measurements that are not corrected by QZSS SLAS, if at least 5 measurements are corrected
<i>CFG-QZSS-SLAS_MAX_BASELINE</i>	0x30370008	U2	-	km	Maximum baseline distance to closest GMS SLAS corrections are only applied if the receiver is at most this far away from the closest ground monitoring station (GMS). Note that due to the nature of the service, the usefulness of corrections degrades with distance. When far away from GMS, SBAS may be a better correction source.

**Table 35: CFG-QZSS configuration items**

### 6.9.18 CFG-RATE: Navigation and measurement rate configuration

The configuration items in this group allow the user to alter the rate at which navigation solutions (and the measurements that they depend on) are generated by the receiver. The calculation of the navigation solution is aligned to the top of a second zero (first second of the week) of the configured reference time system. The navigation period is an integer multiple of the measurement period.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-RATE-MEAS</i>	0x30210001	U2	0.001	s	Nominal time between GNSS measurements E.g. 100 ms results in 10 Hz measurement rate, 1000 ms = 1 Hz measurement rate.
<i>CFG-RATE-NAV</i>	0x30210002	U2	-	-	Ratio of number of measurements to number of navigation solutions E.g. 5 means five measurements for every navigation solution. The minimum value is 1. The maximum value is 127.
<i>CFG-RATE-TIMEREF</i>	0x20210003	E1	-	-	Time system to which measurements are aligned

Configuration item	Key ID	Type	Scale	Unit	Description
See <a href="#">Table 37</a> below for a list of possible constants for this item.					

**Table 36: CFG-RATE configuration items**

Constant	Value	Description
UTC	0	Align measurements to UTC time
GPS	1	Align measurements to GPS time
GLO	2	Align measurements to GLONASS time
BDS	3	Align measurements to BeiDou time
GAL	4	Align measurements to Galileo time
NAVIC	5	Align measurements to NavIC time

**Table 37: Constants for CFG-RATE-TIMEREF**

### 6.9.19 CFG-RINV: Remote inventory

The remote inventory enables storing user-defined data in the receiver's non-volatile memory. The data can be either binary or a string of ASCII characters. In the latter case, it can optionally be output at startup after the boot screen.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-RINV-DUMP	0x10c70001	L	-	-	Dump data at startup
When true, data is dumped to the interface at startup, unless CFG-RINV-BINARY is set.					
CFG-RINV-BINARY	0x10c70002	L	-	-	Data is binary
When true, the data is treated as binary data.					
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	Size of data
Size of data to store/stored in the remote inventory (maximum 30 bytes).					
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	Data bytes 1-8 (LSB)
Data to store/stored in remote inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	Data bytes 9-16
Data to store/stored in remote inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	Data bytes 17-24
Data to store/stored in remote inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	Data bytes 25-30 (MSB)
Data to store/stored in remote inventory - max 6 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					

**Table 38: CFG-RINV configuration items**

### 6.9.20 CFG-RTCM: RTCM protocol configuration

Configures the RTCM protocol.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-RTCM-DF003_OUT	0x30090001	U2	-	-	RTCM DF003 (Reference station ID) output value
Value to set in RTCM data field DF003 (Reference station ID) in RTCM output messages containing DF003. The value can be 0..4095.					
CFG-RTCM-DF003_IN	0x30090008	U2	-	-	RTCM DF003 (Reference station ID) input value
Value to use for filtering out RTCM input messages based on their DF003 data field (Reference station ID) value. To be used in conjunction with CFG-RTCM-DF003_IN_FILTER. The value can be 0..4095.					
CFG-RTCM-DF003_IN_FILTER	0x20090009	E1	-	-	RTCM input filter configuration based on RTCM DF003 (Reference station ID) value

Configuration item	Key ID	Type	Scale	Unit	Description
Configures if and how the filtering out of RTCM input messages based on their DF003 data field (Reference station ID) operates.					
See <a href="#">Table 40</a> below for a list of possible constants for this item.					

**Table 39: CFG-RTCM configuration items**

Constant	Value	Description
<i>DISABLED</i>	0	Disabled RTCM input filter; all input messages allowed
<i>RELAXED</i>	1	Relaxed RTCM input filter; input messages allowed must contain a DF003 data field matching the CFG-RTCM-DF003_IN value or not contain by specification the DF003 data field
<i>STRICT</i>	2	Strict RTCM input filter; input messages allowed must contain a DF003 data field matching the CFG-RTCM-DF003 value

**Table 40: Constants for CFG-RTCM-DF003\_IN\_FILTER**

### 6.9.21 CFG-SBAS: SBAS configuration

This group configures the SBAS receiver subsystem (i.e. WAAS, EGNOS, MSAS). See SBAS configuration settings description in the integration manual for a detailed description of how these settings affect receiver operation.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-SBAS-USE_TESTMODE</i>	0x10360002	L	-	-	Use SBAS data when it is in test mode (SBAS msg 0)
<i>CFG-SBAS-USE_RANGING</i>	0x10360003	L	-	-	Use SBAS GEOs as a ranging source (for navigation)
<i>CFG-SBAS-USE_DIFFCORR</i>	0x10360004	L	-	-	Use SBAS differential corrections
<i>CFG-SBAS-USE_INTEGRITY</i>	0x10360005	L	-	-	Use SBAS integrity information
If enabled, the receiver uses only GPS satellites for which integrity information is available					
<i>CFG-SBAS-ACCEPT_NOT_IN_PRNMASK</i>	0x30360008	X2	-	-	Accept corrections from SBAS SV, even if not self included in PRN MASK (Message Type 1)

If enabled, the receiver will still use the SBAS data, even when the SBAS SV itself is not included in its PRN MASK. This is only useful for BDSBAS and not compatible with current EGNOS implementation.

See [Table 42](#) below for a list of possible constants for this item.

<i>CFG-SBAS-USE_IONONLY</i>	0x10360007	L	-	-	Use SBAS ionosphere correction only
<i>CFG-SBAS-PRNSCANMASK</i>	0x50360006	X8	-	-	SBAS PRN search configuration

This configuration item determines which SBAS PRNs should be searched. Setting it to 0 indicates auto-scanning all SBAS PRNs. For non-zero values the bits correspond to the allocated SBAS PRNs ranging from PRN120 (bit 0) to PRN158 (bit 38), where a bit set enables searching for the corresponding PRN.

See [Table 43](#) below for a list of possible constants for this item.

**Table 41: CFG-SBAS configuration items**

Constant	Value	Description
<i>WAAS</i>	0x01	WAAS bit 1 = Use WAAS provider Id.
<i>EGNOS</i>	0x02	EGNOS bit 1 = Use EGNOS provider Id.
<i>MSAS</i>	0x04	MSAS bit 1 = Use MSAS provider Id.
<i>GAGAN</i>	0x08	GAGAN bit 1 = Use GAGAN provider Id.

<b>Constant</b>	<b>Value</b>	<b>Description</b>
<i>SDCM</i>	0x10	SDCM bit 1 = Use SDCM provider Id.
<i>BDSBAS</i>	0x20	BDSBAS bit 1 = Use BDSBAS provider Id.
<i>KASS</i>	0x40	KASS bit 1 = Use KASS provider Id.

**Table 42: Constants for CFG-SBAS-ACCEPT\_NOT\_IN\_PRNMASK**

<b>Constant</b>	<b>Value</b>	<b>Description</b>
<i>ALL</i>	0x000000000000000000000000	Enable search for all SBAS PRNs
<i>PRN120</i>	0x000000000000000000000001	Enable search for SBAS PRN120
<i>PRN121</i>	0x000000000000000000000002	Enable search for SBAS PRN121
<i>PRN122</i>	0x000000000000000000000004	Enable search for SBAS PRN122
<i>PRN123</i>	0x000000000000000000000008	Enable search for SBAS PRN123
<i>PRN124</i>	0x000000000000000000000010	Enable search for SBAS PRN124
<i>PRN125</i>	0x000000000000000000000020	Enable search for SBAS PRN125
<i>PRN126</i>	0x000000000000000000000040	Enable search for SBAS PRN126
<i>PRN127</i>	0x000000000000000000000080	Enable search for SBAS PRN127
<i>PRN128</i>	0x0000000000000000000000100	Enable search for SBAS PRN128
<i>PRN129</i>	0x0000000000000000000000200	Enable search for SBAS PRN129
<i>PRN130</i>	0x0000000000000000000000400	Enable search for SBAS PRN130
<i>PRN131</i>	0x0000000000000000000000800	Enable search for SBAS PRN131
<i>PRN132</i>	0x0000000000000000000001000	Enable search for SBAS PRN132
<i>PRN133</i>	0x0000000000000000000002000	Enable search for SBAS PRN133
<i>PRN134</i>	0x0000000000000000000004000	Enable search for SBAS PRN134
<i>PRN135</i>	0x0000000000000000000008000	Enable search for SBAS PRN135
<i>PRN136</i>	0x00000000000000000000010000	Enable search for SBAS PRN136
<i>PRN137</i>	0x00000000000000000000020000	Enable search for SBAS PRN137
<i>PRN138</i>	0x00000000000000000000040000	Enable search for SBAS PRN138
<i>PRN139</i>	0x00000000000000000000080000	Enable search for SBAS PRN139
<i>PRN140</i>	0x000000000000000000000100000	Enable search for SBAS PRN140
<i>PRN141</i>	0x000000000000000000000200000	Enable search for SBAS PRN141
<i>PRN142</i>	0x000000000000000000000400000	Enable search for SBAS PRN142
<i>PRN143</i>	0x000000000000000000000800000	Enable search for SBAS PRN143
<i>PRN144</i>	0x0000000000000000000001000000	Enable search for SBAS PRN144
<i>PRN145</i>	0x0000000000000000000002000000	Enable search for SBAS PRN145
<i>PRN146</i>	0x0000000000000000000004000000	Enable search for SBAS PRN146
<i>PRN147</i>	0x0000000000000000000008000000	Enable search for SBAS PRN147
<i>PRN148</i>	0x00000000000000000000010000000	Enable search for SBAS PRN148
<i>PRN149</i>	0x00000000000000000000020000000	Enable search for SBAS PRN149
<i>PRN150</i>	0x00000000000000000000040000000	Enable search for SBAS PRN150
<i>PRN151</i>	0x00000000000000000000080000000	Enable search for SBAS PRN151

Constant	Value	Description
PRN152	0x0000000100000000	Enable search for SBAS PRN152
PRN153	0x0000000200000000	Enable search for SBAS PRN153
PRN154	0x0000000400000000	Enable search for SBAS PRN154
PRN155	0x0000000800000000	Enable search for SBAS PRN155
PRN156	0x0000001000000000	Enable search for SBAS PRN156
PRN157	0x0000002000000000	Enable search for SBAS PRN157
PRN158	0x0000004000000000	Enable search for SBAS PRN158

**Table 43: Constants for CFG-SBAS-PRNSCANMASK**

## 6.9.22 CFG-SEC: Security configuration

Security configuration.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SEC-CFG_LOCK	0x10f60009	L	-	-	Configuration lockdown
When set, the receiver configuration is locked and cannot be changed any more.					
CFG-SEC-CFG_LOCK_UNLOCKGRP1	0x30f6000a	U2	-	-	Configuration lockdown exempted group 1
This item can be set before enabling the configuration lockdown. It enables writing to the specified group even after the configuration lockdown has been enabled.					
CFG-SEC-CFG_LOCK_UNLOCKGRP2	0x30f6000b	U2	-	-	Configuration lockdown exempted group 2
This item can be set before enabling the configuration lockdown. It enables writing to the specified group even after the configuration lockdown has been enabled.					
CFG-SEC-SPOOFDET_SIM_SIG_DIS	0x10f6005d	L	-	-	Disabling the simulated signal spoofing detection.
CFG-SEC-JAMDET_SENSITIVITY_HI	0x10f60051	L	-	-	When set, go for a more sensitive jamming detection (at the cost of increased false alarm rate).

**Table 44: CFG-SEC configuration items**

## 6.9.23 CFG-SIGNAL: Satellite systems (GNSS) signal configuration

The enable items for individual signals are governed by their corresponding constellation enable item. It is necessary that at least one signal from a major GNSS constellation is enabled. See GNSS signal configuration in the integration manual for more details.

Configuration specific to a GNSS system is available in other groups (e.g. CFG-SBAS).

Note that changes to any items within this group triggers a reset to the GNSS subsystem. The reset takes some time, so wait first for the acknowledgement from the receiver and then 0.5 seconds before sending the next command.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	GPS enable
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	GPS L1C/A
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	GPS L2C
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	SBAS enable
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	SBAS L1C/A
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	Galileo enable
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	Galileo E1
CFG-SIGNAL-GAL_E5B_ENA	0x1031000a	L	-	-	Galileo E5b

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	BeiDou Enable
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	BeiDou B1I
CFG-SIGNAL-BDS_B2_ENA	0x1031000e	L	-	-	BeiDou B2I
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	QZSS enable
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	QZSS L1C/A
CFG-SIGNAL-QZSS_L1S_ENA	0x10310014	L	-	-	QZSS L1S
CFG-SIGNAL-QZSS_L2C_ENA	0x10310015	L	-	-	QZSS L2C
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	GLONASS enable
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	GLONASS L1
CFG-SIGNAL-GLO_L2_ENA	0x1031001a	L	-	-	GLONASS L2

**Table 45: CFG-SIGNAL configuration items**

### 6.9.24 CFG-SPARTN: SPARTN configuration

Configuration for the SPARTN input stream.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPARTN-USE_SOURCE	0x20a70001	E1	-	-	Selector for source SPARTN stream

See [Table 47](#) below for a list of possible constants for this item.

**Table 46: CFG-SPARTN configuration items**

Constant	Value	Description
IP	0x00	IP source (default)
		Selects IP (Raw) source
LBAND	0x01	L-Band source
		Selects L-Band (UBX-RXM-PMP) source

**Table 47: Constants for CFG-SPARTN-USE\_SOURCE**

### 6.9.25 CFG-SPI: Configuration of the SPI interface

Settings needed to configure the SPI communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPI-MAXFF	0x20640001	U1	-	-	Number of bytes containing 0xFF to receive before switching off reception. Range: 0 (mechanism off) - 63
CFG-SPI-CPOLARITY	0x10640002	L	-	-	Clock polarity select: 0: Active High Clock, SCLK idles low, 1: Active Low Clock, SCLK idles high
CFG-SPI-CPHASE	0x10640003	L	-	-	Clock phase select: 0: Data captured on first edge of SCLK, 1: Data captured on second edge of SCLK
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	Flag to disable timeout after 1.5s
CFG-SPI-ENABLED	0x10640006	L	-	-	Flag to indicate if the SPI interface should be enabled

**Table 48: CFG-SPI configuration items**

### 6.9.26 CFG-SPIINPROT: Input protocol configuration of the SPI interface

Input protocol enable flags of the SPI interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPIINPROT-UBX	0x10790001	L	-	-	Flag to indicate if UBX should be an input protocol on SPI
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	Flag to indicate if NMEA should be an input protocol on SPI
CFG-SPIINPROT-RTCM3X	0x10790004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on SPI
CFG-SPIINPROT-SPARTN	0x10790005	L	-	-	Flag to indicate if SPARTN should be an input protocol on SPI

Table 49: CFG-SPIINPROT configuration items

## 6.9.27 CFG-SPIOUTPROT: Output protocol configuration of the SPI interface

Output protocol enable flags of the SPI interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	Flag to indicate if UBX should be an output protocol on SPI
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	Flag to indicate if NMEA should be an output protocol on SPI
CFG-SPIOUTPROT-RTCM3X	0x107a0004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on SPI

Table 50: CFG-SPIOUTPROT configuration items

## 6.9.28 CFG-TMODE: Time mode configuration

Configuration for operation of the receiver in Time mode. The position referred to in the configuration items is that of the Antenna Reference Point (ARP).

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-TMODE-MODE	0x20030001	E1	-	-	Receiver mode
See <a href="#">Table 52</a> below for a list of possible constants for this item.					
CFG-TMODE-POS_TYPE	0x20030002	E1	-	-	Determines whether the ARP position is given in ECEF or LAT/LON/HEIGHT?
See <a href="#">Table 53</a> below for a list of possible constants for this item.					
CFG-TMODE-ECEF_X	0x40030003	I4	-	cm	ECEF X coordinate of the ARP position. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.
CFG-TMODE-ECEF_Y	0x40030004	I4	-	cm	ECEF Y coordinate of the ARP position. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.
CFG-TMODE-ECEF_Z	0x40030005	I4	-	cm	ECEF Z coordinate of the ARP position. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.
CFG-TMODE-ECEF_X_HP	0x20030006	I1	0.1	mm	High-precision ECEF X coordinate of the ARP position. Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.
CFG-TMODE-ECEF_Y_HP	0x20030007	I1	0.1	mm	High-precision ECEF Y coordinate of the ARP position. Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.
CFG-TMODE-ECEF_Z_HP	0x20030008	I1	0.1	mm	High-precision ECEF Z coordinate of the ARP position. Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-TMODE-LAT</i>	0x40030009	I4	1e-7	deg	Latitude of the ARP position. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.
<i>CFG-TMODE-LON</i>	0x4003000a	I4	1e-7	deg	Longitude of the ARP position. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.
<i>CFG-TMODE-HEIGHT</i>	0x4003000b	I4	-	cm	Height of the ARP position. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.
<i>CFG-TMODE-LAT_HP</i>	0x2003000c	I1	1e-9	deg	High-precision latitude of the ARP position Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.
<i>CFG-TMODE-LON_HP</i>	0x2003000d	I1	1e-9	deg	High-precision longitude of the ARP position Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.
<i>CFG-TMODE-HEIGHT_HP</i>	0x2003000e	I1	0.1	mm	High-precision height of the ARP position Accepted range is -99 to +99. This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.
<i>CFG-TMODE-FIXED_POS_ACC</i>	0x4003000f	U4	0.1	mm	Fixed position 3D accuracy
<i>CFG-TMODE-SVIN_MIN_DUR</i>	0x40030010	U4	-	s	Survey-in minimum duration This will only be used if CFG-TMODE-MODE=SURVEY_IN.
<i>CFG-TMODE-SVIN_ACC_LIMIT</i>	0x40030011	U4	0.1	mm	Survey-in position accuracy limit This will only be used if CFG-TMODE-MODE=SURVEY_IN.

**Table 51: CFG-TMODE configuration items**

Constant	Value	Description
<i>DISABLED</i>	0	Disabled
<i>SURVEY_IN</i>	1	Survey in
<i>FIXED</i>	2	Fixed mode (true ARP position information required)

**Table 52: Constants for CFG-TMODE-MODE**

Constant	Value	Description
<i>ECEF</i>	0	Position is ECEF
<i>LLH</i>	1	Position is Lat/Lon/Height

**Table 53: Constants for CFG-TMODE-POS\_TYPE**

## 6.9.29 CFG-TP: Time pulse configuration

Use this group to configure the generation of time pulses.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-TP-PULSE_DEF</i>	0x20050023	E1	-	-	Determines whether the time pulse is interpreted as frequency or period See Table 55 below for a list of possible constants for this item.
<i>CFG-TP-PULSE_LENGTH_DEF</i>	0x20050030	E1	-	-	Determines whether the time pulse length is interpreted as length[us] or pulse ratio[%] See Table 56 below for a list of possible constants for this item.
<i>CFG-TP-ANT_CABLEDELAY</i>	0x30050001	I2	1e-9	s	Antenna cable delay in [ns]
<i>CFG-TP-PERIOD_TP1</i>	0x40050002	U4	1e-6	s	Time pulse period (TP1) in [us] This is used only if CFG-TP-PULSE_DEF=PERIOD.

Configuration item	Key ID	Type	Scale	Unit	Description
<i>CFG-TP-PERIOD_LOCK_TP1</i>	0x40050003	U4	1e-6	s	Time pulse period when locked to GNSS time (TP1) in [us]  Only used if CFG-TP-PULSE_DEF=PERIOD and CFG-TP-USE_LOCKED_TP1 is set.
<i>CFG-TP-FREQ_TP1</i>	0x40050024	U4	-	Hz	Time pulse frequency (TP1) in [Hz]  This is used only if CFG-TP-PULSE_DEF=FREQ.
<i>CFG-TP-FREQ_LOCK_TP1</i>	0x40050025	U4	-	Hz	Time pulse frequency when locked to GNSS time (TP1) in [Hz]  Only used if CFG-TP-PULSE_DEF=FREQ and CFG-TP-USE_LOCKED_TP1 is set.
<i>CFG-TP-LEN_TP1</i>	0x40050004	U4	1e-6	s	Time pulse length (TP1) in [us]  Only used if CFG-TP-PULSE_LENGTH_DEF=LENGTH is set.
<i>CFG-TP-LEN_LOCK_TP1</i>	0x40050005	U4	1e-6	s	Time pulse length when locked to GNSS time (TP1) in [us]  Only used if CFG-TP-PULSE_LENGTH_DEF=LENGTH and CFG-TP-USE_LOCKED_TP1 is set.
<i>CFG-TP-DUTY_TP1</i>	0x5005002a	R8	-	%	Time pulse duty cycle (TP1) in [%]  Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO is set.
<i>CFG-TP-DUTY_LOCK_TP1</i>	0x5005002b	R8	-	%	Time pulse duty cycle when locked to GNSS time (TP1) in [%]  Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO and CFG-TP-USE_LOCKED_TP1 are set.
<i>CFG-TP-USER_DELAY_TP1</i>	0x40050006	I4	1e-9	s	User-configurable time pulse delay (TP1) in [ns]
<i>CFG-TP-TP1_ENA</i>	0x10050007	L	-	-	Enable the time pulse (TP1)  if pin associated with time pulse is assigned for another function, the other function takes precedence. Must be set for frequency-time products.
<i>CFG-TP-SYNC_GNSS_TP1</i>	0x10050008	L	-	-	Sync time pulse to GNSS time or local clock (TP1)  If set, sync to GNSS if GNSS time is valid. Otherwise, use local clock. This flag can be unset only in Timing product variants.
<i>CFG-TP-USE_LOCKED_TP1</i>	0x10050009	L	-	-	Use locked parameters when possible (TP1)  If set, use CFG-TP-PERIOD_LOCK_TP1 and CFG-TP-LEN_LOCK_TP1 as soon as GNSS time is valid. Otherwise, use CFG-TP-PERIOD_TP1 and CFG-TP-LEN_TP1.
<i>CFG-TP-ALIGN_TO_TOW_TP1</i>	0x1005000a	L	-	-	Align time pulse to top of second (TP1)  To use this feature, CFG-TP-SYNC_GNSS_TP1 must be set. Time pulse period must be an integer fraction of 1 second.
<i>CFG-TP-POL_TP1</i>	0x1005000b	L	-	-	Set time pulse polarity (TP1)  false (0) : falling edge at top of second. true (1) : rising edge at top of second.
<i>CFG-TP-TIMEGRID_TP1</i>	0x2005000c	E1	-	-	Time grid to use (TP1)  Only relevant if CFG-TP-SYNC_GNSS_TP1 is set. Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix it attempts to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in CFG-SIGNAL-*. No TP is generated if the selected GNSS constellation is not configured. See <a href="#">Table 57</a> below for a list of possible constants for this item.
<i>CFG-TP-DRSTR_TP1</i>	0x20050035	E1	-	-	Set drive strength of TP1  Time Pulse pin 1 (TP1) can support 4 possible drive strength cases: 2, 4, 8 and 12 mA See <a href="#">Table 58</a> below for a list of possible constants for this item.

**Table 54: CFG-TP configuration items**

Constant	Value	Description
PERIOD	0	Time pulse period [us]
FREQ	1	Time pulse frequency [Hz]

**Table 55: Constants for CFG-TP-PULSE\_DEF**

Constant	Value	Description
RATIO	0	Time pulse ratio
LENGTH	1	Time pulse length

**Table 56: Constants for CFG-TP-PULSE\_LENGTH\_DEF**

Constant	Value	Description
UTC	0	UTC time reference
GPS	1	GPS time reference
GLO	2	GLONASS time reference
BDS	3	BeiDou time reference
GAL	4	Galileo time reference
NAVIC	5	NavIC time reference

**Table 57: Constants for CFG-TP-TIMEGRID\_TP1**

Constant	Value	Description
DRIVE_STRENGTH_2MA	0	2 mA drive strength
DRIVE_STRENGTH_4MA	1	4 mA drive strength
DRIVE_STRENGTH_8MA	2	8 mA drive strength
DRIVE_STRENGTH_12MA	3	12 mA drive strength

**Table 58: Constants for CFG-TP-DRSTR\_TP1**

### 6.9.30 CFG-TXREADY: TX ready configuration

Configuration of the TX ready pin.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-TXREADY-ENABLED	0x10a20001	L	-	-	Flag to indicate if TX ready pin mechanism should be enabled
CFG-TXREADY-POLARITY	0x10a20002	L	-	-	The polarity of the TX ready pin: false:high-active, true:low-active
CFG-TXREADY-PIN	0x20a20003	U1	-	-	Pin number to use for the TX ready functionality
CFG-TXREADY-THRESHOLD	0x30a20004	U2	-	-	Amount of data that should be ready on the interface before triggering the TX ready pin
The value is amount of 8-byte chunks. For example, value of 250 sets the trigger to 2000 bytes.					
CFG-TXREADY-INTERFACE	0x20a20005	E1	-	-	Interface where the TX ready feature should be linked to

See [Table 60](#) below for a list of possible constants for this item.

**Table 59: CFG-TXREADY configuration items**

Constant	Value	Description
I2C	0	I2C interface

Constant	Value	Description
SPI	1	SPI interface

**Table 60: Constants for CFG-TXREADY-INTERFACE**

### 6.9.31 CFG-UART1: Configuration of the UART1 interface

Settings needed to configure the UART1 communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART1-BAUDRATE	0x40520001	U4	-	-	The baud rate that should be configured on the UART1
CFG-UART1-STOPBITS	0x20520002	E1	-	-	Number of stopbits that should be used on UART1
See <a href="#">Table 62</a> below for a list of possible constants for this item.					
CFG-UART1-DATABITS	0x20520003	E1	-	-	Number of databits that should be used on UART1
See <a href="#">Table 63</a> below for a list of possible constants for this item.					
CFG-UART1-PARITY	0x20520004	E1	-	-	Parity mode that should be used on UART1
See <a href="#">Table 64</a> below for a list of possible constants for this item.					
CFG-UART1-ENABLED	0x10520005	L	-	-	Flag to indicate if the UART1 should be enabled

**Table 61: CFG-UART1 configuration items**

Constant	Value	Description
HALF	0	0.5 stopbits
ONE	1	1.0 stopbits
ONEHALF	2	1.5 stopbits
TWO	3	2.0 stopbits

**Table 62: Constants for CFG-UART1-STOPBITS**

Constant	Value	Description
EIGHT	0	8 databits
SEVEN	1	7 databits

**Table 63: Constants for CFG-UART1-DATABITS**

Constant	Value	Description
NONE	0	No parity bit
ODD	1	Add an odd parity bit
EVEN	2	Add an even parity bit

**Table 64: Constants for CFG-UART1-PARITY**

### 6.9.32 CFG-UART1INPROT: Input protocol configuration of the UART1 interface

Input protocol enable flags of the UART1 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART1INPROT-UBX	0x10730001	L	-	-	Flag to indicate if UBX should be an input protocol on UART1
CFG-UART1INPROT-NMEA	0x10730002	L	-	-	Flag to indicate if NMEA should be an input protocol on UART1
CFG-UART1INPROT-RTCM3X	0x10730004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART1

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART1INPROT-SPARTN	0x10730005	L	-	-	Flag to indicate if SPARTN should be an input protocol on UART1

Table 65: CFG-UART1INPROT configuration items

### 6.9.33 CFG-UART1OUTPROT: Output protocol configuration of the UART1 interface

Output protocol enable flags of the UART1 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	Flag to indicate if UBX should be an output protocol on UART1
CFG-UART1OUTPROT-NMEA	0x10740002	L	-	-	Flag to indicate if NMEA should be an output protocol on UART1
CFG-UART1OUTPROT-RTCM3X	0x10740004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on UART1

Table 66: CFG-UART1OUTPROT configuration items

### 6.9.34 CFG-UART2: Configuration of the UART2 interface

Settings needed to configure the UART2 communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART2-BAUDRATE	0x40530001	U4	-	-	The baud rate that should be configured on the UART2
CFG-UART2-STOPBITS	0x20530002	E1	-	-	Number of stopbits that should be used on UART2
See <a href="#">Table 68</a> below for a list of possible constants for this item.					
CFG-UART2-DATABITS	0x20530003	E1	-	-	Number of databits that should be used on UART2
See <a href="#">Table 69</a> below for a list of possible constants for this item.					
CFG-UART2-PARITY	0x20530004	E1	-	-	Parity mode that should be used on UART2
See <a href="#">Table 70</a> below for a list of possible constants for this item.					
CFG-UART2-ENABLED	0x10530005	L	-	-	Flag to indicate if the UART2 should be enabled

Table 67: CFG-UART2 configuration items

Constant	Value	Description
HALF	0	0.5 stopbits
ONE	1	1.0 stopbits
ONEHALF	2	1.5 stopbits
TWO	3	2.0 stopbits

Table 68: Constants for CFG-UART2-STOPBITS

Constant	Value	Description
EIGHT	0	8 databits
SEVEN	1	7 databits

Table 69: Constants for CFG-UART2-DATABITS

Constant	Value	Description
NONE	0	No parity bit
ODD	1	Add an odd parity bit

Constant	Value	Description
EVEN	2	Add an even parity bit

**Table 70: Constants for CFG-UART2-PARITY**

### 6.9.35 CFG-UART2INPROT: Input protocol configuration of the UART2 interface

Input protocol enable flags of the UART2 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART2INPROT-UBX	0x10750001	L	-	-	Flag to indicate if UBX should be an input protocol on UART2
CFG-UART2INPROT-NMEA	0x10750002	L	-	-	Flag to indicate if NMEA should be an input protocol on UART2
CFG-UART2INPROT-RTCM3X	0x10750004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART2
CFG-UART2INPROT-SPARTN	0x10750005	L	-	-	Flag to indicate if SPARTN should be an input protocol on UART2

**Table 71: CFG-UART2INPROT configuration items**

### 6.9.36 CFG-UART2OUTPROT: Output protocol configuration of the UART2 interface

Output protocol enable flags of the UART2 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART2OUTPROT-UBX	0x10760001	L	-	-	Flag to indicate if UBX should be an output protocol on UART2
CFG-UART2OUTPROT-NMEA	0x10760002	L	-	-	Flag to indicate if NMEA should be an output protocol on UART2
CFG-UART2OUTPROT-RTCM3X	0x10760004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on UART2

**Table 72: CFG-UART2OUTPROT configuration items**

### 6.9.37 CFG-USB: Configuration of the USB interface

Settings needed to configure the USB communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-USB-ENABLED	0x10650001	L	-	-	Flag to indicate if the USB interface should be enabled
CFG-USB-SELFPOW	0x10650002	L	-	-	Self-powered device
CFG-USB-VENDOR_ID	0x3065000a	U2	-	-	Vendor ID
CFG-USB-PRODUCT_ID	0x3065000b	U2	-	-	Vendor ID
CFG-USB-POWER	0x3065000c	U2	-	mA	Power consumption
CFG-USB-VENDOR_STR0	0x5065000d	X8	-	-	Vendor string characters 0-7
CFG-USB-VENDOR_STR1	0x5065000e	X8	-	-	Vendor string characters 8-15
CFG-USB-VENDOR_STR2	0x5065000f	X8	-	-	Vendor string characters 16-23
CFG-USB-VENDOR_STR3	0x50650010	X8	-	-	Vendor string characters 24-31
CFG-USB-PRODUCT_STR0	0x50650011	X8	-	-	Product string characters 0-7
CFG-USB-PRODUCT_STR1	0x50650012	X8	-	-	Product string characters 8-15
CFG-USB-PRODUCT_STR2	0x50650013	X8	-	-	Product string characters 16-23
CFG-USB-PRODUCT_STR3	0x50650014	X8	-	-	Product string characters 24-31

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-USB-SERIAL_NO_STR0	0x50650015	X8	-	-	Serial number string characters 0-7
CFG-USB-SERIAL_NO_STR1	0x50650016	X8	-	-	Serial number string characters 8-15
CFG-USB-SERIAL_NO_STR2	0x50650017	X8	-	-	Serial number string characters 16-23
CFG-USB-SERIAL_NO_STR3	0x50650018	X8	-	-	Serial number string characters 24-31

Table 73: CFG-USB configuration items

### 6.9.38 CFG-USBINPROT: Input protocol configuration of the USB interface

Input protocol enable flags of the USB interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-USBINPROT-UBX	0x10770001	L	-	-	Flag to indicate if UBX should be an input protocol on USB
CFG-USBINPROT-NMEA	0x10770002	L	-	-	Flag to indicate if NMEA should be an input protocol on USB
CFG-USBINPROT-RTCM3X	0x10770004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on USB
CFG-USBINPROT-SPARTN	0x10770005	L	-	-	Flag to indicate if SPARTN should be an input protocol on USB

Table 74: CFG-USBINPROT configuration items

### 6.9.39 CFG-USBOUTPROT: Output protocol configuration of the USB interface

Output protocol enable flags of the USB interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-USBOUTPROT-UBX	0x10780001	L	-	-	Flag to indicate if UBX should be an output protocol on USB
CFG-USBOUTPROT-NMEA	0x10780002	L	-	-	Flag to indicate if NMEA should be an output protocol on USB
CFG-USBOUTPROT-RTCM3X	0x10780004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on USB

Table 75: CFG-USBOUTPROT configuration items

## 6.10 Legacy UBX message fields reference

The following table lists the legacy UBX message fields and the corresponding configuration item. Note that the mapping from UBX-CFG message fields to configuration items is not necessarily 1:1 and that some legacy UBX-CFG messages may not be available for certain products.

UBX message and field	Configuration item(s)
<b>UBX-CFG-ANT</b>	
UBX-CFG-ANT.ocd	CFG-HW-ANT_CFG_OPENDET
UBX-CFG-ANT.pdwnOnSCD	CFG-HW-ANT_CFG_PWRDOWN
UBX-CFG-ANT.pinOCD	CFG-HW-ANT_SUP_OPEN_PIN
UBX-CFG-ANT.pinSCD	CFG-HW-ANT_SUP_SHORT_PIN
UBX-CFG-ANT.pinSwitch	CFG-HW-ANT_SUP_SWITCH_PIN
UBX-CFG-ANT.recovery	CFG-HW-ANT_CFG_RECOVER
UBX-CFG-ANT.scd	CFG-HW-ANT_CFG_SHORTDET
UBX-CFG-ANT.svcs	CFG-HW-ANT_CFG_VOLTCTRL
<b>UBX-CFG-DAT</b>	
UBX-CFG-DAT.dx	CFG-NAVSPG-USRDAT_RX

<b>UBX message and field</b>	<b>Configuration item(s)</b>
UBX-CFG-DAT.dY	CFG-NAVSPG-USRDATA_DY
UBX-CFG-DAT.dZ	CFG-NAVSPG-USRDATA_DZ
UBX-CFG-DAT.flat	CFG-NAVSPG-USRDATA_FLAT
UBX-CFG-DAT.majA	CFG-NAVSPG-USE_USRDATA, CFG-NAVSPG-USRDATA_MAJA
UBX-CFG-DAT.rotX	CFG-NAVSPG-USRDATA_ROTX
UBX-CFG-DAT.rotY	CFG-NAVSPG-USRDATA_ROTY
UBX-CFG-DAT.rotZ	CFG-NAVSPG-USRDATA_ROTZ
UBX-CFG-DAT.scale	CFG-NAVSPG-USRDATA_SCALE
<b>UBX-CFG-DGNSS</b>	
UBX-CFG-DGNSS.dgnssMode	CFG-NAVHPG-DGNSSMODE
<b>UBX-CFG-GEOFENCE</b>	
UBX-CFG-GEOFENCE.confLvl	CFG-GEOFENCE-CONFLVL
UBX-CFG-GEOFENCE.lat	CFG-GEOFENCE-FENCE1_LAT, CFG-GEOFENCE-FENCE2_LAT, CFG-GEOFENCE-FENCE3_LAT, CFG-GEOFENCE-FENCE4_LAT
UBX-CFG-GEOFENCE.lon	CFG-GEOFENCE-FENCE1_LON, CFG-GEOFENCE-FENCE2_LON, CFG-GEOFENCE-FENCE3_LON, CFG-GEOFENCE-FENCE4_LON
UBX-CFG-GEOFENCE.numFences	CFG-GEOFENCE-USE_FENCE1, CFG-GEOFENCE-USE_FENCE2, CFG-GEOFENCE-USE_FENCE3, CFG-GEOFENCE-USE_FENCE4
UBX-CFG-GEOFENCE.pin	CFG-GEOFENCE-PIN
UBX-CFG-GEOFENCE.pinPolarity	CFG-GEOFENCE-PINPOL
UBX-CFG-GEOFENCE.pioEnabled	CFG-GEOFENCE-USE_PIO
UBX-CFG-GEOFENCE.radius	CFG-GEOFENCE-FENCE1_RAD, CFG-GEOFENCE-FENCE2_RAD, CFG-GEOFENCE-FENCE3_RAD, CFG-GEOFENCE-FENCE4_RAD
<b>UBX-CFG-GNSS</b>	
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-GPS_ENA, CFG-SIGNAL-SBAS_ENA, CFG-SIGNAL-BDS_ENA, CFG-SIGNAL-QZSS_ENA, CFG-SIGNAL-GLO_ENA
<b>UBX-CFG-INF</b>	
UBX-CFG-INF.infMsgMask	CFG-INFMMSG-UBX_I2C, CFG-INFMMSG-UBX_UART1, CFG-INFMMSG-UBX_UART2, CFG-INFMMSG-UBX_USB, CFG-INFMMSG-UBX_SPI, CFG-INFMMSG-NMEA_I2C, CFG-INFMMSG-NMEA_UART1, CFG-INFMMSG-NMEA_UART2, CFG-INFMMSG-NMEA_USB, CFG-INFMMSG-NMEA_SPI
UBX-CFG-INF.protocolID	CFG-INFMMSG-UBX_UART1, CFG-INFMMSG-UBX_UART2, CFG-INFMMSG-UBX_USB, CFG-INFMMSG-UBX_SPI, CFG-INFMMSG-NMEA_I2C, CFG-INFMMSG-NMEA_UART1, CFG-INFMMSG-NMEA_UART2, CFG-INFMMSG-NMEA_USB, CFG-INFMMSG-NMEA_SPI
<b>UBX-CFG-LOGFILTER</b>	
UBX-CFG-LOGFILTER.applyAllFilterSettings	CFG-LOGFILTER-APPLY_ALL_FILTERS
UBX-CFG-LOGFILTER.minInterval	CFG-LOGFILTER-MIN_INTERVAL
UBX-CFG-LOGFILTER.positionThreshold	CFG-LOGFILTER-POSITION_THRS
UBX-CFG-LOGFILTER.recordEnabled	CFG-LOGFILTER-RECORD_ENA
UBX-CFG-LOGFILTER.speedThreshold	CFG-LOGFILTER-SPEED_THRS
UBX-CFG-LOGFILTER.timeThreshold	CFG-LOGFILTER-TIME_THRS
<b>UBX-CFG-MOT</b>	

<b>UBX message and field</b>	<b>Configuration item(s)</b>
UBX-CFG-MOT.gnssDistThdl	CFG-MOT-GNSSDIST_THRS
UBX-CFG-MOT.gnssSpeedThdl	CFG-MOT-GNSSSPEED_THRS
<b>UBX-CFG-NAV5</b>	
UBX-CFG-NAV5.cnoThresh	CFG-NAVSPG-INFIL_CNOTHRS
UBX-CFG-NAV5.cnoThreshNumSVs	CFG-NAVSPG-INFIL_NCNOTHRS
UBX-CFG-NAV5.dgnssTimeout	CFG-NAVSPG-CONSTR_DGNSSTO
UBX-CFG-NAV5.dynModel	CFG-NAVSPG-DYNMODEL
UBX-CFG-NAV5.fixMode	CFG-NAVSPG-FIXMODE
UBX-CFG-NAV5.fixedAlt	CFG-NAVSPG-CONSTR_ALT
UBX-CFG-NAV5.fixedAltVar	CFG-NAVSPG-CONSTR_ALTVAR
UBX-CFG-NAV5.minElev	CFG-NAVSPG-INFIL_MINELEV
UBX-CFG-NAV5.pAcc	CFG-NAVSPG-OUTFIL_PACC
UBX-CFG-NAV5.pDop	CFG-NAVSPG-OUTFIL_PDOP
UBX-CFG-NAV5.staticHoldMaxDist	CFG-MOT-GNSSDIST_THRS
UBX-CFG-NAV5.staticHoldThresh	CFG-MOT-GNSSSPEED_THRS
UBX-CFG-NAV5.tAcc	CFG-NAVSPG-OUTFIL_TACC, CFG-NAVSPG-OUTFIL_FACC
UBX-CFG-NAV5.tDop	CFG-NAVSPG-OUTFIL_TDOP
UBX-CFG-NAV5.utcStandard	CFG-NAVSPG-UTCSTANDARD
<b>UBX-CFG-NAVX5</b>	
UBX-CFG-NAVX5.ackAiding	CFG-NAVSPG-ACKAIDING
UBX-CFG-NAVX5.iniFix3D	CFG-NAVSPG-INIFIX3D
UBX-CFG-NAVX5.maxSVs	CFG-NAVSPG-INFIL_MAXSVS
UBX-CFG-NAVX5.minCNO	CFG-NAVSPG-INFIL_MINCNO
UBX-CFG-NAVX5.minSVs	CFG-NAVSPG-INFIL_MINSVS
UBX-CFG-NAVX5.wknRollover	CFG-NAVSPG-WKNROLLOVER
<b>UBX-CFG-NMEA</b>	
UBX-CFG-NMEA.bdsTalkerId	CFG-NMEA-BDSTALKERID
UBX-CFG-NMEA.beidou	CFG-NMEA-FILT_BDS
UBX-CFG-NMEA.compat	CFG-NMEA-COMPAT
UBX-CFG-NMEA.consider	CFG-NMEA-CONSIDER
UBX-CFG-NMEA.dateFilt	CFG-NMEA-OUT_INVDATE
UBX-CFG-NMEA.galileo	CFG-NMEA-FILT_GAL
UBX-CFG-NMEA.glonass	CFG-NMEA-FILT_GLO
UBX-CFG-NMEA.gps	CFG-NMEA-FILT_GPS
UBX-CFG-NMEA.gpsOnlyFilter	CFG-NMEA-OUT_ONLYGPS
UBX-CFG-NMEA.gsvTalkerId	CFG-NMEA-GSVTALKERID
UBX-CFG-NMEA.highPrec	CFG-NMEA-HIGHPREC
UBX-CFG-NMEA.limit82	CFG-NMEA-LIMIT82
UBX-CFG-NMEA.mainTalkerId	CFG-NMEA-MAINTALKERID
UBX-CFG-NMEA.mskPosFilt	CFG-NMEA-OUT_MSKFIX
UBX-CFG-NMEA.nmeaVersion	CFG-NMEA-PROTVER
UBX-CFG-NMEA.numSV	CFG-NMEA-MAXSVS
UBX-CFG-NMEA.posFilt	CFG-NMEA-OUT_INVFIX
UBX-CFG-NMEA.qzss	CFG-NMEA-FILT_QZSS

<b>UBX message and field</b>	<b>Configuration item(s)</b>
UBX-CFG-NMEA.sbas	CFG-NMEA-FILT_SBAS
UBX-CFG-NMEA.svNumbering	CFG-NMEA-SVNUMBERING
UBX-CFG-NMEA.timeFilt	CFG-NMEA-OUT_INVTIME
UBX-CFG-NMEA.trackFilt	CFG-NMEA-OUT_FROZENCOG
<b>UBX-CFG-ODO</b>	
UBX-CFG-ODO.cogLpGain	CFG-ODO-COGLPGAIN
UBX-CFG-ODO.cogMaxPosAcc	CFG-ODO-COGMAXPOSACC
UBX-CFG-ODO.cogMaxSpeed	CFG-ODO-COGMAXSPEED
UBX-CFG-ODO.outLPCog	CFG-ODO-OUTLPCOG
UBX-CFG-ODO.outLPVel	CFG-ODO-OUTLPVEL
UBX-CFG-ODO.profile	CFG-ODO-PROFILE
UBX-CFG-ODO.useCog	CFG-ODO-USE_COG
UBX-CFG-ODO.useODO	CFG-ODO-USE_ODO
UBX-CFG-ODO.velLpGain	CFG-ODO-VELLPGAIN
<b>UBX-CFG-PRT</b>	
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-I2C-EXTENDEDTIMEOUT
UBX-CFG-PRT.inNmea	CFG-I2CINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-I2CINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-I2CINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-I2COUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-I2COUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-I2COUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.slaveAddr	CFG-I2C-ADDRESS
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-SPI-EXTENDEDTIMEOUT
UBX-CFG-PRT.ffCnt	CFG-SPI-MAXFF
UBX-CFG-PRT.inNmea	CFG-SPIINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-SPIINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-SPIINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-SPIOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-SPIOUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-SPIOUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.spiMode	CFG-SPI-CPOLARITY, CFG-SPI-CPHASE
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD

<b>UBX message and field</b>	<b>Configuration item(s)</b>
UBX-CFG-PRT.baudRate	CFG-UART1-BAUDRATE, CFG-UART2-BAUDRATE
UBX-CFG-PRT.charLen	CFG-UART1-DATABITS, CFG-UART2-DATABITS
UBX-CFG-PRT.inNmea	CFG-UART1INPROT-NMEA, CFG-UART2INPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-UART1-ENABLED, CFG-UART2-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-UART1INPROT-RTCM3X, CFG-UART2INPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-UART1INPROT-UBX, CFG-UART2INPROT-UBX
UBX-CFG-PRT.nStopBits	CFG-UART1-STOPBITS, CFG-UART2-STOPBITS
UBX-CFG-PRT.outNmea	CFG-UART1OUTPROT-NMEA, CFG-UART2OUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-UART1-ENABLED, CFG-UART2-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-UART1OUTPROT-RTCM3X, CFG-UART2OUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-UART1OUTPROT-UBX, CFG-UART2OUTPROT-UBX
UBX-CFG-PRT.parity	CFG-UART1-PARITY, CFG-UART2-PARITY
UBX-CFG-PRT.inNmea	CFG-USBINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-USBINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-USBINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-USBOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-USBOUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-USBOUTPROT-UBX
<b>UBX-CFG-RATE</b>	
UBX-CFG-RATE.measRate	CFG-RATE-MEAS
UBX-CFG-RATE.navRate	CFG-RATE-NAV
UBX-CFG-RATE.timeRef	CFG-RATE-TIMEREF
<b>UBX-CFG-RINV</b>	
UBX-CFG-RINV.data	CFG-RINV-DATA_SIZE, CFG-RINV-CHUNK0, CFG-RINV-CHUNK1, CFG-RINV-CHUNK2, CFG-RINV-CHUNK3
UBX-CFG-RINV.flags	CFG-RINV-DUMP, CFG-RINV-BINARY
<b>UBX-CFG-SBAS</b>	
UBX-CFG-SBAS.diffCorr	CFG-SBAS-USE_DIFFCORR
UBX-CFG-SBAS.integrity	CFG-SBAS-USE_INTEGRITY
UBX-CFG-SBAS.range	CFG-SBAS-USE_RANGING
UBX-CFG-SBAS.scanmode1	CFG-SBAS-PRNSCANMASK
UBX-CFG-SBAS.test	CFG-SBAS-USE_TESTMODE
<b>UBX-CFG-SLAS</b>	
UBX-CFG-SLAS.enabled	CFG-QZSS-USE_SLAS_DGNSS
UBX-CFG-SLAS.raim	CFG-QZSS-USE_SLAS_RAIM_UNCORR
UBX-CFG-SLAS.test	CFG-QZSS-USE_SLAS_TESTMODE
<b>UBX-CFG-TMODE3</b>	
UBX-CFG-TMODE3.ecefXOrLat	CFG-TMODE-ECEF_X, CFG-TMODE-LAT
UBX-CFG-TMODE3.ecefXOrLatHP	CFG-TMODE-ECEF_X_HP, CFG-TMODE-LAT_HP
UBX-CFG-TMODE3.ecefYOrLon	CFG-TMODE-ECEF_Y, CFG-TMODE-LON
UBX-CFG-TMODE3.ecefYOrLonHP	CFG-TMODE-ECEF_Y_HP, CFG-TMODE-LON_HP

<b>UBX message and field</b>	<b>Configuration item(s)</b>
UBX-CFG-TMODE3.ecefZOrAlt	CFG-TMODE-ECEF_Z, CFG-TMODE-HEIGHT
UBX-CFG-TMODE3.ecefZOrAltHP	CFG-TMODE-ECEF_Z_HP, CFG-TMODE-HEIGHT_HP
UBX-CFG-TMODE3.fixedPosAcc	CFG-TMODE-FIXED_POS_ACC
UBX-CFG-TMODE3.flags	CFG-TMODE-MODE, CFG-TMODE-POS_TYPE
UBX-CFG-TMODE3.svinAccLimit	CFG-TMODE-SVIN_ACC_LIMIT
UBX-CFG-TMODE3.svinMinDur	CFG-TMODE-SVIN_MIN_DUR
<b>UBX-CFG-TP5</b>	
UBX-CFG-TP5.active	CFG-TP-TP1_ENA
UBX-CFG-TP5.alignToTow	CFG-TP-ALIGN_TO_TOW_TP1
UBX-CFG-TP5.antCableDelay	CFG-TP-ANT_CABLEDELAY
UBX-CFG-TP5.freqPeriod	CFG-TP-PERIOD_TP1, CFG-TP-FREQ_TP1
UBX-CFG-TP5.freqPeriodLock	CFG-TP-PERIOD_LOCK_TP1, CFG-TP-FREQ_LOCK_TP1
UBX-CFG-TP5.gridUtcGnss	CFG-TP-TIMEGRID_TP1
UBX-CFG-TP5.isFreq	CFG-TP-PULSE_DEF
UBX-CFG-TP5.isLength	CFG-TP-PULSE_LENGTH_DEF
UBX-CFG-TP5.lockGnssFreq	CFG-TP-SYNC_GNSS_TP1
UBX-CFG-TP5.lockedOtherSet	CFG-TP-USE_LOCKED_TP1
UBX-CFG-TP5.polarity	CFG-TP-POL_TP1
UBX-CFG-TP5.pulseLenRatio	CFG-TP-LEN_TP1, CFG-TP-DUTY_TP1
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-LEN_LOCK_TP1, CFG-TP-DUTY_LOCK_TP1
UBX-CFG-TP5.userConfigDelay	CFG-TP-USER_DELAY_TP1
<b>UBX-CFG-USB</b>	
UBX-CFG-USB.powerConsumption	CFG-USB-POWER
UBX-CFG-USB.powerMode	CFG-USB-SELFPOW
UBX-CFG-USB.productID	CFG-USB-PRODUCT_ID
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR0, CFG-USB-PRODUCT_STR1, CFG-USB-PRODUCT_STR2, CFG-USB-PRODUCT_STR3
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR0, CFG-USB-SERIAL_NO_STR1, CFG-USB-SERIAL_NO_STR2, CFG-USB-SERIAL_NO_STR3
UBX-CFG-USB.vendorID	CFG-USB-VENDOR_ID
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR0, CFG-USB-VENDOR_STR1, CFG-USB-VENDOR_STR2, CFG-USB-VENDOR_STR3

**Table 76: Legacy UBX message fields and the corresponding configuration items**

# Configuration defaults

The following tables contain the configuration defaults for the firmware. Some of these values may be changed in production. Refer to the integration manual for product-specific details.

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-BDS-USE_GEO_PRN	0x10340014	L	-	-	0 (false)

Table 77: CFG-BDS configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-GAL-USE_OSNMA	0x10350005	L	-	-	0 (false)
CFG-GAL-OSNMA_MINTAGLENGTH	0x20350007	U1	-	-	80
CFG-GAL-OSNMA_TIMESYNC	0x10350009	L	-	-	1 (true)

Table 78: CFG-GAL configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-GEOFENCE-CONFLVL	0x20240011	E1	-	-	0 (L000)
CFG-GEOFENCE-USE_PIO	0x10240012	L	-	-	0 (false)
CFG-GEOFENCE-PINPOL	0x20240013	E1	-	-	0 (LOW_IN)
CFG-GEOFENCE-PIN	0x20240014	U1	-	-	3
CFG-GEOFENCE-USE_FENCE1	0x10240020	L	-	-	0 (false)
CFG-GEOFENCE-FENCE1_LAT	0x40240021	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE1_LON	0x40240022	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE1_RAD	0x40240023	U4	0.01	m	0
CFG-GEOFENCE-USE_FENCE2	0x10240030	L	-	-	0 (false)
CFG-GEOFENCE-FENCE2_LAT	0x40240031	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE2_LON	0x40240032	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE2_RAD	0x40240033	U4	0.01	m	0
CFG-GEOFENCE-USE_FENCE3	0x10240040	L	-	-	0 (false)
CFG-GEOFENCE-FENCE3_LAT	0x40240041	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE3_LON	0x40240042	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE3_RAD	0x40240043	U4	0.01	m	0
CFG-GEOFENCE-USE_FENCE4	0x10240050	L	-	-	0 (false)
CFG-GEOFENCE-FENCE4_LAT	0x40240051	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE4_LON	0x40240052	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE4_RAD	0x40240053	U4	0.01	m	0

Table 79: CFG-GEOFENCE configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	0 (false)
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	0 (false)
CFG-HW-ANT_CFG_SHORTDET_POL	0x10a30030	L	-	-	1 (true)
CFG-HW-ANT_CFG_OPENDET	0x10a30031	L	-	-	0 (false)
CFG-HW-ANT_CFG_OPENDET_POL	0x10a30032	L	-	-	1 (true)
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	0 (false)

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-HW-ANT_CFG_PWRDOWN_POL	0x10a30034	L	-	-	1 (true)
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	0 (false)
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	16
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	15
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	14
CFG-HW-ANT_ON_SHORT_US	0x30a3003c	U2	-	-	500
CFG-HW-ANT_SUP_ENGINE	0x20a30054	E1	-	-	0 (EXT)
CFG-HW-ANT_SUP_SHORT_THR	0x20a30055	U1	-	mV	0
CFG-HW-ANT_SUP_OPEN_THR	0x20a30056	U1	-	mV	0

**Table 80: CFG-HW configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-I2C-ADDRESS	0x20510001	U1	-	-	132
CFG-I2C-EXTENDEDTIMEOUT	0x10510002	L	-	-	0 (false)
CFG-I2C-ENABLED	0x10510003	L	-	-	1 (true)

**Table 81: CFG-I2C configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-I2CINPROT-UBX	0x10710001	L	-	-	1 (true)
CFG-I2CINPROT-NMEA	0x10710002	L	-	-	1 (true)
CFG-I2CINPROT-RTCM3X	0x10710004	L	-	-	1 (true)
CFG-I2CINPROT-SPARTN	0x10710005	L	-	-	1 (true)

**Table 82: CFG-I2CINPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-I2COUTPROT-UBX	0x10720001	L	-	-	1 (true)
CFG-I2COUTPROT-NMEA	0x10720002	L	-	-	1 (true)
CFG-I2COUTPROT-RTCM3X	0x10720004	L	-	-	1 (true)

**Table 83: CFG-I2COUTPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-INFMSG-UBX_I2C	0x20920001	X1	-	-	0x00
CFG-INFMSG-UBX_UART1	0x20920002	X1	-	-	0x00
CFG-INFMSG-UBX_UART2	0x20920003	X1	-	-	0x00
CFG-INFMSG-UBX_USB	0x20920004	X1	-	-	0x00
CFG-INFMSG-UBX_SPI	0x20920005	X1	-	-	0x00
CFG-INFMSG-NMEA_I2C	0x20920006	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_UART1	0x20920007	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_UART2	0x20920008	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_USB	0x20920009	X1	-	-	0x07 (ERROR   WARNING   NOTICE)

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-INFMSG-NMEA_SPI	0x2092000a	X1	-	-	0x07 (ERROR   WARNING   NOTICE)

**Table 84: CFG-INFMSG configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-LOGFILTER-RECORD_ENA	0x10de0002	L	-	-	0 (false)
CFG-LOGFILTER-APPLY_ALL_FILTERS	0x10de0004	L	-	-	0 (false)
CFG-LOGFILTER-MIN_INTERVAL	0x30de0005	U2	-	s	0
CFG-LOGFILTER-TIME_THRS	0x30de0006	U2	-	s	0
CFG-LOGFILTER-SPEED_THRS	0x30de0007	U2	-	m/s	0
CFG-LOGFILTER-POSITION_THRS	0x40de0008	U4	-	m	0

**Table 85: CFG-LOGFILTER configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MOT-GNSSSPEED_THRS	0x20250038	U1	0.01	m/s	0
CFG-MOT-GNSSDIST_THRS	0x3025003b	U2	1.0	m	0

**Table 86: CFG-MOT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-NMEA_ID_DTM_I2C	0x209100a6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_SPI	0x209100aa	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_UART1	0x209100a7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_UART2	0x209100a8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_USB	0x209100a9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_I2C	0x209100dd	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_SPI	0x209100e1	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_UART1	0x209100de	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_UART2	0x209100df	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_USB	0x209100e0	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GGA_I2C	0x209100ba	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_SPI	0x209100be	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_UART1	0x209100bb	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_UART2	0x209100bc	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_USB	0x209100bd	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_I2C	0x209100c9	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_SPI	0x209100cd	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_UART1	0x209100ca	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_UART2	0x209100cb	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_USB	0x209100cc	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GNS_I2C	0x209100b5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_SPI	0x209100b9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_UART1	0x209100b6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_UART2	0x209100b7	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-NMEA_ID_GNS_USB	0x209100b8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_I2C	0x209100ce	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_SPI	0x209100d2	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_UART1	0x209100cf	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_UART2	0x209100d0	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_USB	0x209100d1	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSA_I2C	0x209100bf	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_SPI	0x209100c3	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_UART1	0x209100c0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_UART2	0x209100c1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_USB	0x209100c2	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GST_I2C	0x209100d3	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_SPI	0x209100d7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART2	0x209100d5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_USB	0x209100d6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART2	0x209100c6	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_USB	0x209100c7	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RLM_I2C	0x20910400	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_SPI	0x20910404	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_UART1	0x20910401	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_UART2	0x20910402	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_USB	0x20910403	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART2	0x209100ad	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_USB	0x209100ae	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VLW_I2C	0x209100e7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_SPI	0x209100eb	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_UART1	0x209100e8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_UART2	0x209100e9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_USB	0x209100ea	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART2	0x209100b2	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_USB	0x209100b3	U1	-	-	1

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART2	0x209100da	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_USB	0x209100db	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_I2C	0x20910661	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_SPI	0x20910665	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART1	0x20910662	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART2	0x20910663	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_USB	0x20910664	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_I2C	0x20910670	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_SPI	0x20910674	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_UART1	0x20910671	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_UART2	0x20910672	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_USB	0x20910673	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_I2C	0x2091065c	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_SPI	0x20910660	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_UART1	0x2091065d	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_UART2	0x2091065e	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_USB	0x2091065f	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_I2C	0x20910666	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_SPI	0x2091066a	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_UART1	0x20910667	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_UART2	0x20910668	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_USB	0x20910669	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_I2C	0x20910652	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_SPI	0x20910656	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_UART1	0x20910653	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_UART2	0x20910654	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_USB	0x20910655	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_I2C	0x20910657	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_SPI	0x2091065b	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_UART1	0x20910658	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_UART2	0x20910659	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_USB	0x2091065a	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_I2C	0x2091067f	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_SPI	0x20910683	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_UART1	0x20910680	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_UART2	0x20910681	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_USB	0x20910682	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART1	0x209100ed	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART2	0x209100ee	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_USB	0x209100ef	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART1	0x209100f2	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART2	0x209100f3	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_USB	0x209100f4	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART1	0x209100f7	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART2	0x209100f8	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_USB	0x209100f9	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_I2C	0x209102bd	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_SPI	0x209102c1	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_UART1	0x209102be	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_UART2	0x209102bf	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_USB	0x209102c0	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_I2C	0x2091035e	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_SPI	0x20910362	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_UART1	0x2091035f	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_UART2	0x20910360	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1074_USB	0x20910361	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_I2C	0x209102cc	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_SPI	0x209102d0	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_UART1	0x209102cd	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_UART2	0x209102ce	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_USB	0x209102cf	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_I2C	0x20910363	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_SPI	0x20910367	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_UART1	0x20910364	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_UART2	0x20910365	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1084_USB	0x20910366	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_I2C	0x209102d1	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_SPI	0x209102d5	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_UART1	0x209102d2	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_UART2	0x209102d3	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_USB	0x209102d4	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1094_I2C	0x20910368	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1094_SPI	0x2091036c	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-RTCM_3X_TYPE1094_UART1	0x20910369	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1094_UART2	0x2091036a	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1094_USB	0x2091036b	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_I2C	0x20910318	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_SPI	0x2091031c	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_UART1	0x20910319	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_UART2	0x2091031a	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_USB	0x2091031b	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1124_I2C	0x2091036d	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1124_SPI	0x20910371	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1124_UART1	0x2091036e	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1124_UART2	0x2091036f	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1124_USB	0x20910370	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_I2C	0x209102d6	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_SPI	0x209102da	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_UART1	0x209102d7	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_UART2	0x209102d8	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_USB	0x209102d9	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_I2C	0x20910303	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_SPI	0x20910307	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_UART1	0x20910304	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_UART2	0x20910305	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_USB	0x20910306	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_0_I2C	0x209102fe	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_0_SPI	0x20910302	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_0_UART1	0x209102ff	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_0_UART2	0x20910300	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_0_USB	0x20910301	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_I2C	0x20910381	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_SPI	0x20910385	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART1	0x20910382	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART2	0x20910383	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_USB	0x20910384	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_I2C	0x20910259	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_SPI	0x2091025d	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_UART1	0x2091025a	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_UART2	0x2091025b	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_USB	0x2091025c	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMs_I2C	0x2091034f	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMs_SPI	0x20910353	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMs_UART1	0x20910350	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_MON_COMMs_UART2	0x20910351	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMs_USB	0x20910352	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_I2C	0x209101b9	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_SPI	0x209101bd	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART1	0x209101ba	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART2	0x209101bb	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_USB	0x209101bc	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_I2C	0x20910354	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_SPI	0x20910358	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART1	0x20910355	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART2	0x20910356	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_USB	0x20910357	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART2	0x209101b6	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_USB	0x209101b7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART2	0x209101a7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_USB	0x209101a8	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART1	0x20910197	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART2	0x20910198	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_USB	0x20910199	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART2	0x2091035b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_USB	0x2091035c	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART1	0x209101a1	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART2	0x209101a2	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_USB	0x209101a3	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART1	0x20910188	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART2	0x20910189	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_MON_RXR_USB	0x2091018a	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_I2C	0x2091038b	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_SPI	0x2091038f	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_UART1	0x2091038c	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_UART2	0x2091038d	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_USB	0x2091038e	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_I2C	0x2091069d	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_SPI	0x209106a1	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_UART1	0x2091069e	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_UART2	0x2091069f	U1	-	-	0
CFG-MSGOUT-UBX_MON_SYS_USB	0x209106a0	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_UART1	0x2091019c	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_UART2	0x2091019d	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_USB	0x2091019e	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_I2C	0x20910430	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_SPI	0x20910434	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_UART1	0x20910431	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_UART2	0x20910432	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_USB	0x20910433	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_I2C	0x20910435	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_SPI	0x20910439	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_UART1	0x20910436	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_UART2	0x20910437	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_USB	0x20910438	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_I2C	0x20910465	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_SPI	0x20910469	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_UART1	0x20910466	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_UART2	0x20910467	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_USB	0x20910468	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_I2C	0x20910565	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_SPI	0x20910569	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_UART1	0x20910566	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_UART2	0x20910567	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_USB	0x20910568	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_ODO_I2C	0x20910475	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_ODO_SPI	0x20910479	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_ODO_UART1	0x20910476	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_ODO_UART2	0x20910477	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_ODO_USB	0x20910478	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV2_POSECEF_I2C	0x20910480	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_SPI	0x20910484	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_UART1	0x20910481	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_UART2	0x20910482	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_USB	0x20910483	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_I2C	0x20910485	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_SPI	0x20910489	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_UART1	0x20910486	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_UART2	0x20910487	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_USB	0x20910488	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_I2C	0x20910490	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_SPI	0x20910494	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_UART1	0x20910491	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_UART2	0x20910492	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_USB	0x20910493	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_I2C	0x20910495	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_SPI	0x20910499	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_UART1	0x20910496	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_UART2	0x20910497	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_USB	0x20910498	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_I2C	0x20910500	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_SPI	0x20910504	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_UART1	0x20910501	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_UART2	0x20910502	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_USB	0x20910503	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_I2C	0x20910505	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_SPI	0x20910509	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_UART1	0x20910506	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_UART2	0x20910507	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_USB	0x20910508	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_I2C	0x20910510	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_SPI	0x20910514	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_UART1	0x20910511	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_UART2	0x20910512	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SLAS_USB	0x20910513	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_I2C	0x20910515	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_SPI	0x20910519	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_UART1	0x20910516	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_UART2	0x20910517	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_USB	0x20910518	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SVIN_I2C	0x20910520	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV2_SVIN_SPI	0x20910524	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SVIN_UART1	0x20910521	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SVIN_UART2	0x20910522	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SVIN_USB	0x20910523	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_I2C	0x20910525	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_SPI	0x20910529	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART1	0x20910526	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART2	0x20910527	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_USB	0x20910528	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_I2C	0x20910530	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_SPI	0x20910534	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_UART1	0x20910531	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_UART2	0x20910532	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_USB	0x20910533	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_I2C	0x20910535	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_SPI	0x20910539	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_UART1	0x20910536	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_UART2	0x20910537	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_USB	0x20910538	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_I2C	0x20910540	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_SPI	0x20910544	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_UART1	0x20910541	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_UART2	0x20910542	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_USB	0x20910543	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_I2C	0x20910545	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_SPI	0x20910549	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_UART1	0x20910546	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_UART2	0x20910547	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_USB	0x20910548	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_I2C	0x20910575	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_SPI	0x20910579	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_UART1	0x20910576	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_UART2	0x20910577	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_USB	0x20910578	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_I2C	0x20910550	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_SPI	0x20910554	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_UART1	0x20910551	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_UART2	0x20910552	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_USB	0x20910553	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_I2C	0x20910555	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_SPI	0x20910559	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV2_VELECEF_UART1	0x20910556	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_UART2	0x20910557	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_USB	0x20910558	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_I2C	0x20910560	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_SPI	0x20910564	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_UART1	0x20910561	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_UART2	0x20910562	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_USB	0x20910563	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART1	0x20910066	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART2	0x20910067	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_USB	0x20910068	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_I2C	0x20910083	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_SPI	0x20910087	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_UART1	0x20910084	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_UART2	0x20910085	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_USB	0x20910086	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART1	0x20910039	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART2	0x2091003a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_USB	0x2091003b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART2	0x20910161	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_USB	0x20910162	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_I2C	0x209100a1	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_SPI	0x209100a5	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART1	0x209100a2	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART2	0x209100a3	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_USB	0x209100a4	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPOSECEF_I2C	0x2091002e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPOSECEF_SPI	0x20910032	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPOSECEF_UART1	0x2091002f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPOSECEF_UART2	0x20910030	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPOSECEF_USB	0x20910031	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPOSLLH_I2C	0x20910033	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPOSLLH_SPI	0x20910037	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPOSLLH_UART1	0x20910034	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_HPOSLLH_UART2	0x20910035	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPOSLLH_USB	0x20910036	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_I2C	0x2091007e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_SPI	0x20910082	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_UART1	0x2091007f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_UART2	0x20910080	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_USB	0x20910081	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART1	0x20910011	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART2	0x20910012	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_USB	0x20910013	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_I2C	0x20910415	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_SPI	0x20910419	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_UART1	0x20910416	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_UART2	0x20910417	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_USB	0x20910418	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_I2C	0x20910024	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_SPI	0x20910028	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART1	0x20910025	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART2	0x20910026	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_USB	0x20910027	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_I2C	0x20910029	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART1	0x2091002a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART2	0x2091002b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_USB	0x2091002c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_UART2	0x20910008	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_USB	0x20910009	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_I2C	0x2091008d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_SPI	0x20910091	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART1	0x2091008e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART2	0x2091008f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_USB	0x20910090	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART2	0x20910017	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_SAT_USB	0x20910018	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_I2C	0x2091006a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_SPI	0x2091006e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_UART1	0x2091006b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_UART2	0x2091006c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_USB	0x2091006d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART2	0x20910347	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_USB	0x20910348	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_I2C	0x20910336	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_SPI	0x2091033a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_UART1	0x20910337	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_UART2	0x20910338	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_USB	0x20910339	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_I2C	0x2091001a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART1	0x2091001b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART2	0x2091001c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_USB	0x2091001d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_I2C	0x20910088	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_SPI	0x2091008c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_UART1	0x20910089	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_UART2	0x2091008a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_USB	0x2091008b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C	0x20910051	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI	0x20910055	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1	0x20910052	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART2	0x20910053	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_USB	0x20910054	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C	0x20910056	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI	0x2091005a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1	0x20910057	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART2	0x20910058	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_USB	0x20910059	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C	0x2091004c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI	0x20910050	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1	0x2091004d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART2	0x2091004e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_USB	0x2091004f	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C	0x20910047	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI	0x2091004b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1	0x20910048	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART2	0x20910049	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_USB	0x2091004a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_UART1	0x20910061	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_UART2	0x20910062	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_USB	0x20910063	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_I2C	0x20910386	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_SPI	0x2091038a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART1	0x20910387	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART2	0x20910388	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMETRUSTED_I2C	0x209103a8	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMETRUSTED_SPI	0x209103ac	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMETRUSTED_UART1	0x209103a9	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMETRUSTED_UART2	0x209103aa	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMETRUSTED_USB	0x209103ab	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C	0x2091005b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI	0x2091005f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1	0x2091005c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART2	0x2091005d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_USB	0x2091005e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_I2C	0x2091003d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_SPI	0x20910041	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART1	0x2091003e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART2	0x2091003f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_USB	0x20910040	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_I2C	0x20910042	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_SPI	0x20910046	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART1	0x20910043	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART2	0x20910044	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_USB	0x20910045	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_I2C	0x209106b6	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_SPI	0x209106ba	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_UART1	0x209106b7	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_UART2	0x209106b8	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_USB	0x209106b9	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART1	0x20910205	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART2	0x20910206	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_USB	0x20910207	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_I2C	0x209102a4	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_SPI	0x209102a8	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART1	0x209102a5	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART2	0x209102a6	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_USB	0x209102a7	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART1	0x2091025f	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART2	0x20910260	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_USB	0x20910261	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_I2C	0x20910268	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_SPI	0x2091026c	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART1	0x20910269	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART2	0x2091026a	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_USB	0x2091026b	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART1	0x20910232	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART2	0x20910233	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_USB	0x20910234	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_I2C	0x20910605	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_SPI	0x20910609	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_UART1	0x20910606	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_UART2	0x20910607	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_USB	0x20910608	U1	-	-	0
CFG-MSGOUT-UBX_SEC_OSNMA_I2C	0x209106ca	U1	-	-	0
CFG-MSGOUT-UBX_SEC_OSNMA_SPI	0x209106ce	U1	-	-	0
CFG-MSGOUT-UBX_SEC_OSNMA_UART1	0x209106cb	U1	-	-	0
CFG-MSGOUT-UBX_SEC_OSNMA_UART2	0x209106cc	U1	-	-	0
CFG-MSGOUT-UBX_SEC_OSNMA_USB	0x209106cd	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_I2C	0x20910689	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_SPI	0x2091068d	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_UART1	0x2091068a	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_UART2	0x2091068b	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_USB	0x2091068c	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_I2C	0x20910634	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_SPI	0x20910638	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_SEC_SIG_UART1	0x20910635	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_UART2	0x20910636	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_USB	0x20910637	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART2	0x2091017a	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_USB	0x2091017b	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART2	0x2091017f	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_USB	0x20910180	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_I2C	0x20910092	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART1	0x20910093	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART2	0x20910094	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_USB	0x20910095	U1	-	-	0

**Table 87: CFG-MSGOUT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAV2-OUT_ENABLED	0x10170001	L	-	-	0 (false)
CFG-NAV2-SBAS_USE_INTEGRITY	0x10170002	L	-	-	0 (false)
CFG-NAV2-NAVSPG_ONLY_AUTHDATA	0x10170003	L	-	-	0 (false)

**Table 88: CFG-NAV2 configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAVHPG-DGNSSMODE	0x20140011	E1	-	-	3 (RTK_FIXED)

**Table 89: CFG-NAVHPG configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	2 (3DONLY)
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	0 (false)
CFG-NAVSPG-WKNROLLOVER	0x30110017	U2	-	-	2320
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	0 (AUTO)
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	0 (PORT)
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	0 (false)
CFG-NAVSPG-USE_USRDATA	0x10110061	L	-	-	0 (false)
CFG-NAVSPG-USRDATA_MAJA	0x50110062	R8	-	m	6378137
CFG-NAVSPG-USRDATA_FLAT	0x50110063	R8	-	-	298.25722356300002502
CFG-NAVSPG-USRDATA_RX	0x40110064	R4	-	m	0
CFG-NAVSPG-USRDATA_DY	0x40110065	R4	-	m	0
CFG-NAVSPG-USRDATA_DZ	0x40110066	R4	-	m	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAVSPG-USRDAT_ROTX	0x40110067	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROTY	0x40110068	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROTZ	0x40110069	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4	-	ppm	0
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	3
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	32
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	6
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	10
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	0
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	0
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	100
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	350
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	150
CFG-NAVSPG-CONSTR_ALT	0x401100c1	I4	0.01	m	0
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m^2	10000
CFG-NAVSPG-CONSTR_DGNSSSTO	0x201100c4	U1	-	s	60
CFG-NAVSPG-PL_ENA	0x101100d7	L	-	-	1 (true)
CFG-NAVSPG-ONLY_AUTHDATA	0x101100dd	L	-	-	0 (false)
CFG-NAVSPG-MAX_TIMETRUSTED_ACC	0x301100de	U2	-	s	9

**Table 90: CFG-NAVSPG configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NMEA-PROTVER	0x20930001	E1	-	-	42 (V411)
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	0 (UNLIM)
CFG-NMEA-COMPAT	0x10930003	L	-	-	0 (false)
CFG-NMEA-CONSIDER	0x10930004	L	-	-	1 (true)
CFG-NMEA-LIMIT82	0x10930005	L	-	-	0 (false)
CFG-NMEA-HIGHPREC	0x10930006	L	-	-	0 (false)
CFG-NMEA-SVNUMBERING	0x20930007	E1	-	-	0 (STRICT)
CFG-NMEA-FILT_GPS	0x10930011	L	-	-	0 (false)
CFG-NMEA-FILT_SBAS	0x10930012	L	-	-	0 (false)
CFG-NMEA-FILT_GAL	0x10930013	L	-	-	0 (false)
CFG-NMEA-FILT_QZSS	0x10930015	L	-	-	0 (false)
CFG-NMEA-FILT_GLO	0x10930016	L	-	-	0 (false)
CFG-NMEA-FILT_BDS	0x10930017	L	-	-	0 (false)
CFG-NMEA-OUT_INVFIX	0x10930021	L	-	-	0 (false)
CFG-NMEA-OUT_MSKFIX	0x10930022	L	-	-	0 (false)
CFG-NMEA-OUT_INVTIME	0x10930023	L	-	-	0 (false)
CFG-NMEA-OUT_INVDATE	0x10930024	L	-	-	0 (false)

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NMEA-OUT_ONLYGPS	0x10930025	L	-	-	0 (false)
CFG-NMEA-OUT_FROZENCOG	0x10930026	L	-	-	0 (false)
CFG-NMEA-MAINTALKERID	0x20930031	E1	-	-	0 (AUTO)
CFG-NMEA-GSVTALKERID	0x20930032	E1	-	-	0 (GNSS)
CFG-NMEA-BDSTALKERID	0x30930033	U2	-	-	0

**Table 91: CFG-NMEA configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-ODO-USE_ODO	0x10220001	L	-	-	0 (false)
CFG-ODO-USE_COG	0x10220002	L	-	-	0 (false)
CFG-ODO-OUTLPCVEL	0x10220003	L	-	-	0 (false)
CFG-ODO-OUTLPCOG	0x10220004	L	-	-	0 (false)
CFG-ODO-PROFILE	0x20220005	E1	-	-	0 (RUN)
CFG-ODO-COGMAXSPEED	0x20220021	U1	1e-1	m/s	10
CFG-ODO-COGMAXPOSACC	0x20220022	U1	-	-	50
CFG-ODO-VELLPGAIN	0x20220031	U1	-	-	153
CFG-ODO-COGLPGAIN	0x20220032	U1	-	-	76

**Table 92: CFG-ODO configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-QZSS-USE_SLAS_DGNSS	0x10370005	L	-	-	1 (true)
CFG-QZSS-USE_SLAS_TESTMODE	0x10370006	L	-	-	0 (false)
CFG-QZSS-USE_SLAS_RAIM_UNCORR	0x10370007	L	-	-	0 (false)
CFG-QZSS-SLAS_MAX_BASELINE	0x30370008	U2	-	km	350

**Table 93: CFG-QZSS configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-RATE-MEAS	0x30210001	U2	0.001	s	1000
CFG-RATE-NAV	0x30210002	U2	-	-	1
CFG-RATE-TIMEREF	0x20210003	E1	-	-	1 (GPS)

**Table 94: CFG-RATE configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-RINV-DUMP	0x10c70001	L	-	-	0 (false)
CFG-RINV-BINARY	0x10c70002	L	-	-	0 (false)
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	22
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	0x203a656369746f4e ("Notice: ")
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	0x2061746164206f6e ("no data ")
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	0x0000216465766173 ("saved!\0\0")
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	0x0000000000000000

**Table 95: CFG-RINV configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-RTCM-DF003_OUT	0x30090001	U2	-	-	0
CFG-RTCM-DF003_IN	0x30090008	U2	-	-	0
CFG-RTCM-DF003_IN_FILTER	0x20090009	E1	-	-	0 (DISABLED)

**Table 96: CFG-RTCM configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SBAS-USE_TESTMODE	0x10360002	L	-	-	0 (false)
CFG-SBAS-USE_RANGING	0x10360003	L	-	-	1 (true)
CFG-SBAS-USE_DIFFCORR	0x10360004	L	-	-	1 (true)
CFG-SBAS-USE_INTEGRITY	0x10360005	L	-	-	0 (false)
CFG-SBAS-ACCEPT_NOT_IN_PRNMASK	0x30360008	X2	-	-	0x0000
CFG-SBAS-USE_IONOONLY	0x10360007	L	-	-	0 (false)
CFG-SBAS-PRNSCANMASK	0x50360006	X8	-	-	0x0000000000003ab88 (ALL   PRN123   PRN127   PRN128   PRN129   PRN131   PRN133   PRN135   PRN136   PRN137)

**Table 97: CFG-SBAS configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SEC-CFG_LOCK	0x10f60009	L	-	-	0 (false)
CFG-SEC-CFG_LOCK_UNLOCKGRP1	0x30f6000a	U2	-	-	0
CFG-SEC-CFG_LOCK_UNLOCKGRP2	0x30f6000b	U2	-	-	0
CFG-SEC-SPOOFDET_SIM_SIG_DIS	0x10f6005d	L	-	-	0 (false)
CFG-SEC-JAMDET_SENSITIVITY_HI	0x10f60051	L	-	-	1 (true)

**Table 98: CFG-SEC configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	1 (true)
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	1 (true)
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	1 (true)
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	1 (true)
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	1 (true)
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	1 (true)
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	1 (true)
CFG-SIGNAL-GAL_E5B_ENA	0x1031000a	L	-	-	1 (true)
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	1 (true)
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	1 (true)
CFG-SIGNAL-BDS_B2_ENA	0x1031000e	L	-	-	1 (true)
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1S_ENA	0x10310014	L	-	-	0 (false)
CFG-SIGNAL-QZSS_L2C_ENA	0x10310015	L	-	-	1 (true)
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	1 (true)
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	1 (true)

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SIGNAL-GLO_L2_ENA	0x1031001a	L	-	-	1 (true)

**Table 99: CFG-SIGNAL configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPARTN-USE_SOURCE	0x20a70001	E1	-	-	0 (IP)

**Table 100: CFG-SPARTN configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPI-MAXFF	0x20640001	U1	-	-	50
CFG-SPI-CPOLARITY	0x10640002	L	-	-	0 (false)
CFG-SPI-CPHASE	0x10640003	L	-	-	0 (false)
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	0 (false)
CFG-SPI-ENABLED	0x10640006	L	-	-	0 (false)

**Table 101: CFG-SPI configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPIINPROT-UBX	0x10790001	L	-	-	1 (true)
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	1 (true)
CFG-SPIINPROT-RTCM3X	0x10790004	L	-	-	1 (true)
CFG-SPIINPROT-SPARTN	0x10790005	L	-	-	1 (true)

**Table 102: CFG-SPIINPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	1 (true)
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	1 (true)
CFG-SPIOUTPROT-RTCM3X	0x107a0004	L	-	-	1 (true)

**Table 103: CFG-SPIOUTPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-TMODE-MODE	0x20030001	E1	-	-	0 (DISABLED)
CFG-TMODE-POS_TYPE	0x20030002	E1	-	-	0 (ECEF)
CFG-TMODE-ECEF_X	0x40030003	I4	-	cm	0
CFG-TMODE-ECEF_Y	0x40030004	I4	-	cm	0
CFG-TMODE-ECEF_Z	0x40030005	I4	-	cm	0
CFG-TMODE-ECEF_X_HP	0x20030006	I1	0.1	mm	0
CFG-TMODE-ECEF_Y_HP	0x20030007	I1	0.1	mm	0
CFG-TMODE-ECEF_Z_HP	0x20030008	I1	0.1	mm	0
CFG-TMODE-LAT	0x40030009	I4	1e-7	deg	0
CFG-TMODE-LON	0x4003000a	I4	1e-7	deg	0
CFG-TMODE-HEIGHT	0x4003000b	I4	-	cm	0
CFG-TMODE-LAT_HP	0x2003000c	I1	1e-9	deg	0
CFG-TMODE-LON_HP	0x2003000d	I1	1e-9	deg	0
CFG-TMODE-HEIGHT_HP	0x2003000e	I1	0.1	mm	0
CFG-TMODE-FIXED_POS_ACC	0x4003000f	U4	0.1	mm	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-TMODE-SVIN_MIN_DUR	0x40030010	U4	-	s	0
CFG-TMODE-SVIN_ACC_LIMIT	0x40030011	U4	0.1	mm	0

**Table 104: CFG-TMODE configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-TP-PULSE_DEF	0x20050023	E1	-	-	0 (PERIOD)
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	1 (LENGTH)
CFG-TP-ANT_CABLEDELAY	0x30050001	I2	1e-9	s	50
CFG-TP-PERIOD_TP1	0x40050002	U4	1e-6	s	1000000
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	1e-6	s	1000000
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	1
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	1
CFG-TP-LEN_TP1	0x40050004	U4	1e-6	s	0
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	1e-6	s	100000
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	0
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	10
CFG-TP-USER_DELAY_TP1	0x40050006	I4	1e-9	s	0
CFG-TP-TP1_ENA	0x10050007	L	-	-	1 (true)
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	1 (true)
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	1 (true)
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	1 (true)
CFG-TP-POL_TP1	0x1005000b	L	-	-	1 (true)
CFG-TP-TIMEGRID_TP1	0x2005000c	E1	-	-	0 (UTC)
CFG-TP-DRSTR_TP1	0x20050035	E1	-	-	1 (DRIVE_STRENGTH_4MA)

**Table 105: CFG-TP configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-TXREADY-ENABLED	0x10a20001	L	-	-	0 (false)
CFG-TXREADY-POLARITY	0x10a20002	L	-	-	0 (false)
CFG-TXREADY-PIN	0x20a20003	U1	-	-	0
CFG-TXREADY-THRESHOLD	0x30a20004	U2	-	-	0
CFG-TXREADY-INTERFACE	0x20a20005	E1	-	-	0 (I2C)

**Table 106: CFG-TXREADY configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART1-BAUDRATE	0x40520001	U4	-	-	38400
CFG-UART1-STOPBITS	0x20520002	E1	-	-	1 (ONE)
CFG-UART1-DATABITS	0x20520003	E1	-	-	0 (EIGHT)
CFG-UART1-PARITY	0x20520004	E1	-	-	0 (NONE)
CFG-UART1-ENABLED	0x10520005	L	-	-	1 (true)

**Table 107: CFG-UART1 configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART1INPROT-UBX	0x10730001	L	-	-	1 (true)

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART1INPROT-NMEA	0x10730002	L	-	-	1 (true)
CFG-UART1INPROT-RTCM3X	0x10730004	L	-	-	1 (true)
CFG-UART1INPROT-SPARTN	0x10730005	L	-	-	1 (true)

**Table 108: CFG-UART1INPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	1 (true)
CFG-UART1OUTPROT-NMEA	0x10740002	L	-	-	1 (true)
CFG-UART1OUTPROT-RTCM3X	0x10740004	L	-	-	1 (true)

**Table 109: CFG-UART1OUTPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART2-BAUDRATE	0x40530001	U4	-	-	38400
CFG-UART2-STOPBITS	0x20530002	E1	-	-	1 (ONE)
CFG-UART2-DATABITS	0x20530003	E1	-	-	0 (EIGHT)
CFG-UART2-PARITY	0x20530004	E1	-	-	0 (NONE)
CFG-UART2-ENABLED	0x10530005	L	-	-	1 (true)

**Table 110: CFG-UART2 configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART2INPROT-UBX	0x10750001	L	-	-	1 (true)
CFG-UART2INPROT-NMEA	0x10750002	L	-	-	0 (false)
CFG-UART2INPROT-RTCM3X	0x10750004	L	-	-	1 (true)
CFG-UART2INPROT-SPARTN	0x10750005	L	-	-	1 (true)

**Table 111: CFG-UART2INPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART2OUTPROT-UBX	0x10760001	L	-	-	0 (false)
CFG-UART2OUTPROT-NMEA	0x10760002	L	-	-	0 (false)
CFG-UART2OUTPROT-RTCM3X	0x10760004	L	-	-	1 (true)

**Table 112: CFG-UART2OUTPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-USB-ENABLED	0x10650001	L	-	-	1 (true)
CFG-USB-SELFPOW	0x10650002	L	-	-	1 (true)
CFG-USB-VENDOR_ID	0x3065000a	U2	-	-	5446
CFG-USB-PRODUCT_ID	0x3065000b	U2	-	-	425
CFG-USB-POWER	0x3065000c	U2	-	mA	0
CFG-USB-VENDOR_STR0	0x5065000d	X8	-	-	0x4120786f6c622d75 ("u-blox A")
CFG-USB-VENDOR_STR1	0x5065000e	X8	-	-	0x2e77777202d2047 ("G - www.")
CFG-USB-VENDOR_STR2	0x5065000f	X8	-	-	0x632e786f6c622d75 ("u-blox.c")
CFG-USB-VENDOR_STR3	0x50650010	X8	-	-	0x00000000000006d6f ("om\0\0\0\0\0\0")

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-USB-PRODUCT_STR0	0x50650011	X8	-	-	0x4720786f6c622d75 ("u-blox G")
CFG-USB-PRODUCT_STR1	0x50650012	X8	-	-	0x656365722053534e ("NSS rece")
CFG-USB-PRODUCT_STR2	0x50650013	X8	-	-	0x0000000072657669 ("iver\0\0\0\0")
CFG-USB-PRODUCT_STR3	0x50650014	X8	-	-	0x0000000000000000
CFG-USB-SERIAL_NO_STR0	0x50650015	X8	-	-	0x0000000000000000
CFG-USB-SERIAL_NO_STR1	0x50650016	X8	-	-	0x0000000000000000
CFG-USB-SERIAL_NO_STR2	0x50650017	X8	-	-	0x0000000000000000
CFG-USB-SERIAL_NO_STR3	0x50650018	X8	-	-	0x0000000000000000

**Table 113: CFG-USB configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-USBINPROT-UBX	0x10770001	L	-	-	1 (true)
CFG-USBINPROT-NMEA	0x10770002	L	-	-	1 (true)
CFG-USBINPROT-RTCM3X	0x10770004	L	-	-	1 (true)
CFG-USBINPROT-SPARTN	0x10770005	L	-	-	1 (true)

**Table 114: CFG-USBINPROT configuration defaults**

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-USBOUTPROT-UBX	0x10780001	L	-	-	1 (true)
CFG-USBOUTPROT-NMEA	0x10780002	L	-	-	1 (true)
CFG-USBOUTPROT-RTCM3X	0x10780004	L	-	-	1 (true)

**Table 115: CFG-USBOUTPROT configuration defaults**

## Related documents

- [1] ZED-F9P-05B Data sheet, UBXDOC-963802114-12824
- [2] ZED-F9P integration manual, UBX-18010802
- [3] RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3
- [4] Radio Resource LCS Protocol (RRLP), (3GPP TS 44.031 version 11.0.0 Release 11)
- [5] NMEA 0183 Standard for Interfacing Marine Electronic Devices, Version 4.11, November 2018
- [6] Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.1, September 2021

 For regular updates to u-blox documentation and to receive product change notifications please register on our homepage (<https://www.u-blox.com>).

## Revision history

Revision	Date	Status / Comments
R01	01-Jul-2024	HPG 1.50 release

# Contact

## **u-blox AG**

Address:      Zürcherstrasse 68  
                  8800 Thalwil  
                  Switzerland

For further support and contact information, visit us at [www.u-blox.com/support](http://www.u-blox.com/support).